WD856U4SA**

Automatic Electric Washing Machine

user manual

Planet First 100% Recycled Paper

This manual is made with 100% recycled paper.

imagine the possibilities

Thank you for purchasing this Samsung product.

SAMSUNG

WD856U4SAGD-03223D-06_EN.indd 1 2015/6/1 11:50:33

features of your new samsung washing machine

Your new washing machine will change the way you feel about doing laundry. From its specialised Eco Bubble function to its energy efficiency, your new Samsung washing machine has all the benefits to make washing laundry as easy and pleasant as possible.

- **Eco Bubble Wash**

  Samsung's effective Eco Bubble delivers improved cleanliness with advanced fabric care. Eco Bubble allows detergent to distribute evenly and penetrate fabrics faster and deeper.

- **Less Noise & Vibration**

  This Samsung washer performs very quietly minimizing noise and vibration with smart control technology, which enables it to maintain the lowest possible vibration. Thus, the drum keeps perfect balance.

- **Washing and drying with one button**

  Enjoy convenient non stop washing and drying managing. 4 different special drying programs can be selected to perform the whole wash cycle including the drying cycle using one button.
  - Cupboard(standard program), Low temp drying, Iron, Time Drying (30min ~ 270mins) Those drying programs also can be operated independently of washing programs.

- **AIR Wash**

  The AIR Wash system deodorizes unpleasant smells and sanitizes the laundry that cannot be eliminated through a conventional washing system, a benefit of its unique air-washing mechanism.
  - Air-washable : Woolen coats, cotton/down jumpers, sweaters, suits, pillows, cushions, needlework dolls
  - Not applicable : leather, silk, velvet, electric blankets, stained laundry

- **Quick Wash**

  No time to waste! Our 15 minute Quick Wash will allow you to Wash and Run.Our Quick Wash programme can help with your busy life - now you can wash your favourite clothes (up to 2Kg) in just 15 minutes!

- **Eco Drum Clean**

  Using Ecol Drum Clean helps to keep washing machine clean even without any chemical detergent or bleach. Keep your drum clean and odorless with specialized cleaning program.

- **Baby Care**

  Your Samsung washing machine includes wash programs that add protection to the clothing of children with sensitive skin. These programs reduce skin irritation in children by minimizing detergent residue. In addition, these programs classify laundry into various types and the wash is performed according to the laundry characteristics so that children's clothes feel refreshingly clean whenever they are put on.

WD856U4SAGD-03223D-06_EN.indd 2 2015/6/1 11:50:33

- **Delay End**

  Delay a cycle for up to 19 hours in one-hour increments and increase the convenience of using your washing machine especially when you have to go out.

- **Child Lock**

  The Child Lock function ensures that curious little hands are kept out of your washing machine. This safety feature stops your children from playing with the operation of the washing machine, and alerts you when it is activated.

- **Digital Graphic Display**

  The Digital Graphic Display control panel is clear and easy to use for minimum fuss and hassle. And while it is easy to operate, the Digital Graphic Display enables you to make quick and accurate adjustments to your wash for excellent washing results.

- **Wide door**

  Extra wide door aperture for convenient viewing! Easily add and remove laundry, especially for large sized laundry items such as bedding, towels etc.

This manual contains important information on the installation, use, and care of your new Samsung washing machine. Refer to it for descriptions of the control panel, instructions on how to use the washing machine, and tips for making the most of its state-of-the-art features and functions. The "Troubleshooting and information codes" section on page 41 tells you what to do if something goes wrong with your new washing machine.

WD856U4SAGD-03223D-06_EN.indd 3 2015/6/1 11:50:33

safety information

The appliance is designed for home use only.

Congratulations on your new Samsung washer. This manual contains important information on the installation, use and care of your appliance. Please take time to read this manual to take full advantage of your washer's many benefits and features.

WHAT YOU NEED TO KNOW ABOUT SAFETY INSTRUCTIONS

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance and retain it at a safe place near the appliance for your future reference. Use this appliance only for its intended purpose as described in this instruction manual.

Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your washer.

Because these following operating instructions cover various models, the characteristics of your washer may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service center or find help and information online at www.samsung.com.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

What the icons and signs in this user manual mean:

⚠ **WARNING**	Hazards or unsafe practices that may result in **severe personal injury, death and/or property damage.**
⚠ **CAUTION**	Hazards or unsafe practices that may result in **personal injury and/or property damage**.
⚠ **CAUTION**	To reduce the risk of fire, explosion, electric shock, or personal injury when using your washer, follow these basic safety precautions:

	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions explicitly.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the service centre for help.
	Note

These warning signs are here to prevent injury to you and others.
Please follow them explicitly.
After reading this section, keep it in a safe place for future reference.

Read all instructions before using the appliance.

As with any equipment using electricity and moving parts, potential hazards exist. To safely operate this appliance, become familiar with its operation and exercise care when using it.

WD856U4SAGD-03223D-06_EN.indd 4 2015/6/1 11:50:34

WARNING: To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

Do not let children (or pets) play in or on your washing machine. The washing machine door does not open easily from the inside and children may be seriously injured if trapped inside.

This appliance is not to be used by persons (including children)with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

For use in Europe: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This appliance should be positioned so that the power plug, the water supply taps, and the drain pipes are accessible.

For appliances with ventilation openings in the base, that a carpet must not obstruct the openings.

The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

WD856U4SAGD-03223D-06_EN.indd 5 2015/6/1 11:50:34

safety information

The tumble dryer is not to be used if industrial chemicals have been used for cleaning.

The lint trap has to be cleaned frequently, if applicable.

Lint must not to be allowed to accumulate around the tumble dryer (not applicable for appliances intended to be vented to the exterior of the building).

Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.

Do not dry unwashed items in the tumble dryer.

Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.

Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.

Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.

The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.

Remove all objects from pockets such as lighters and matches.

WD856U4SAGD-03223D-06_EN.indd 6 2015/6/1 11:50:34

WARNING: Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.

For appliances with ventilation openings in the base, that a carpet must not obstruct the openings.

The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.

WD856U4SAGD-03223D-06_EN.indd 7 2015/6/1 11:50:34

safety information

⚠ WARNING SEVERE WARNING SIGNS FOR INSTALLATION

The installation of this appliance must be performed by a qualified technician or service company.

- Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

The appliance is heavy, take care upon lifting it

Plug the power cord into an AC 230V / 60Hz wall socket or higher and use the socket for this appliance only. In addition, do not use an extension cord.

- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Plug the power plug into the wall socket firmly.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.

Plug the power plug into the wall socket in the right direction so that the cord runs towards the floor.

- If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.

- If a child places a bag over its head, it may result in suffocation.

When the appliance or power plug or power cord is damaged, contact your nearest service centre.

This appliance must be properly grounded.
Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the product
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national codes.

Do not install this appliance near a heater, inflammable material.
Do not install this appliance in a humid, oily or dusty location, in a location exposed to direct sunlight and water (rain drops).

Do not install this appliance in a location of low temperature

- Frost may cause tubes to burst

Do not install this appliance in a location where gas may leak.

- This may result in electric shock or fire.

Do not use an electric transformer.

- It may result in electric shock or fire.

Do not use a damaged power plug, damaged power cord or loose wall socket.

- This may result in electric shock or fire.

Do not pull or excessively bend the power cord.
Do not twist or tie the power cord.

WD856U4SAGD-03223D-06_EN.indd 8 2015/6/1 11:50:34

Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

Do not pull the power cord, when unplugging the power plug.

- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

Do not lay the power cord and tubes where you may fall over them.

CAUTION CAUTION SIGNS FOR INSTALLATION

This appliance should be positioned in such a way that it is accessible to the power plug.

- Failure to do so may result in electric shock or fire due to electric leakage.

Install your appliance on a level and hard floor that can support its weight.

- Failure to do so may result in abnormal vibrations, moves, noise, or problems with the product.

WARNING SEVERE WARNING SIGNS FOR USING

If the appliance is flooded, turn off the water & power supply immediately and contact your nearest service centre.

- Do not touch the power plug with wet hands
- Failure to do so may cause electric shock

If the appliance generates a strange noise, a burning smell or smoke, unplug the power plug immediately and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Do not let children play in or on the washer. In addition, when disposing of the appliance, remove the washer door lever.

- If trapped inside, the child may become trapped and suffocate to death.

Make sure to remove the packaging (sponge, styrofoam) attached to the bottom of the washer before using it.

WD856U4SAGD-03223D-06_EN.indd 9 2015/6/1 11:50:34

safety information

Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other flammable or explosive substances.

- This may result in electric shock, fire or an explosion.

Do not open the washer door by force while it is operating (high-temperature washing/ drying/spinning).

- Water flowing out of the washer may result in burns or cause the floor to be slippery.

This may result in injury.

- Opening the door by force may result in damage to the product or injury.

Do not insert your hand under the washer.

- This may result in injury.

Do not touch the power plug with wet hands.

- This may result in electric shock.

Do not turn the appliance off by unplugging the power plug while an operation is in progress.

- Plugging the power plug into the wall socket again may cause a spark and result in electric shock or fire.

Do not let children or infirm persons use this washer unsupervised. Do not let children climb in the appliance

- Failure to do so may result in electric shock, burns or injury.

Do not insert your hand or a metal object under the washer while it is operating.

- This may result in injury.

Do not unplug the appliance by pulling at the power cord, always grip plug firmly and pull straight out from the outlet.

- Damage to the cord may cause short-circuit, fire and/or electric shock

---

Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use any fuse (such as cooper, steel wire, etc.) other than the standard fuse.
- When repairing or reinstalling the appliance is required, contact your nearest service centre.
- Failure to do so may result in electric shock, fire, problems with the product, or injury.

If the water supply hose comes loose from the Water tap and floods the appliance, unplug the power plug.

- Failure to do so may result in electric shock or fire.

Unplug the power plug when the appliance is not being used for long periods of time or during a thunder/lightning storm.

- Failure to do so may result in electric shock or fire.

WD856U4SAGD-03223D-06_EN.indd 10 2015/6/1 11:50:34

CAUTION SIGNS FOR USING

When the washer is contaminated by a foreign substance such as detergent, dirt, food waste, etc., unplug the power plug and clean the washer using a damp and soft cloth.
- Failure to do so may result in discolouration, deformation, damage or rust.

The front glass may be broken by a strong impact. Take care when using the washer.
- When the glass is broken, it may result in injury.

After a water supply failure or when reconnecting the water supply hose, open the Water Tap slowly.
Open the Water Tap slowly after a long period of non-use.
- The air pressure in the water supply hose or the water pipe may result in damage to a part or in water leakage.

If a drain error occurs during an operation, check if there is a draining problem.
- If the washer is used when it is flooded because of a draining problem, it may result in electric shock or fire due to electric leakage.

Insert the laundry into the washer completely so that laundry does not get caught in the door.
- If laundry gets caught in the door, it may result in damage to the laundry or the washer, or result in water leakage.

Ensure that the Water Tap is turned off when the washer is not being used.
- Ensure that the screw on the water supply hose connector is properly tightened.
- Failure to do so may result in property damage or injury.

Check if the rubber seal is not contaminated by foreign substances (waste, thread, etc).
- If the door is not closed completely, it may result in water leakage.

Open the Water Tap and check if the water supply hose connector is firmly tightened and that there is no water leaking before using the product.
- If the screws or the water supply hose connector are loose, it may result in water leakage.

To reduce the risk of fire or explosion:
- Under certain conditions, hydrogen gas may be produced in a hot water system such as your hot water heater that has not been used for two weeks or more. HYDROGEN GAS IS EXPLOSIVE. If your hot water system has not been used for two weeks or more, turn on all hot water taps in your home, and let the water flow for several minutes before using your washing machine. This will release any hydrogen gas build–up. Since hydrogen gas is flammable, do not smoke or light an open flame during this time. Ventilate immediately without touching the power plug if there is a gas leak.

The product you have purchased is designed for domestic use only.

The use for business purposes qualifies as product misuse.
In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from such misuse.

WD856U4SAGD-03223D-06_EN.indd 11 2015/6/1 11:50:34

safety information

Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.
- This may result in electric shock, fire, problems with the product, or injury.

Do not spray volatile material such as insecticide onto the surface of the appliance.
- As well as being harmful to humans, it may also result in electric shock, fire or problems with the product.

Do not place an object that generates a electromagnetic field near the washer.
- This may result in injury due to a malfunction.

Since the water drained during a high-temperature wash or drying cycle is hot, do not touch the water.
- This may result in burns or injury.

Do not wash, spin or dry water-proof seats, mats or clothing (*) unless your appliance has a special program for washing these items.
- Do not wash thick, hard mats even if the washer mark is on the care label.
- This may result in injury or damage to the washer, walls, floor or clothing due to abnormal vibrations.

* Woollen bedding, rain covers, fishing vests, ski pants, sleeping bags, diaper covers, sweat suits, and bicycle, motor cycle, car covers, etc.

Do not operate the washer when the detergent box is removed.
- This may result in electric shock or injury due to water leakage.

Do not touch the inside of the tub during or just after drying as it is hot.
- This may result in burns.

Do not insert your hand into the detergent box after opening it.
- This may result in injury as your hand may be caught by the detergent input device. Do not place any objects (such as shoes, food waste, animals) other than laundry into the washer.
- This may result in damage to the washer, or injury and death in the case of pets due to the abnormal vibrations.

Do not press the buttons using sharp objects such as pins, knifes, fingernails, etc.
- This may result in electric shock or injury.

Do not wash laundry contaminated by oils, creams or lotions usually found in skincare shops or massage clinics.
- This may result in the rubber seal becoming deformed and water leakage.

Do not leave metal objects such as a safety pin or hair pin, or bleach in the tub for long periods of time.
- This may cause the tub to rust.
- If rust starts appearing on the surface of the tub, apply a cleansing agent (neutral) to the surface and use a sponge to clean it. Never use a metal brush.

Do not use dry cleaning detergent directly and do not wash, rinse, or spin laundry contaminated by dry cleaning detergent.
- This may result in spontaneous combustion or ignition due to the heat of the oxidation of the oil.

Do not use hot water from water cooling/heating devices.
- This may result in problems with the washer.

WD856U4SAGD-03223D-06_EN.indd 12 2015/6/1 11:50:34

Do not use natural hand-washing soap for the washer.

- If it hardens and accumulates inside the washer, it may result in problems with the product, discolouration, rust or bad odors.

Do not wash large laundry items such as bedding in the washing net.

- Place socks and brassieres into the washing net and wash them with the other laundry.
- Failure to do so may result in injury due to abnormal vibrations.

Do not use hardened detergent.

- If it accumulates inside the washer, it may result in water leakage.

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Make sure that the pockets of all clothing to be washed are empty.

- Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Do not wash clothing with large buckles, buttons, or other heavy metal.

⚠ WARNING SEVERE WARNING SIGNS FOR CLEANING

Do not clean the appliance by spraying water directly onto it.
Do not use the strong acid cleaning agent.
Do not use benzene, thinner or alcohol to clean the appliance.

- This may result in discolouration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.

- Failure to do so may result in electric shock or fire.

WD856U4SAGD-03223D-06_EN.indd 13 2015/6/1 11:50:34

contents

SETTING UP YOUR WASHING MACHINE 15

15 Checking the parts
16 Meeting installation requirements
16 Electrical supply and grounding
16 Water Supply
17 Drain
17 Flooring
17 Surrounding temperature
17 Alcove or closet installation
17 Installing your washing machine

WASHING A LOAD OF LAUNDRY 23

23 Washing for the first time
23 Basic instructions
24 Using the control panel
27 Child lock
27 Sound off
27 Delay end
28 Drain Only Function
28 My cycle
29 Eco Bubble
30 AIR Wash
31 Using dry course
32 Washing clothes using the cycle selector
33 Washing clothes manually
33 Laundry guidelines
34 Detergent and additives information
34 Which detergent to use
35 Detergent drawer
35 Liquid Detergent (Selected models)

CLEANING AND MAINTAINING YOUR WASHING MACHINE 36

36 Eco Drum Clean
37 Draining the washing machine in an emergency
38 Cleaning the debris filter
38 Cleaning the exterior
39 Cleaning the detergent drawer and drawer recess
39 Cleaning the water hose mesh filter
40 Repairing a frozen washing machine
40 Storing your washing machine

TROUBLESHOOTING AND INFORMATION CODES 41

41 Check these points if your washing machine...
42 Information codes

CYCLE CHART 43

43 Cycle chart

APPENDIX 44

44 Fabric care chart
44 Protecting the environment
45 Specifications

WD856U4SAGD-03223D-06_EN.indd 14 2015/6/1 11:50:34

setting up your washing machine

Be sure to have your installer follow these instructions closely so that your new washing machine works properly and so that you're not at risk of injury when doing laundry.

CHECKING THE PARTS

Carefully unpack your washing machine, and make sure you've received all of the parts shown below. If your washing machine was damaged during shipping, or if you do not have all of the parts, contact Samsung Customer Service or your Samsung dealer.

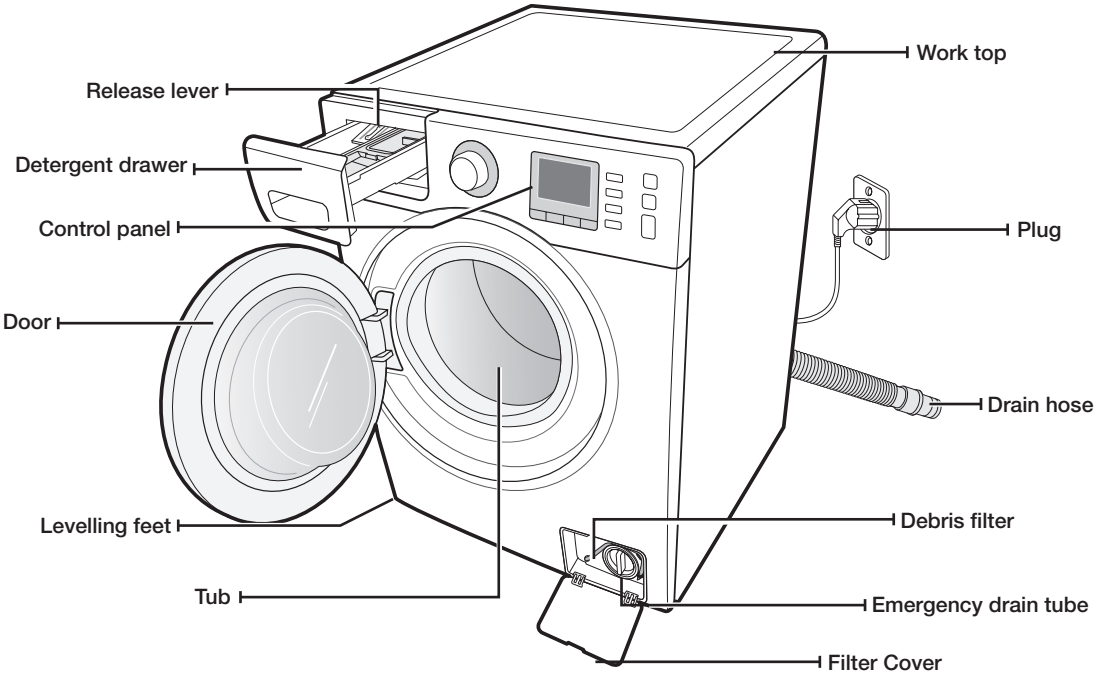

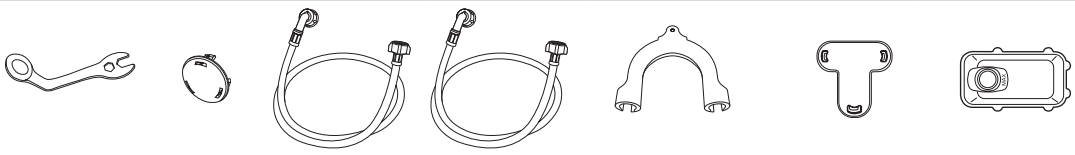

Spanner	Bolt hole covers	Cold	Hot (Selected model)	Hose guide	Cap fixer (Selected model)	Liquid detergent box(Selected model)
		Water supply hose				

*** Bolt hole covers** : The number of bolt hole covers depends on the model (3~5 covers).

WD856U4SAGD-03223D-06_EN.indd 15 2015/6/1 11:50:35

setting up your washing machine

MEETING INSTALLATION REQUIREMENTS

Electrical supply and grounding

WARNING Never use an extension cord.
Use only the power cord that comes with your washing machine.

When preparing for installation, ensure that your power supply offers:
- AC 230V / 60Hz fuse or circuit breaker
- Individual branch circuit serving only your washing machine

Your washing machine must be grounded. If your washing machine malfunctions or breaks down, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current.
Your washing machine comes with a power cord having a three-prong grounding plug for use in a properly installed and grounded outlet.

Never connect the ground wire to plastic plumbing lines, gas lines, or hot water pipes.

Improperly connecting the equipment-grounding conductor can result in electric shock. Check with a qualified electrician or serviceman if you are unsure if the washing machine is properly grounded. Do not modify the plug provided with the washing machine. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

Water Supply

Your washing machine will fill properly when your water pressure is 50 kPa ~ 800 kPa. Water pressure less than 50 kPa may cause water valve failure, not allowing the water valve to shut off completely. Or, it may take the washing machine longer to fill than what the controls allow, resulting in your washing machine turning off. (A fill-time limit, designed to prevent overflows/ flooding if an internal hose becomes loose, is built into the controls.)

The water taps must be within 120cm of the back of your washing machine for the provided inlet hoses provided to reach your washing machine.

Most plumbing supply stores sell inlet hoses of various lengths up to 305 cm long.

You can reduce the risk of leaks and water damage by:
- Making water taps easily accessible.
- Turning off taps when the washing machine is not in use.
- Periodically checking for leaks at water inlet hose fittings.

WARNING Before using your washing machine for the first time, check all connections at the water valve and taps for leaks.

WD856U4SAGD-03223D-06_EN.indd 16 2015/6/1 11:50:35

Drain

Samsung recommends a standpipe height of 65cm. The drain hose must be routed through the drain hose clip to the standpipe. The standpipe must be large enough to accept the outside diameter of the drain hose. The drain hose is attached at the factory.

Flooring

For best performance, your washing machine must be installed on a solidly constructed floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced loads. Carpeting and soft tile surfaces are contributing factors to vibrations and the tendency for your washing machine to move slightly during the spin cycle.

Never install your washing machine on a platform or poorly supported structure.

Surrounding temperature

Do not install your washing machine in areas where water may freeze, since your washing machine always retains some water in its water valve, pump, and hose areas. Frozen water in the lines can cause damage to belts, the pump, and other components.

Alcove or closet installation

To operate safely and properly, your new washing machine requires minimum clearances of:

Sides – 25 mm	Rear – 50 mm
Top – 25 mm	Front – 465 mm

If both the washing machine and a dryer are installed together, the front of the alcove or closet must have at least 465 mm unobstructed air opening. Your washing machine alone does not require a specific air opening.

INSTALLING YOUR WASHING MACHINE

STEP 1

Selecting a location

Before you install the washing machine, make sure the location:

- Has a hard, level surface without carpeting or flooring that may obstruct ventilation
- Is away from direct sunlight
- Has adequate ventilation
- Will not be freezing (below 0 ˚C)
- Is away from heat sources such as oil or gas
- Has enough space so that the washing machine doesn't stand on its power cord

WD856U4SAGD-03223D-06_EN.indd 17 2015/6/1 11:50:35

setting up your washing machine

STEP 2
Removing the shipping bolts

Before installing the washing machine, you must remove all shipping bolts from the back of the unit.

1. Loosen all the bolts with the supplied wrench.

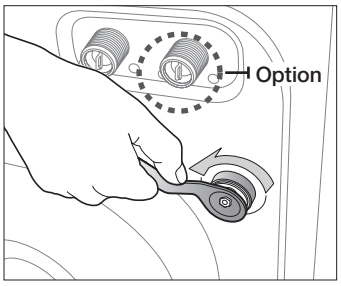

2. Hold the bolt with the spanner and pull it through the wide section of the hole. Repeat for each bolt.

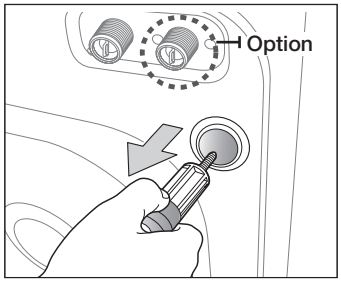

3. Fill the holes with the supplied plastic covers.

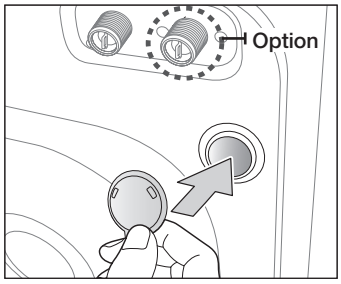

4. Store the shipping bolts away safely in case you have to move the washing machine in the future.

WARNING Packaging materials can be dangerous to children; keep all packaging material (plastic bags, polystyrene, etc.) well out of the reach of children.

Insert the cap fixer, (one of the accessories in the vinyl pack), into the hole from which you removed the power cord at the back of the product.

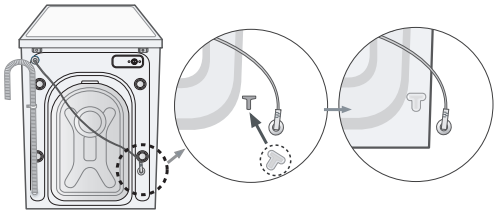

WD856U4SAGD-03223D-06_EN.indd 18 2015/6/1 11:50:35

STEP 3
Adjusting the Levelling feet

When installing your washing machine, ensure that the power plug, the water supply and the drain are easily accessible.

1. Slide the washing machine into position.
2. Level your washing machine by turning the levelling feet in and out as necessary by hand.

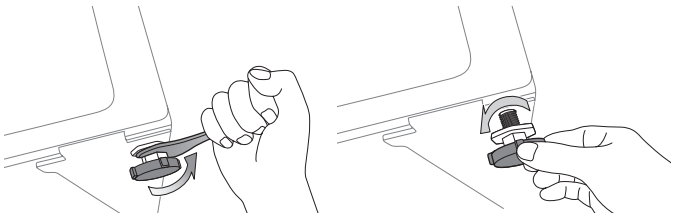

3. When your washing machine is level, tighten the nuts using the wrench supplied with your washing machine.

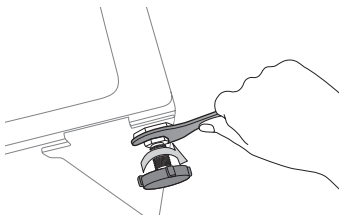

STEP 4
Connecting the water and drain

Connecting the water supply hose

1. Take the L-shaped arm fitting for the cold water supply hose and connect it to the cold water supply intake on the back of the machine. Tighten by hand.

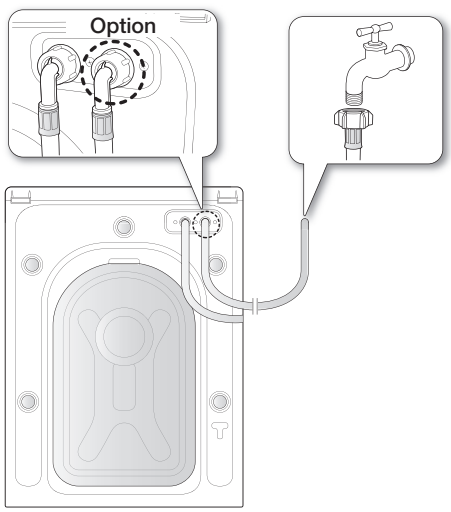

The water supply hose must be connected to the washing machine at one end and to the water tap at the other. Do not stretch the water supply hose. If the hose is too short, replace the hose with a longer, high pressure hose.

2. Connect the other end of the cold water supply hose to your sink's cold water tap and tighten it by hand. If necessary, you can reposition the water supply hose at the washing machine end by loosening the fitting, rotating the hose, and retightening the fitting.

For selected models with an additional hot water intake:

1. Take the red L-shaped arm fitting for the hot water supply hose and connect it to the hot water supply intake on the back of the machine. Tighten by hand.
2. Connect the other end of the hot water supply hose to your sink's hot water tap and tighten it by hand.
3. Use a Y-piece if you only want to use cold water.

WD856U4SAGD-03223D-06_EN.indd 19 2015/6/1 11:50:36

setting up your washing machine

Connecting the water supply hose

1. Remove the adaptor from the water supply hose.

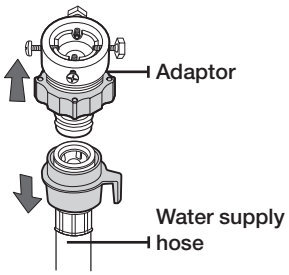

2. First, using a '+' type screwdriver, loosen the four screws on the adaptor. Next, take the adaptor and turn part (2) following the arrow until there is a 5 mm gap.

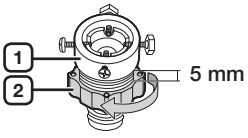

3. Connect the adaptor to the water tap by tightening the screws firmly while lifting the adaptor upwards.
Turn part (2) following the arrow and connect (1) and (2).

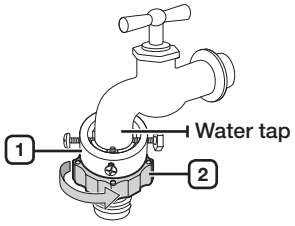

4. Connect the water supply hose to the adaptor. When you release part (3), the hose automatically connects to the adaptor making a 'click' sound.

After you have connected the water supply hose to the adaptor, ensure that it is connected correctly by pulling the water supply hose downwards.

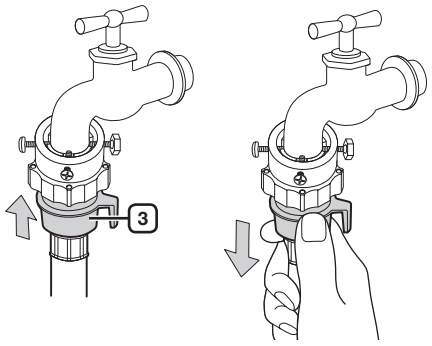

5. Connect the other end of the water supply hose to the inlet water valve at the rear of the washing machine. Screw the hose clockwise all the way in.

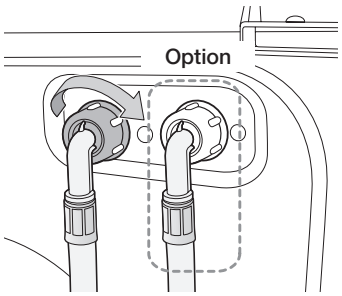

WD856U4SAGD-03223D-06_EN.indd 20 2015/6/1 11:50:37

6. Turn on the water supply and ensure that no water leaks from the water valve, tap or adaptor. If there is a water leaks, repeat the previous steps.

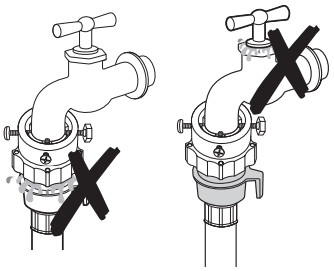

WARNING Do not use your washing machine if there is a water leak. This may cause electric shock or injury.

- If the water tap has a screw type tap, connect the water supply hose to the tap as shown.

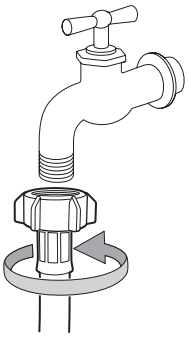

Use the most conventional type of tap for the water supply. In case the tap is square or too big, remove the spacing ring before inserting the tap into the adaptor.

Connecting the Aqua Hose (Selected models)

The Aqua Hose was invented for perfect leakage protection. It is attached to the water supply hose and automatically cuts off the water flow if the hose is damaged. It also displays a warning indicator.

- Connect the water supply hose to the tap as shown.

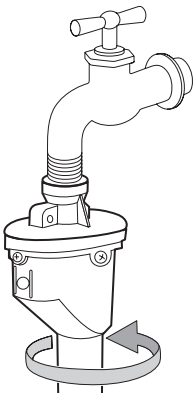

WD856U4SAGD-03223D-06_EN.indd 21 2015/6/1 11:50:37

setting up your washing machine

Connecting the drain hose

The end of the drain hose can be positioned in three ways:

1. Over the edge of a wash basin: The drain hose must be placed at a height of between 60 and 90 cm. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the tap with a piece of string to prevent the drain hose from moving.

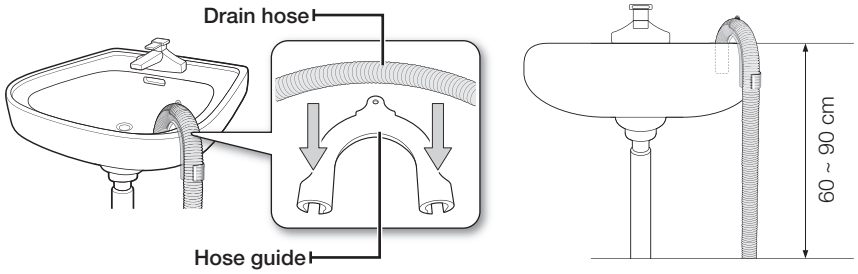

2. In a sink drain pipe branch: The drain pipe branch must be above the sink siphon so that the end of the hose is at least 60 cm above the ground.
3. In a drain pipe: We recommend using a 65 cm high vertical pipe; it must be no shorter than 60 cm and no longer than 90 cm.

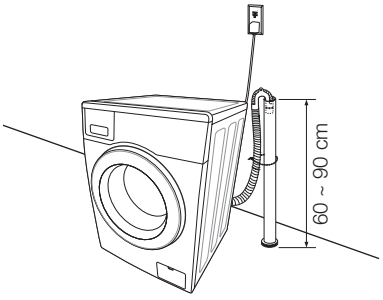

The standpipe drain requires;
- minimum diameter 5 cm.
- minimum carry-away capacity 60 liter per minute.

STEP 5
Powering your washing machine

Plug the power cord into a wall sockets, an AC 230V / 60Hz approved electrical outlet protected by a fuse or circuit breaker. (For more information on electrical and grounding requirements, see page 16.)

Test run
Make sure that you install your washing machine correctly by running the **Rinse+Spin** cycle after the installation is complete.

STEP 6
Calibration mode

Samsung washing machine detects the laundry weight automatically. For more accurate weight detection, please run Calibration Mode after the installation. Calibration mode is done by following the steps below.

1. Remove laundry or any contents in the machine and turn off the machine.
2. Press the **Temp.** button and **Delay End** button simultaneously, and press the **Power** button in addition. Then the machine turns on and enter “Calibration mode”. The “CLB” message appears.
3. Press the **Start/Pause** button to activate “Calibration Mode”.
4. The drum rotates clockwise and counterclockwise approximately for 3 minutes.
5. When “Calibration Mode” is finished, “END/0(En)” appears on the display, and the machine automatically turns off. The washing machine is now ready for use.

WD856U4SAGD-03223D-06_EN.indd 22 2015/6/1 11:50:37

washing a load of laundry

With your new Samsung washing machine, the hardest part of doing laundry will be deciding which load to wash first.

WASHING FOR THE FIRST TIME

Before washing laundry for the first time, you must run a complete empty cycle (i.e. no laundry).

1. Press the **Power** button.
2. Add a little detergent to the detergent compartment Ⅱ in the detergent drawer.
3. Turn on the water supply to the washing machine.
4. Press the **Start/Pause** button.

This will remove any water that might be left over in the machine from the manufacturer's test run.

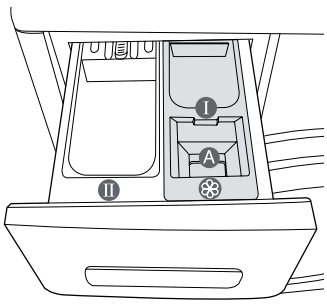

Compartment Ⅰ: Detergent for prewash, or starch.
Compartment Ⅱ: Detergent for the main wash, water softener, pre-soaking agent, bleach and stain removal product.

To use liquid detergent, use the liquid detergent box (refer to page 35 of the manual for the corresponding model). Do not add powdered detergent into the liquid detergent box.

Compartment ❀: Additives, e.g. fabric softener or former (fill no higher than lower edge (MAX) of "A")

BASIC INSTRUCTIONS

1. Load your laundry into the washing machine.

WARNING Do not overload the washing machine. To determine the load capacity for each type of laundry, refer to the chart on page 33-34.

- Make sure that laundry is not caught in the door, as this may cause a water leak.
- Washing detergent may remain in the front rubber part of the washer after a wash cycle. Remove any remaining detergent, as they may cause a water leak.
- Do not touch the door glass while your washing machine is running or it may be hot.
- Do not open the detergent drawer or the debris filter while your washing machine is running or you might be exposed to hot water or steam.
- Do not wash water-proofed items in normal cycle except outdoor care program.

2. Close the door until it latches.
3. Turn the power on.
4. Add detergent and additives to the dispenser drawer.
5. Select the appropriate cycle and options for the load.
   The Wash Indicator light will illuminate and the estimated cycle time will appear in the display.
6. Press the **Start/Pause** button.

WD856U4SAGD-03223D-06_EN.indd 23 2015/6/1 11:50:38

washing a load of laundry

USING THE CONTROL PANEL

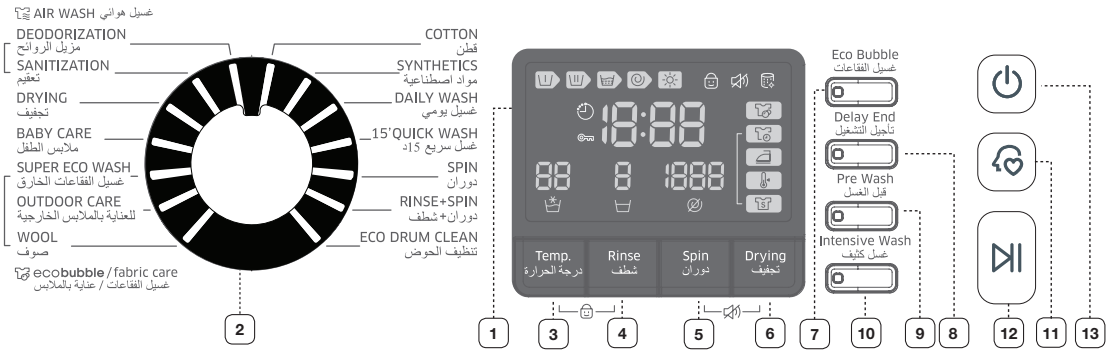

1 DIGITAL GRAPHIC DISPLAY	Displays the remaining wash cycle time, all cycle information, and error messages.
2 CYCLE SELECTOR	Select the tumble pattern and spin speed for the cycle. For detailed information, refer to “Washing clothes using the cycle selector”. (see page 32) **COTTON** - For average or lightly soiled cottons, bed linen, table linen, underwear, towels, shirts, etc. **SYNTHETICS** - For averagely or lightly soiled blouses, shirts, etc., made of polyester (diolen, trevira), polyamide (perlon, nylon) or other similar blends. **DAILY WASH** - Use for everyday items such as underwear and shirts. **15’ QUICK WASH** - For lightly soiled garments and less than 2kg laundry that you require quickly. • The values(15’ minutes) can vary from the indicated values depending on water pressure, water hardness, water inlet temperature, room temperature, type and amount of washing and degree of soiling, utilized detergent, fluctuation in the electricity supply and extra options selected. • Add only a small amount of detergent for a small amount of laundry (less than 2kg) for the 15’ Quick Wash course, because if you add too much detergent, detergent may remain after the wash. **SPIN** - Performs an additional spin cycle to remove more water. **RINSE + SPIN** - Use for a load that needs rinsing only or to add rinse-added fabric softener to a load. **ECO DRUM CLEAN** - Use for drum cleaning. It cleanses dirt and bacteria of drum. Regular use (after every 40 washes) is recommended. No detergent or bleach needed. **AIR WASH** - This course is useful for removing bad odors. Turning the Cycle Selector cycles through the following operating modes. (Deodorization → Sanitization) • **DEODORIZATION** - Reduces bad smells from the laundry • **SANITIZATION** - Deodorize and sanitize the laundry by stronger AIR Wash action with higher temp. **DRYING** - Select to dry laundry automatically by detecting the amount and weight of the laundry.

WD856U4SAGD-03223D-06_EN.indd 24 2015/6/1 11:50:38

	BABY CARE - High temperature wash and extra rinses ensure that no washing powder remains to mark your thin clothes. **SUPER ECO WASH** - Low temperature Eco Bubble ensures that you achieve perfect wash results while allowing effective energy saving. **OUTDOOR CARE** - Use for outdoor wear such as mountain clothes, skiwear, and sports wear. Fabrics include functional technology finishes and fibers such as spandex, stretch, and micro-fiber. **WOOL** - Only for machine-washable wool. A load should be less than 2.0 kg. • The wool course washes the laundry using gentle cradling actions.During the wash, the gentle cradling and soaking actions are continued to protect the wool fibers from shrinkage / distortion and for a super gentle clean. This stop operation is not a problem. • Neutral detergent is recommended for wool course, for improved washing results and for improved care of the wool fibers. **DRAIN ONLY** - Turn the Cycle Selector to the Spin position, press the Spin button repeatedly until "No spin(⊘)" light comes on, and then press the Start/Pause button to drain the water.
3 **TEMPERATURE SELECTION BUTTON**	Press this button repeatedly to cycle through the available water temperature options: (: Cold Water , 20 ˚C, 30 ˚C, 40 ˚C , 60 ˚C and 95 ˚C).
4 **RINSE SELECTION BUTTON**	Press this button to add additional rinse cycles. The maximum number of rinse cycles is five.
5 **SPIN SELECTION BUTTON**	Press the button repeatedly to cycle through the available speeds for the spin cycle. WD856U4 | \, ⊘, 400, 800, 1200, 1400 rpm "No spin ⊘" - The laundry remains in the drum and no spin cycle is performed after the final drain. "Rinse Hold \" - The laundry remains soaking in the final rinse water. Before the laundry can be unloaded, either a Drain or Spin cycle must be performed.
6 **DRYING BUTTON**	Pressing the button cycles through the following options. Cup Board → Low Temp → Iron → Time Dry (30min. → 1:00 h → 1:30 h → 2:00 h → 2:30 h → 3:00 h → 3:30 h → 4:00 h → 4:30 h) → Cup Board **Cup Board** - Use this cycle to dry loads such as cotton, underwear, and linen. **Low Temp** - This cycle protects heat-sensitive items at a low drying temperature. **Iron** - Finishes the dry cycle in a moist state appropriate for Ironing. **Time Dry** -Dry the laundry for the specified period of time. • You must avoid washing laundry that can't safely be dried as it may be deformed even at low temperatures. • The Cup Board, Low Temp, Iron and Time Dry options detect the weight of the laundry in order to display an accurate drying time and dry them more completely. • The drying conditions may differ depending on the type and the amount of laundry. • Drying is not available for Eco Drum Clean, AIR Wash and Wool courses.

WD856U4SAGD-03223D-06_EN.indd 25 2015/6/1 11:50:40

washing a load of laundry

7 **ECO BUBBLE SELECTION BUTTON**	Eco Bubble selection is turned on as a default. Press the Eco Bubble option button once to deselect and the Bubble Generator OFF (shown on the panel), press it again to turn the function back ON. • Some wash cycles must have Eco Bubble option ON (will show on the panel, and the Generator will turn on automatically). • Other wash cycles do not need this option and automatically turn the Generator OFF. • On many cycles, you can manually adjust this option, which will visibly affect wash time on the panel to achieve results (please see page 29 for more information).
8 **DELAY END SELECTION BUTTON**	Press this button repeatedly to cycle through the available Delay End options (from 3 hours to 19 hours in one hour increments). The hour displayed indicates the time when the wash cycle will be finished.
9 **PREWASH SELECTION BUTTON**	Press this button to select pre-wash. Pre-wash is only available with: COTTON, SYNTHETICS, DAILY WASH, BABY CARE, SUPER ECO WASH.
10 **INTENSIVE WASH SELECTION BUTTON**	Press this button when the laundry is heavily soiled and needs to be washed intensively. The cycle time will be increased if the intensive wash is on.
11 **MY CYCLE SELECTION BUTTON**	Choose your favorite cycle including temperature, spin, soil level, option, etc.
12 **START/PAUSE SELECTION BUTTON**	Press to pause and restart a cycle.
13 **POWER BUTTON**	Press it once to turn your washing machine on, press it again to turn your washing machine off. If the washing machine is left on for more than 10 minutes without any buttons being touched, the power automatically turns off.

WD856U4SAGD-03223D-06_EN.indd 26 2015/6/1 11:50:40

Child lock

The Child Lock function allows you to lock the buttons so that the wash cycle you've chosen can't be changed.

Activating/Deactivating

If you want to activate or deactivate the Child Lock function, press the **Temp.** and **Rinse** buttons at the same time for 3 seconds. "Child Lock" will be lit when this feature is activated.

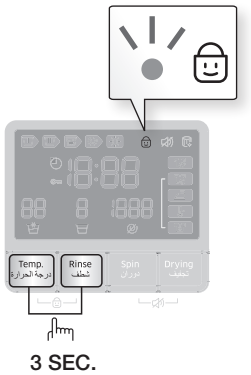

When the Child Lock function is activated, only the **Power** button works. The Child Lock function remains on even after the power is turned on and off or after the disconnecting and reconnecting the power cord.

Sound off

The Sound Off function can be selected during all courses. When this function is selected, sound is turned off for all courses. Even if the power is turned on and off repeatedly, the setting is retained.

Activating/Deactivating

If you want to activate or deactivate the Sound Off function, press the **Spin** and **Drying** buttons at the same time for 3 seconds. The "Sound Off" will be lit when this feature is activated.

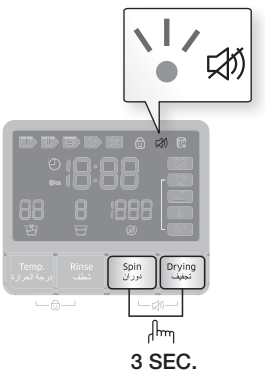

Delay end

You can set the washing machine to finish your wash automatically at a later time, choosing a delay of between 3 to 19 hours (in 1 hour increments). The hour displayed indicates the time at which the wash will be finished.

1. Manually or automatically set your washing machine according to the type of laundry you are washing.
2. Press the **Delay End** button repeatedly until the delay time is set.
3. Press the **Start/Pause** button. The "Delay End" indicator will be lit, and the clock will begin counting down until it reaches the set time.
4. To cancel a Delay End function, press the **Power** button and then turn the washing machine on again.

WD856U4SAGD-03223D-06_EN.indd 27 2015/6/1 11:50:45

Drain Only Function

When you want just drain water from washing machine, follow directions below.

1. Press the **Power** button.
2. Turn the Cycle Selector to the Spin position.
3. Press the **Spin** button repeatedly until “No spin(⌀)” light comes on.
4. Press the **Start/Pause** button.

My cycle

Allows you to activate your custom wash (temperature, spin, soil level, etc.) with one button convenience.
By pushing the **My Cycle** button, press the My Cycle button to load and use the saved My Cycle options. The chosen course and option lights will flicker.
You can set all options as follows in the My Cycle mode.

1. Turn the water supply on.
2. Press the **Power** button.
3. Select cycle using the **Cycle Selector**.
4. After cycle selection, set each option.

See the “Cycle Chart” on page 43 for available option settings with each cycle.

5. You can then store the selected cycle and options by pressing and holding the **My Cycle** button for longer than 3 seconds in My Cycle mode. The cycle and options you select will be displayed the next time you choose the My Cycle function.

You can change the My Cycle settings by repeating the same process above.
The last used setting will be displayed the next time you choose the My Cycle function.

If you press My Cycle and release it within 3 seconds, the previously saved course and options appear. If you press and hold My Cycle for 3 second or longer, the currently set course and options are saved and the LED blinks for 3 seconds.

WD856U4SAGD-03223D-06_EN.indd 28 2015/6/1 11:50:46

Eco Bubble

Eco Bubble allows detergent to distribute evenly and penetrate fabrics faster and deeper.

Course	Bubble function	Canceling the bubble function
COTTON, SYNTHETICS, DAILY WASH , 15' QUICK WASH	Available	Available
SUPER ECO WASH, OUTDOOR CARE, BABY CARE, Wool		Not available

- A different bubble function may be applied depending the course.

Eco Bubble selection is default. Press it once to deselect bubble option, press it again to select bubble option.

1. Open the door, place the laundry inside the wash tub and close the door.
2. Press the **Power** button.
3. Select a function.
4. Place the appropriate amount of detergent and fabric softener into the corresponding compartments depending on the amount of laundry and close the detergent drawer.
   - Add the appropriate amount of detergent into the detergent compartment Ⅱ, and add the fabric softener to softener compartment ❀ just under the fiber softener base line (MAX) of “A”)
   - When the Prewash course is selected, add detergent into the prewash compartment Ⅰ as well.
   - To use liquid detergent, leave the liquid detergent box in the drawer(refer to “Liquid Detergent” section on page 35).

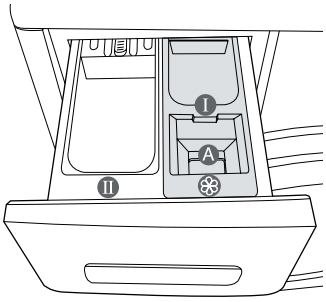

Do not add powdered detergent into the liquid detergent box.

5. Press the Start/Pause button.
   - Press the **Start/Pause** button to start the wash.
   - The amount of the laundry is automatically detected and the laundry is washed.
   - Once a washing machine operation begins, you cannot add or select the bubble function.

- Enough bubbles are generated with the specified amount of detergent.
- Please clean the Debris filter frequently. Periodic cleaning helps generate sufficient bubbles.
- Depending on the detergent and the laundry, the bubbles may be absorbed and seem like a small quantity.
- Although bubbles are generated once the wash begins, it may take several minutes for users to see them.

WD856U4SAGD-03223D-06_EN.indd 29 2015/6/1 11:50:46

AIR WASH

AIR Wash can refresh laundry without using water owing to its powerful airing system. Clothing that can be refreshed includes woolen coats, cotton jumpers, sweaters and suits. [Two items or less (less than 1 kg)]

1. Open the door, place the laundry into the washing machine and close the door.
2. Press the **Power** button.
3. Select **AIR WASH** by turning the **Cycle Selector**.

MODE	CYCLE TIME
DEODORIZATION	29 min
SANITIZATION	59 min

- When one of these options has been selected, no other button can be selected and you can only select the delay end time from between 3:00 – 19:00.

4. Close the door and press the **Start/Pause** button.

- When there is water in the tub, **AIR WASH** cannot be worked. Drain the water and select **AIR WASH**.
- Press the **Start/Pause** or **Power** button to remove the laundry.
- Fragrance or dryer sheets can be used with AIR Wash programs to add fragrance to your refreshed laundry (one sheet per one or two items).

Avoid AIR Wash the following clothes:

- Sensitive clothes made of leather, mink, fur, silk, etc.
- Underwear trimmed with lace, ‘glued’ doll cushions, and dress suits may have their decorations loosened.
- Clothes trimmed with buttons can cause them to break.
- Starchy clothes can become deformed.
- Hard bedding such as a wooden pillows (neck-rest)
  - Pillows or blankets filled with plastic or starch rather than cotton
  - Electric blankets
- Furry blankets
- Bulky blankets
- Latex pillow

WD856U4SAGD-03223D-06_EN.indd 30 2015/6/1 11:50:46

USING DRY COURSE

Refer to the label of drying capacity and be sure to put in the clothes to the lower level than the marked line for the dried clothes of 6.0kg.

1. Open the door, put in the clothes and close the door again.
2. Press the **Power** button and then press the **Drying** button.
   : The standard course will be selected automatically.
   Drying is not available for Eco Drum Clean, AIR Wash and Wool courses.
3. Select **Drying** button as follows.
   Drying Programs

   - Every press of this button will select drying type repeatedly in the following order:
     Cup Board → Low Temp → Iron → Time Dry (30 min. → 1:00 h → 1:30 h → 2:00 h → 2:30 h → 3:00 h → 3:30 h → 4:00 h → 4:30 h) → Cup Board

Drying Type		Information	Time (Max Load)
Auto Drying	Cupboard( )	Standard: Dries the laundry.	160min.
	Low Temp.( )	Dries the laundry at a low temperature to protect the texture of the laundry.	200min.
	Iron( )	For leaving items partially damp so that it can be easily ironed	140min.
Time Drying( )		You can select the appropriate drying time depending on the texture, quantity, and moisture.	270min.

- For Auto Drying programs, this machine automatically displays Drying Time by sensing the weight of clothes before drying, and adjusting appropriately.
- **For laundry weighing less than 3.0kg, use the Auto Dry. For laundry that weighs more, please use the Time Dry.**
- If both the spin and drying cycles are selected, the spin speed is automatically selected to enhance the drying efficiency.
- When using the drying cycle, check if the water supply valve is opened.

4. Put suitable amount of detergent and fiber softener in the detergent tray and close it again.
5. Press **Start/Pause** button.
   : It automatically performs an optimal function from washing to drying.
   - The selected course can't be altered after the start of drying.
   - If cold water is not supplied, drying will not be performed.
   - In case you wish to dry after hand washing, select both Spin and Dry at the same time.

WD856U4SAGD-03223D-06_EN.indd 31 2015/6/1 11:50:46

washing a load of laundry

Washing clothes using the cycle selector

Your new washing machine makes washing clothes easy, using Samsung's "Fuzzy Control" automatic control system. When you select a wash program, the machine will set the correct temperature, washing time, and washing speed.

1. Turn on your sink's water tap.
2. Press the **Power** button.
3. Open the door.
4. Load the articles one at a time loosely into the drum, without overfilling it.
5. Close the door.
6. Add detergent, softener, and pre-wash detergent (if necessary) into the appropriate compartments.

Pre-wash is only available when selecting the COTTON, SYNTHETICS, DAILY WASH, BABY CARE, SUPER ECO WASH cycles. It is only necessary if your clothing is heavily soiled.

7. Use the **Cycle Selector** to select the appropriate cycle according to the type of material: COTTON, SYNTHETICS, DAILY WASH, 15' QUICK WASH, ECO DRUM CLEAN, BABY CARE, SUPER ECO WASH, OUTDOOR CARE, Wool. The relevant indicators will illuminate on the control panel.
8. At this time, you can control the wash temperature, the amount of rinses, the spinning speed, and the delay time by pressing the appropriate option button.
9. Press the **Start/Pause** button and the wash will begin. The process indicator will light up and the remaining time for the cycle will appear in the display.

Pause Option

Within 5 minutes of starting a wash, it is possible to add/remove laundry items.

1. Press the **Start/Pause** button to unlock the door.

The door cannot be opened when the water is too HOT or the water level is too HIGH.

2. After closing the door, press the **Start/Pause** button to restart the wash.

When the cycle is finished:

After the total cycle has finished, the power will turn off automatically.

1. Open the door.
2. Remove laundry.

WD856U4SAGD-03223D-06_EN.indd 32 2015/6/1 11:50:46

Washing clothes manually

You can wash clothes manually without using the Cycle Selector.

1. Turn the water supply on.
2. Press the **Power** button on the washing machine.
3. Open the door.
4. Load the articles loosely into the drum one at a time, without overfilling it.
5. Close the door.
6. Add detergent and, if necessary, softener or prewash detergent, into the appropriate compartments.
7. Press the **Temp.** button to select the temperature.
   (: Cold Water, 20 ˚C, 30 ˚C, 40 ˚C, 60 ˚C, 95 ˚C)
8. Press the **Rinse** button to select the required number of rinse cycles.
   The maximum number of rinse cycles is five.
   The wash duration is increased accordingly.
9. Press the **Spin** button to select the spin speed.
   (: No Spin, : Rinse Hold)
10. Press the **Delay End** button repeatedly to cycle through the available Delay End options (from 3 hour to 19 hours in one hour increments). The hour displayed indicates the time at which the wash will be finished.
11. Press the **Start/Pause** button and the machine will begin the cycle.

LAUNDRY GUIDELINES

Follow these simple guidelines for the cleanest laundry and the most efficient wash.

Always check the Care label on clothing before washing.

Sort and wash your laundry according to the following criteria:

- Care Label: Sort laundry into cottons, mixed fibres, synthetics, silks, wools and rayons.
- Colour: Divide whites and colours. Wash new colour items separately.
- Size: Placing items of different sizes in the same load will improve the wash action.
- Sensitivity: Wash delicate items separately, using the Delicate wash cycle for pure, new woollen items, curtains and silk articles. Check the labels on the items you are washing or refer to the fabric care chart in the appendix.

Emptying pockets

Before each wash, empty all the pockets of your laundry. Small, irregularly shaped hard objects, such as coins, knives, pins, and paperclips could damage your washing machine. Do not wash clothing with large buckles, buttons, or other heavy metal objects.

Metal on clothing may damage your clothing as well as the tub. Turn clothing with buttons and embroidered clothes inside out before washing them. If zips of pants and jackets are open while washing, the spin basket may be damaged. Zips should be closed and fixed with a string before washing.

Clothing with long strings may become entangled with other clothes damaging them. Be sure to fix the strings before starting the wash.

Prewashing cotton

Your new washing machine, combined with modern detergents, will give perfect washing results, thus saving energy, time, water and detergent. However, if your cotton is particularly dirty, prewash with a protein-based detergent.

WD856U4SAGD-03223D-06_EN.indd 33 2015/6/1 11:50:46

washing a load of laundry

Determining the load capacity
Do not overload the washing machine or your laundry may not wash properly. Use the chart below to determine the load capacity for the type of laundry you are washing.

Fabric Type	Load Capacity
Model	WD856
COTTON - average/lightly soiled - heavily soiled	8.5 kg
SYNTHETICS	3.5 kg
OUTDOOR CARE	2.0 kg
Wool	2.0 kg

- When the laundry is unbalanced ("UE" lights up on the display), redistribute the load. If the laundry is unbalanced, the spin efficiency may be degraded.
- When washing Bedding or Duvet cover, the wash time may be lengthened or the spin efficiency may be degraded.

Make sure to insert brassieres (water washable) into a laundry net (to be purchased additionally).

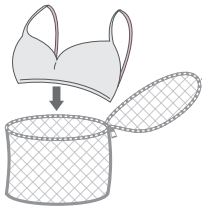

- The metal parts of the brassieres may break through the material and damage the laundry. Therefore make sure to place them inside a fine laundry net.
- Small, light clothing such as socks, gloves, stockings and handkerchiefs may become caught around the door. Place them inside a fine laundry net.

CAUTION Do not wash the laundry net by itself without other laundry. This may cause abnormal vibrations that could move the washing machine and cause an accident resulting in injury.

DETERGENT AND ADDITIVES INFORMATION

Which detergent to use

The type of detergent you should use is based on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, and degree of soiling. Always use "low suds" laundry detergent, which is designed for automatic washing machines.
Follow the detergent manufacturer's recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your area. If you do not know how hard your water is, enquire at your local water authority.

Do not use detergent that has hardended or solidified as the detergent may remain in the rinse cycle. It may cause your washing machine to not rinse properly or result in the overflow becoming blocked.

Please note the following when using the Wool course.

- Use a neutral liquid detergent for wool only.
- When using a powder detergent, it may remain on the laundry and cause damage to the material (wool).

WD856U4SAGD-03223D-06_EN.indd 34 2015/6/1 11:50:47

Detergent drawer

Your washing machine has separate compartments for dispensing detergent and fabric softener. Add all laundry additives to the correct compartment before starting your washing machine.

Do not open the detergent drawer while your washing machine is running or you might be exposed to hot water or steam.

1. Pull out the detergent drawer on the left side of the control panel.
2. Add the recommended amount of laundry detergent directly into the detergent compartment Ⅱ before starting your washing machine.

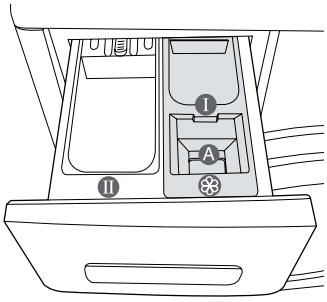

To use liquid detergent, use the liquid detergent box (refer to “Liquid Detergent” for the corresponding model).

- Do not add powdered detergent into the liquid detergent box.

3. Add the recommended amount of fabric softener into the softener compartment ֍ if required. DO NOT exceed the MAX FILL (Ⓐ) line.

CAUTION Do NOT add any powder/liquid **detergent** to the softener compartment (֍).

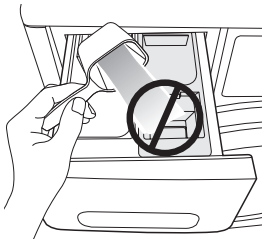

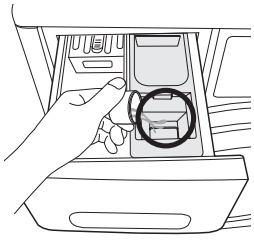

4. When using the Prewash option, add the recommended amount of laundry detergent into the prewash compartment Ⓘ.

When washing large items do NOT use the following detergetnt types.

- Tablet and capsule type detergents
- Detergents using a ball and net

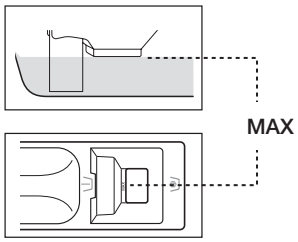

Concentrated or thick fabric softener and conditioner must be diluted with a little water before being poured into the dispenser (prevents the overflow from becoming blocked).

Be careful that the fabric softener does not overflow, when you close the detergent drawer after adding fabric softener into the rinse detergent compartment.

Liquid Detergent (Selected models)

To use liquid detergent, place the liquid detergent box into the main wash section of the detergent drawer and pour liquid detergent into the liquid detergent box.

- DO NOT fill above the MAX line.
- When using powdered detergent, remove the liquid detergent box from the detergent drawer. Powdered detergent will not dispense with liquid detergent box.
- After a wash, some liquid may remain in the detergent drawer.

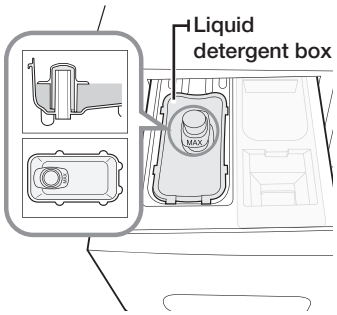

WD856U4SAGD-03223D-06_EN.indd 35 2015/6/1 11:50:47

cleaning and maintaining your washing machine

Keeping your washing machine clean improves its performance, wards off unnecessary repairs, and lengthens its life.

ECO DRUM CLEAN

This course is a self-cleaning course that removes mold that may occur inside the washing machine.

1. Press the **Power** button.
2. Turn the **Cycle Selector** to the ECO Drum Clean course.
   - You can only use the Delay End function.
   - The water temperature during the ECO Drum Clean is set to 70 ˚C.
   - It will auto set cotton 30˚C middle water level program when cloth is put in.

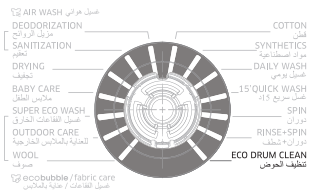

3. Place the appropriate amount of cleansing agent into the detergent compartment Ⅱ and close the detergent drawer (when cleaning the drum using a cleansing agent).
   - Be sure to use the recommended cleansing agent for cleaning the drum.
   - There are powder-type and liquid-type drum cleansing agents. The liquid-type cleaning agent is only available with liquid detergent box (option).

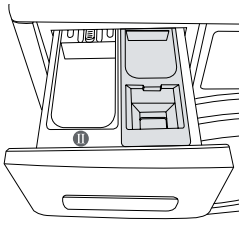

4. Press the **Start/Pause** button.
   - If you press the **Start/Pause** button, the ECO Drum Clean course begins.

CAUTION

- Using the ECO Drum Clean course, you can clean the drum without using a cleansing agent.
- Never use the ECO Drum Clean course when laundry is in the washing machine. This may result in damage to the texture or a problem with the washing machine.
- **In the ECO Drum Clean course, never use normal detergent.**
- **Use only 1/10 of the amount of the drum cleansing agent recommended by the cleansing agent manufacturer.**
- Since using a chlorine bleaching agent may discolour the product, be sure to use only oxygen bleaching agents.
- Powder-type cleansing agent: Use a [powder-type bleaching agent] or a [cleansing agent for drum cleaning only].
- Liquid-type cleansing agent: Use a [liquid-type oxygen bleaching agent] or a [cleansing agent for drum cleaning only].

WD856U4SAGD-03223D-06_EN.indd 36 2015/6/1 11:50:50

The ECO Drum Clean Auto Alarm Function

- If the “ECO Drum Clean” indicator on the display and the lamp on the Cycle Selector are lit after a wash, it indicates that tub (drum) cleaning is required. In this case, remove the laundry from the washing machine, turn the power on, and clean the drum by performing the ECO Drum Clean course.
- If you do not perform the ECO Drum Clean course, the “ECO Drum Clean” indicator on the display and the lamp on the Cycle Selector are turned off. However, the “ECO Drum Clean” indicator on the display and the lamp on the Cycle Selector are turned on again after two washes are performed. However, this will not result in a problem with the washing machine.

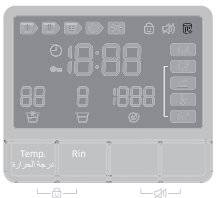

- Although generally, the ECO Drum Clean Auto Alarm appears once a month or so, the frequency may differ depending on the number of times the washing machine is used.

- **In case of the alarm, please also clean the debris filter (refer to “Cleaning the debris filter” section on page 38). Otherwise the performance of the bubble function may lower down.**

DRAINING THE WASHING MACHINE IN AN EMERGENCY

1. Unplug the washing machine from the power supply.
2. Open the filter cover using a coin or a key.

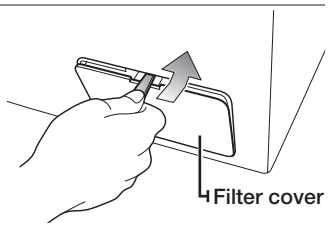

3. Pull forward the emergency drain tube to separate it from the guide hook.

4. Hold the cap on the end of the emergency drain tube and slowly pull it out about 15 cm.
5. Allow all the water to flow into a bowl.

   Remain water maybe more than you expected. Prepare larger bowl.
6. Reinsert the emergency drain cap and the drain tube.
7. Replace the filter-cover.

cleaning and maintaining your washing machine

CLEANING THE DEBRIS FILTER

We recommend cleaning the debris filter 5 or 6 times a year, or when the error message of "5E" is displayed. (Refer to "Draining the washing machine in an emergency" in the previous section.)
If foreign substances accumulate debris filter, the performance of the bubble function will be degraded.

CAUTION Before cleaning the debris filter, make sure to unplug the power cord.

1. Remove the remaining water first (refer to "Draining the washing machine in an emergency" on page 37.)

   If you separate the filter without draining the remaining water, the remaining water may trickle out.
2. Open the filter cover by using a key or coin.
3. Unscrew the emergency drain cap by turning it to the left and drain off all the water.
4. Unscrew the debris filter cap.

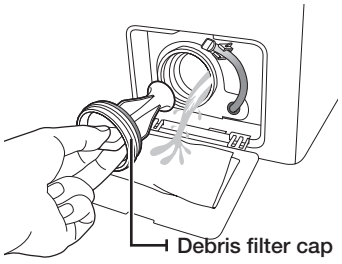

5. Wash any dirt or other material from the debris filter. Make sure the drain pump propeller behind the debris filter is not blocked.
6. Replace the debris filter cap.
7. Replace the filter cover.

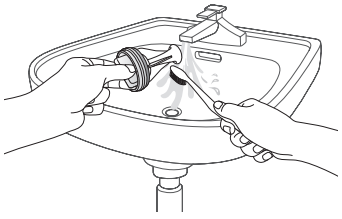

CAUTION Do not open the debris filter cap while the machine is running or hot water may flow out.

- Make sure to replace the filter cap after the filter cleaning. If the filter is out of the machine, your washing machine may malfunction or leak water.
- The filter should be fully assembled after the filter cleaning.

CLEANING THE EXTERIOR

1. Wipe the washing machine surfaces, including the control panel, with a soft cloth using a nonabrasive household detergent.
2. Use a soft cloth to dry the surfaces.
3. Do not pour water onto the washing machine.

WD856U4SAGD-03223D-06_EN.indd 38 2015/6/1 11:50:52

CLEANING THE DETERGENT DRAWER AND DRAWER RECESS

1. Press the release lever on the inside of the detergent drawer and pull the drawer out.
2. Remove the softener divider and the liquid detergent box(option) from the detergent drawer.

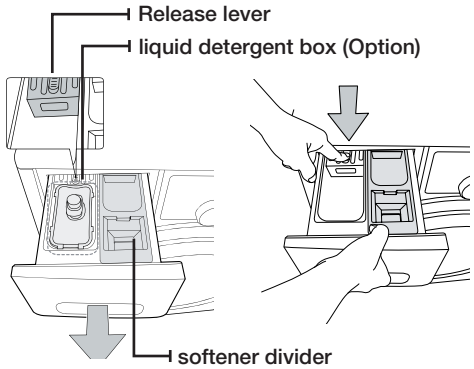

3. Wash all parts under running water.

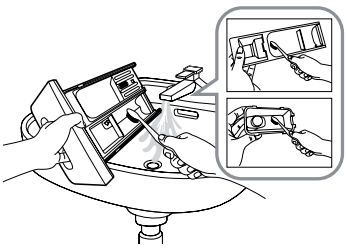

4. Clean the drawer recess with an old toothbrush.
5. Replace the softener divider and the liquid detergent box (option) by pushing it firmly into the drawer.
6. Push the drawer back into place.
7. To remove any remaining detergent, perform a rinse cycle without any laundry in the drum.

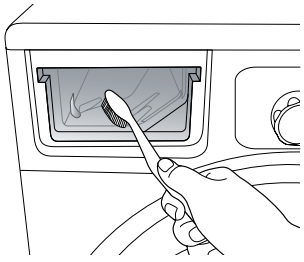

CLEANING THE WATER HOSE MESH FILTER

You should clean the water hose mesh filter at least once a year, or when the error message of “4E” is displayed:

1. Turn off the water supply to the washing machine.
2. Unscrew the hose from the back of the washing machine. To prevent water from gushing out due to the air pressure in the hose, cover the hose with a cloth.
3. Gently pull out the mesh filter from the end of the hose using a pair of pliers and rinse it under water until clean. Also clean inside and outside the threaded connector.
4. Push the filter back into place.
5. Screw the hose back onto the washing machine.
6. Make sure the connections are watertight and turn on the tap.

WD856U4SAGD-03223D-06_EN.indd 39 2015/6/1 11:50:53

cleaning and maintaining your washing machine

REPAIRING A FROZEN WASHING MACHINE

If the temperature drops below freezing and your washing machine is frozen:

1. Unplug the washing machine.
2. Pour warm water over the tap to loosen the water supply hose.
3. Remove the water supply hose and soak it in warm water.
4. Pour warm water into the washing machine drum and let it sit for 10 minutes.
5. Reconnect the water supply hose to the water tap and check if the water supply and drain are operating normal.

STORING YOUR WASHING MACHINE

If you need to store your washing machine for an extended time, it's better to drain and disconnect it. Washing machines can be damaged if water is left in the hoses and internal components before storage.

1. Select the **Cotton** cycle and add bleach to the bleach compartment. Then, push the **Quick Wash** button and run your washing machine through the cycle without a load.
2. Turn the water taps off and disconnect the inlet hoses.
3. Unplug your washing machine from the electrical outlet, and leave your washing machine door open to allow air to circulate inside the tumbler.

If your washing machine has been stored in below-freezing temperatures, allow time for any leftover water in your washing machine to thaw out before using it.

WD856U4SAGD-03223D-06_EN.indd 40 2015/6/1 11:50:53

troubleshooting and information codes

CHECK THESE POINTS IF YOUR WASHING MACHINE...

PROBLEM	SOLUTION
Will not start	• Make sure your washing machine is plugged in. • Make sure the door is firmly closed. • Make sure the water source tap(s) are turned on. • Make sure to press the Start/Pause button.
Has no water or not enough water	• Turn the water tap on fully. • Make sure the water source hose is not frozen. • Straighten the water intake hoses. • Clean the filter on the water intake hose.
Has detergent remaining in the detergent drawer after the wash cycle is complete	• Make sure your washing machine is running with sufficient water pressure. • Make sure the detergent is added to the center of the detergent drawer.
Vibrates or is too noisy	• Make sure your washing machine is on a level surface. If the surface is not level, adjust the washing machine feet to level the appliance. • Make sure that the shipping bolts are removed. • Make sure your washing machine is not touching any other object. • Make sure the laundry load is balanced.
The washing machine does not drain and/or spin	• Straighten the drain hose. Eliminate kinked hoses. • Make sure the debris filter is not clogged.
Door is locked shut or will not open.	• The door will not open until 3 minutes after the machine stops or the power turns off.

If the problem persists, contact your local Samsung Customer Service.

WD856U4SAGD-03223D-06_EN.indd 41 2015/6/1 11:50:53

troubleshooting and information codes

INFORMATION CODES

If your washing machine malfunctions, you may see an information code on the display. If this happens, please check the table below and try the suggested solution before calling Customer Service.

CODE SYMBOL	SOLUTION
dE	• Make sure the door is firmly closed. • Make sure that laundry is not caught in the door.
4E	• Make sure the source water tap is turned on. • Check the water pressure. • Clean the mesh filters of water hose. When the washer displays the “4E” code, the washer do draining for 3 minutes. During this time, the Power button is inoperative.
5E	• Clean the debris filter. • Make sure the drainage hose is installed correctly. • Clean the water hose mesh filter.
UE	• The laundry load is unbalanced. Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of jeans, the final spin result might be unsatisfactory and an “UE” error message will be shown in the display window.
cE/3E	• Call the after-sales service.
HOT	• It appears when the internal temperature of the drum is high. The fan will automatically function, so just wait until “Hot” indication disappeared.
Sud/Sd	• This occurs when too much foaming is detected. It is also displayed while foaming is removed. When the removal is finished, the normal cycle proceeds.(This is one of the normal operations. It is an error for preventing non-sensing faults.)
Uc	• If the voltage of the supplied power is instable, the washing machine will be paused to protect its electric devices. • If the correct voltage is supplied, the cycle will resume automatically.

For any codes not listed above, or if the suggested solution doesn’t fix the problem, call your Samsung Service Centre or local Samsung dealer.

WD856U4SAGD-03223D-06_EN.indd 42 2015/6/1 11:50:53

CYCLE CHART

(● user option)

PROGRAM	Max load(kg)	DETERGENT			Max Temp (℃)	Spin Speed(MAX) rpm
	WD856	Pre-wash	wash	Softener		WD856U4
COTTON	8.5	●	yes	●	95	1400
SYNTHETICS	3.5	●	yes	●	60	1200
DAILY WASH	4.0	●	yes	●	60	1400
15' QUICK WASH	2.0	-	yes	●	40	800
ECO DRUM CLEAN	-	-	-	-	70	400
BABY CARE	4.0	●	yes	●	95	1400
SUPER ECO WASH	4.0	●	yes	●	40	1200
OUTDOOR CARE	2.0	-	yes	-	40	1200
WOOL	2.0	-	yes	-	40	800

PROGRAM	Eco Bubble	Intensive	Delay end	Drying
COTTON	●	●	●	●
SYNTHETICS	●	●	●	●
DAILY WASH	●	●	●	●
15' QUICK WASH	●	-	●	●
ECO DRUM CLEAN	-	-	●	-
BABY CARE	●	●	●	●
SUPER ECO WASH	●	●	●	●
OUTDOOR CARE	●	-	●	●
WOOL	●	-	●	-

1. A cycle with a prewash takes approx. 18 minutes longer.
2. The cycle duration data has been measured under the conditions specified in Standard IEC 60456 / EN 60456.
3. Cotton 40℃ + Intensive are programs according to EN60456.
4. Course time in individual homes may differ from the values given in the table due to variations in the pressure and temperature of the water supply, the load and the type of laundry.
5. When the Intensive Wash function is selected, the cycle time is increased for each cycle.
6. The energy label specifications have been determined by using the following program accordiing to SASO 2692 and SASO 2693.
- The program is Cotton40℃ + Eco bubble + Intensive Rinse2 Spin 1400rpm.

WD856U4SAGD-03223D-06_EN.indd 43 2015/6/1 11:50:53

appendix

FABRIC CARE CHART

The following symbols provide garment care directions. The care labels include four symbols in this order: washing, bleaching, drying and ironing (and dry cleaning when necessary). The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow the care label directions to maximize garment life and reduce laundery problems.

	Resistant material		Can be ironed at 100 ˚C max
	Delicate fabric		Do not iron
	Item may be washed at 95 ˚C		Can be dry cleaned using any solvent
	Item may be washed at 60 ˚C		Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
	Item may be washed at 40 ˚C		Dry clean with aviation fuel, pure alcohol or R113 only
	Item may be washed at 30 ˚C		Do not dry clean
	Item may be hand washed		Dry flat
	Dry clean only		Can be hung to dry
	Can be bleached in cold water		Dry on clothes hanger
	Do not bleach		Tumble dry, normal heat
	Can be ironed at 200 ˚C max		Tumble dry, reduced heat
	Can be ironed at 150 ˚C max		Do not tumble dry

PROTECTING THE ENVIRONMENT

- This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manufactures' instructions.
- Use stain removal products and bleaches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

WD856U4SAGD-03223D-06_EN.indd 44 2015/6/1 11:50:55

SPECIFICATIONS

The manufacturer's name and/or his trademark		SAMSUNG
Country of origin		Made in China
The type number		WD856U4SA**
Kind of washing machine		Automatic electric Washing machine
Washing system		Washing machine with drum system
Rated voltage (volts)		230 V~
Rated frequency (Hz)		60 Hz
Rated power input (watt or kW)	**Rated power input**	2100 W
	Wash heater	2000 W
	Main motor	450 W
	Pump motor	35 W
	Circulation motor	35 W
	Dry power input	1750 W
	Dry heater	1600 W
	Dry fan motor	28 W
Standard (rated) washing capacity (kg)		8.5 kg
Maximum mass in kilogrammes of dry (kg)		6.0 kg
Standard quantity of used water (litre)		75 ℓ
Washing machine class		Class I
IP number		IPX4
The maximum permissible inlet water pressure		800 kPa
The minimum permissible inlet water pressure		50 kPa
Water volume		62 ℓ
Dimensions		W600 x D650 x H850 (mm)
Net weight		69 kg
Spin revolutions		1400 rpm

- The washing machine shall not be installed at a humid place.
- The wringer must be switched off when not in use.
- The washing machine must not be operated by children.
- The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.
- The hands shall not be inserted into running water extracting tub.
- The washing machine whose lid can be opened during water extraction,that if it takes 15 s or more for complete stop of water-extracting chamber tub such a case should be understood as a trouble.

WD856U4SAGD-03223D-06_EN.indd 45 2015/6/1 11:50:55

memo

memo

SAMSUNG

QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
SAUDI ARABIA	8002474357	www.samsung.com/sa/support www.samsung.com/sa_en/support (English)

Code No. DC68-03223D-06_EN

WD856U4SA**

غسالة كهربية أوتوماتيكية

دليل المستخدم

Planet First 100% Recycled Paper

تم إنتاج هذا الدليل باستخدام ورق مُعاد تدويره بنسبة ١٠٠٪.

إمكانيات هائلة

نشكرك على شراء هذا المنتج من Samsung.

SAMSUNG

DC68-03223D-06

WD856U4SAGD-03223D-06_AR.indd 1 2015/6/1 12:05:43

ميزات الغسالة الجديدة من Samsung

ستغير هذه الغسالة الجديدة رؤيتك لعملية الغسل. حيث تتوفر بغسالة Samsung كافة الميزات التي تجعل عملية الغسل عملية سهلة وممتعة قدر الإمكان بدءًا من وظيفة Eco Bubble (غسيل الفقاعات) المخصصة وانتهاءً بتوفير الطاقة.

- **Eco Bubble Wash (غسل بالفقاعات صديق البيئة)**

يوفر نظام Eco Bubble الغسل بالفقاعات صديق البيئة الفعّال من Samsung نظافة أفضل مع عناية متقدمة بالأقمشة. يسمح نظام Eco Bubble (غسيل الفقاعات) بتوزيع المسحوق بالتساوي ويعمل على تخلله داخل الملابس بشكلٍ أسرع وأعمق.

- **ضوضاء واهتزازات أقل**

تؤدي غسالة سامسوخ عملها مع أدنى مستويات الضوضاء وأقل مستويات الاهتزاز مع تقنية التحكم الذكية التي تتيح الحفاظ على أدنى مستويات الاهتزاز. وبالتالي، تحافظ الأسطوانة على التوازن المثالي.

- **الغسيل إلى التجفيف بزر واحد**

تمتع بإدارة وظائف الغسيل والتجفيف الملائمة لا تتوقف. يمكن اختيار ٤ برامج تجفيف خاصة مختلفة لتنفيذ دورة الغسيل بأكملها بما في ذلك دورة التجفيف باستخدام زر واحد.

• Cupboard (خزانة)(البرنامج القياسي)، Low temp drying (التجفيف بدرجة حرارة منخفضة)، Iron (الكي)،Time Drying (التجفيف الوقتي) (٣٠ - ٢٧٠ دقيقة). يمكن كذلك تشغيل برامج التجفيف هذه بشكل مستقل عن برامج الغسيل.

- **AIR WASH (غسيل هوائي)**

يعمل نظام AIR WASH (غسيل هوائي) على إزالة الروائح الكريهة وتعقيم الملابس المغسولة من الروائح التي لا يمكن التخلص منها من خلال نظام الغسيل العادي، وهي منفعة يتم الحصول عليها من آلية الغسيل الهوائي الفريدة.

• يمكن غسلها بالغسيل الهوائي: الستارات الصوفية، مريلات الأطفال القطنية / المنخفضة، ستارات غليظة، بدلات، وسادات، وسائد، دمى مشتغلة بالإبرة.

• لا ينطبق بطانيات جلدية، حريرية، مخملية، كهربائية، والملابس المبقعة الأخرى.

- **Quick Wash (الغسيل السريع)**

وداعاً لإهدار الوقت! خلال ميزة الغسيل السريع ١٥ دقيقة سيمكنك غسيل الملابس واستخدامها.يساعد برنامج Quick Wash (الغسيل السريع) في توفير الكثير من الوقت. فالآن يمكنك غسل ما تشاء من الملابس (حتى ٢ كجم) خلال ١٥ دقيقة فقط!

- **ECO DRUM CLEAN (تنظيف الحوض)**

يساعد استخدام ECO DRUM CLEAN (تنظيف الحوض) في الحفاظ على نظافة الغسالة حتى بدون استخدام أي منظفات أو مبيضات. حيث يمكنك الحفاظ على نظافة الحاوية ورائحتها مع هذا البرنامج المتخصص للتنظيف.

- **BABY CARE (ملابس الطفل)**

تتضمن غسالة Samsung برامج غسل تعمل على حماية ملابس الأطفال ذوي البشرة الحساسة. حيث تم إعداد هذه البرامج لتقليل التهابات البشرة عند الأطفال عن طريق تقليل بقايا مسحوق الغسل. بالإضافة إلى أن هذه البرامج تصنف الملابس إلى أنواع مختلفة يتم غسلها وفقًا لخصائص كل نوع بحيث يشعر الأطفال بالانتعاش من نظافة الملابس وقتما يرتدونها.

WD856U4SAGD-03223D-06_AR.indd 2 2015/6/1 12:05:44

- **Delay End (تأجيل التشغيل)**

تعمل هذه الميزة على تأجيل الدورة حتى ١٩ ساعة بزيادة ساعة واحدة كما تعمل على زيادة الراحة عند استخدام الغسالة لاسيما عندما ترغب في الذهاب للخارج.

- **Child Lock (التأمين ضد عبث الأطفال)**

تضمن وظيفة Child Lock (التأمين ضد عبث الأطفال) إبقاء الأطفال بعيداً عن الغسالة. وتعمل ميزة الأمان هذه على منع الأطفال من العبث بالغسالة كما تقوم بتنبيهك عند تشغيلها.

- **لوحة العرض الرسومية الرقمية**

تتميز لوحة العرض الرسومية الرقمية بوضوحها وسهولة استخدامها مما يعمل على تقليل الضوضاء والمقاطعة إلى أدنى حد. وإلى جانب تشغيل لوحة العرض الرسومية الرقمية عملية سهلة، فهي تمكنك من إجراء إعدادات ضبط عملية الغسيل بدقة للحصول على نتائج غسل فائقة.

- **باب واسع**

فتحة عريضة جدًا للباب لإتاحة مشاهدة عملية الغسيل بشكل مناسب! كما أنه يسمح بإضافة قطع الملابس وإزالتها بسهولة، وخصوصًا القطع كبيرة الحجم مثل المفروشات والمناشف إلخ.

يحتوى هذا الدليل على معلومات هامة حول عملية التركيب والاستخدام وصيانة غسالة Samsung الجديدة. ويمكنك الرجوع إليه للتعرف على شكل لوحة التحكم، والتعليمات الخاصة بكيفية استخدام الغسالة، والتلميحات المتعلقة بالوصول إلى أقصى استفادة من أحدث الميزات والإمكانات المتوفرة بها. يرشدك القسم "**استكشاف المشاكل وحلها ورموز المعلومات**" في صفحة ٤١ إلى ما يجب عليك فعله في حالة حدوث عطل بالغسالة الجديدة.

WD856U4SAGD-03223D-06_AR.indd 3 2015/6/1 12:05:44

معلومات السلامة

تم تصميم المنتج الذي قمت بشرائه للاستخدام المنزلي فقط.

تهانينا على شرائك غسالة Samsung الجديدة. يحتوى هذا الدليل على معلومات هامة حول عملية تركيب الجهاز واستخدامه ورعايته. يرجى قراءة هذا الدليل بعناية لتتمكن من الاستفادة الكاملة من الميزات والفوائد العديدة لغسالتك.

ما يجب أن تعرفه حول إرشادات السلامة

يرجى قراءة هذا الدليل بعناية للتأكد من أنك تعرف كيفية تشغيل الميزات والوظائف المتعددة لغسالتك الجديدة بسلامة وفاعلية. كما يجب الاحتفاظ به في مكان آمن بالقرب من الجهاز للرجوع إليه في المستقبل. يستخدم هذا الجهاز للغرض المخصص له فقط كما هو مذكور في دليل المالك هذا.

لا تغطي التحذيرات والتنبيهات وإرشادات السلامة الهامة التالية كافة الظروف والمواقف المحتمل التعرض لها. لذا يجب التعامل بحذر وانتباه وعناية عند تركيب الغسالة وصيانتها وتشغيلها.

نظرًا لأن إرشادات التشغيل التالية تنطبق على طرازات متعددة، فإن خصائص الغسالة الخاصة بك قد تختلف قليلاً عن تلك الموصوفة في هذا الدليل. كما أن بعض علامات التحذير المذكورة قد تكون غير قابلة للتطبيق. إذا كانت لديك أي أسئلة أو تساؤلات، اتصل بأقرب مركز خدمة أو اعثر على التعليمات والمعلومات عبر الإنترنت على موقع www.samsung.com.

الرموز والاحتياطات الهامة للسلامة

تشير الرموز والعلامات الموجودة في دليل المستخدم هذا إلى ما يلي:

تحذير	الممارسات الخطيرة أو غير الآمنة التي قد تؤدي **إلى إصابات خطيرة للأفراد أو الموت و/أو تلف الغسالة**.
تنبيه	الممارسات الخطيرة أو غير الآمنة التي قد تؤدي **إلى إصابات للأفراد و/أو تلف الغسالة**.
تنبيه	لتقليل خطر حدوث حريق أو انفجار أو صدمة كهربائية أو إصابة جسدية عند استخدام الغسالة، اتبع احتياطات السلامة الأساسية التالية:

	ممنوع.
	ممنوع الفك.
	ممنوع اللمس.
	اتبع الإرشادات كما هي.
	قم بفصل موصل الطاقة من مقبس الحائط.
	تأكد من توصيل الغسالة بمأخذ أرضي لمنع حدوث صدمة كهربائية.
	اتصل بمركز الخدمة للحصول على المساعدة.
	ملاحظة

تهدف علامات التحذير هذه إلى منع حدوث إصابات لك وللآخرين.

لذا الرجاء اتباعها بعناية.

بعد الاطلاع على هذا الدليل، قم بحفظه في مكان آمن للاستناد إليه كمرجع في المستقبل.

اقرأ كافة الإرشادات أولاً قبل استخدام الجهاز.

يوجد احتمال التعرض للمخاطر كما هو الحال مع كافة الأجهزة الكهربائية وأجزائها المتحركة. ولتشغيل هذا الجهاز بأمان، يجب عليك التعرف على طريقة تشغيله وتوخي الحذر عند استخدامه.

WD856U4SAGD-03223D-06_AR.indd 4 2015/6/1 12:05:44

⚠ تحذير: لتقليل إمكانية نشوب حريق أو صعقة كهربائية أو إصابة للأشخاص أثناء استخدام الغسالة، قم باتباع احتياطات الأمان الأساسية بما في ذلك ما يلي:
تحذير

لا تدع الأطفال (أو الحيوانات الأليفة) يلعبون فوق الغسالة أو بداخلها. حيث لا يمكن فتح باب الغسالة بسهولة من الداخل، وقد يصاب الأطفال بإصابات بالغة في حالة احتباسهم بداخلها.

لم يتم تصميم هذا الجهاز للاستخدام من قِبل أشخاص لديهم مشكلات جسدية وعقلية وحسية (بما فيهم الأطفال) أو نقص في المعرفة أو الخبرة، إلا تحت إشراف أو تعليمات بخصوص استخدامه من قِبل الشخص المسؤول عن سلامتهم.

يجب مراقبة الأطفال لضمان عدم عبثهم بالغسالة.

بالنسبة للاستخدام في أوروبا: يمكن استخدام هذا الجهاز بواسطة الأطفال الذين يبلغون من العمر ٨ سنوات أو أكبر وكذلك بواسطة الأشخاص الذين يعانون من قصور جسدي أو حسي أو عقلي أو نقص الخبرة والمعرفة بشرط خضوعهم للإشراف وتوعيتهم بالإرشادات الخاصة باستخدام الجهاز بطريقة آمنة وأن يتفهموا المخاطر الكامنة. يجب منع الأطفال من اللعب بالجهاز. ويجب ألا يقوم الأطفال بعملية التنظيف أو أعمال الصيانة التي يمكن للمستخدم القيام بها بدون إشراف.

في حالة تلف كابل الجهاز (سلك التيار الكهربائي)، يجب تغييره من قِبل الشركة المصنّعة أو وكيل الصيانة الخاص بها أو أي فني مؤهل لتفادي التعرض لأي خطر.

يجب وضع الجهاز بالقرب من مأخذ التيار الكهربائي، وصنابير توريد الماء وخراطيم تصريف الماء بحيث يسهل الوصول إليها.

بالنسبة للأجهزة ذات فتحات التهوية في قاعدتها، يتعين عدم إعاقة أو سد هذه الفتحات بالسجادة.

يجب استخدام مجموعات الخراطيم الجديدة ويجب عدم استخدام مجموعة الخراطيم القديمة.

تنبيه: ولتجنب المخاطر الناجمة عن إعادة الضبط غير القصدي للفاصل الحراري، فإنه يتعين عدم تزويد الجهاز خلال جهاز تبديل خارجي مثل المؤقت أو الاتصال بدائرة يجري تشغيلها وإيقاف تشغيلها بشكل منتظم بواسطة خاصية ما.

WD856U4SAGD-03223D-06_AR.indd 5 2015/6/1 12:05:44

معلومات السلامة

لا يجري استخدام التجفيف بالتدوير عند استخدام كيماويات صناعية أثناء التنظيف.

يتعين تنظيف مصيدة النسالة بشكل دائم إذا أمكن ذلك.

لابد من الحيلولة دون تراكم النسالة حول المجفف الدوار (وهو أمر غير متوفر للأجهزة المخصصة لتهوية الجزء الخارجي من المبني).

يجب توفير قدر كاف من التهوية لتجنب التدفق الخلفي للغازات في الغرفة من أجهزة تحرق وقود آخر بما في ذلك الحرائق.

لا تُجفف الأشياء غير المغسولة في المُجفف الدائري.

بالنسبة للملابس والأشياء المتسخة بمواد مثل زيت الطهي والأسيتون والكحول والبترول والكيروسين ومزيلات البقع والتربنتينة والشمع ومزيلات الشمع فإنه يجب غسلها بماء ساخن مع إضافة كمية إضافية من المنظفات قبل تجفيفها باستخدام التجفيف بالتدوير.

بالنسبة للملابس والأشياء على غرار المطاط (رغوة مطاط) وأغطية المغسلة والأقمشة المقاومة للماء والمواد المبطنة بالمطاط والملابس أو الوسائد المحشوة بالمطاط فإنه لا يجب تجفيفها باستخدام التجفيف بالتدوير.

يجب استخدام منعمات الأقمشة أوالمنتجات المماثلة وفق تعليمات الاستخدام.

يجري الجزء الأخير من التجفيف بالتدوير بدون تسخين (دورة على البارد) وذلك لضمان الحفاظ على الملابس والأغراض في درجة حرارة لا تعرضها للتلف.

أزل كافة الأغراض من الجيوب مثل الولاعات وعلب الثقاب.

WD856U4SAGD-03223D-06_AR.indd 6 2015/6/1 12:05:44

تحذير: لا توقف التجفيف بالتدوير قبل نهاية دورة التجفيف مطلقًا إلا إذا كنت ستقوم بإزالة كافة الأغراض وبسطها بسرعة بحيث يجري تشتيت الحرارة.

يتعين عدم تصريف عادم الهواء في المدخنة التي تُستخدم لطرد الأبخرة من الاجهزة التي تحرق الغاز أو غير ذلك من الوقود.

بالنسبة للأجهزة ذات فتحات التهوية في قاعدتها، يتعين عدم إعاقة أو سد هذه الفتحات بالسجادة.

يتعين ألا يجري تركيب الجهاز خلف باب قابل للحركة أو الغلق أو باب منزلق أاو باب ذو جانب من شأنها إعاقة الحفاظ على فتحة التجفيف بالتدوير مفتوحة بالكامل عند حركتها.

WD856U4SAGD-03223D-06_AR.indd 7 2015/6/1 12:05:44

معلومات السلامة

علامات التحذير الخطيرة الخاصة بالتركيب

تحذير

يجب أن يتم تركيب هذا الجهاز بواسطة فني مؤهل أو شركة صيانة متخصصة.
- قد ينتج عن الفشل في اتباع هذه التعليمات حدوث صدمة كهربائية أو حريق أو انفجار أو مشاكل تتعلق بالمنتج أو التعرض للإصابة.

يجب توخي الحذر عند رفع الجهاز لأن وزنه ثقيل

قم بتوصيل سلك الطاقة بمقبس حائط من ٢٣٠ فولت/ ٦٠ هرتز أو أعلى من ذلك. ولا تستخدم المقبس إلا لتشغيل هذا الجهاز. كما يجب عدم استخدام كبل تمديد.
- قد يؤدي مشاركة مقبس الحائط مع أجهزة أخرى باستخدام سلك طاقة أو مد سلك الطاقة إلى حدوث صدمة كهربائية أو حريق.
- تأكد من أن الجهد الكهربي للطاقة والتردد والتيار مطابقة للقياسات الخاصة بمواصفات المنتج. يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق. لذا، تأكد من توصيل سلك الطاقة في مقبس الحائط بإحكام.

قم بإزالة أي مواد خارجية مثل الأتربة أو الماء من النهايات الطرفية لسلك الطاقة ونقاط الاتصال باستخدام قطعة قماش جافة بشكل منتظم.
- قم بإلغاء توصيل سلك الطاقة وتنظيفه باستخدام قطعة قماش جافة.
- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.

قم بتوصيل سلك الطاقة في مقبس الحائط في الاتجاه الصحيح بحيث يكون اتجاه السلك نحو الأرضية.
- إذا قمت بتوصيل سلك الطاقة في المقبس في الاتجاه المعاكس، فقد تتلف الأسلاك الكهربائية الموجودة داخل الكبل وقد يؤدي هذا الأمر إلى حدوث صدمة كهربية أو حريق.

احتفظ بجميع مواد التغليف بعيدًا عن متناول الأطفال، حيث إن مواد التغليف قد تمثل خطورة على الأطفال.
- قد يؤدي وضع الطفل لكيس فوق رأسه إلى إصابته بالاختناق.

في حالة تلف الجهاز أو سلك الطاقة أو موصل الطاقة، اتصل بأقرب مركز صيانة إليك.

يجب بتثبيت هذا الجهاز على الأرض بشكل سليم.
لا تقم بتثبيت الجهاز على الأرض بجانب أنبوب غاز أو أنبوب ماء بلاستيكي أو خط تليفون.
- قد ينتج عن هذا الأمر حدوث صدمة كهربائية أو حريق أو انفجار أو مشاكل تتعلق بالمنتج
- يجب عدم توصيل كبل الطاقة في مقبس لم يتم تأريضه بشكل صحيح وتأكد من أن ذلك يتم وفقًا للوائح المحلية والقومية.

يجب عدم تركيب هذا الجهاز بالقرب من سخان أو مواد قابلة للاشتعال.
يجب عدم تركيب هذا الجهاز في بيئة رطبة أو موقع به زيت أو أتربة أو في مكان يتعرض لضوء الشمس المباشر والماء (قطرات المطر).

يجب عدم تركيب هذا الجهاز في موقع تكون درجة حرارته منخفضة
- قد يؤدي الجليد إلى انفجار الأنابيب

يجب عدم تركيب هذا الجهاز في موقع يكون به تسرب للغاز.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو حريق.

لا تستخدم محول كهربي.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو حريق.

لا تستخدم سلك طاقة تالف أو كبل طاقة تالف أو مقبس حائط غير محكم.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو حريق.

يجب عدم جذب سلك الطاقة أو ثنيه بقوة.
يجب عدم لف سلك الطاقة أو طيه.
يجب عدم تعليق سلك الطاقة فوق كائن معدني أو وضع كائن ثقيل فوق سلك الطاقة أو إدراج كائنات بين سلك الطاقة أو دفع سلك الطاقة في المساحة الموجودة خلف الجهاز.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو حريق.

WD856U4SAGD-03223D-06_AR.indd 8 2015/6/1 12:05:44

يجب عدم جذب سلك الطاقة، أثناء عدم توصيل موصل الطاقة.

- قم بفصل موصل الطاقة عن طريق الإمساك بالموصل.
- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.

لا تضع سلك الطاقة والأنابيب في مكان قد يعرضك للسقوط فوقها.

تنبيه علامات التنبيه الخاصة بالتركيب

يجب وضع هذا الجهاز بطريقة يمكن من خلالها الوصول إلى موصل الطاقة.

- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق نتيجة لتسريب الكهرباء.

يجب تركيب جهازك على أرضية مستوية وصلبة تتحمل وزن الجهاز.

- قد ينتج عن الفشل في اتباع هذه التعليمات وجود اهتزازات أو حركات أو ضوضاء أو مشاكل غير طبيعية تتعلق بالمنتج.

تحذير علامات التحذير الخطير الخاصة بالاستخدام

في حالة تعرض الجهاز لكمية زائدة من الماء، قم بإيقاف تشغيل المياه وقطع اتصال الكهرباء بشكل فوري، واتصل بأقرب مركز صيانة.

- لا تلمس سلك التيار الكهربي بيدين مبتلتين
- قد يؤدي عدم الالتزام بذلك إلى الإصابة بصدمة كهربية

في حالة إصدار الجهاز لضوضاء غير طبيعية، أو رائحة اشتعال أو دخان، قم بإلغاء توصيل سلك الطاقة فورًا واتصل بأقرب مركز للصيانة.

- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.

في حالة وجود تسريب للغاز (مثل غاز البروبان أو LP وما إلى ذلك)، يجب تهوية المكان فورًا بدون لمس سلك الطاقة. لا تقم بلمس الجهاز أو سلك الطاقة.

- لا تستخدم مروحة تهوية.
- قد ينتج عن الشرارة حدوث صدمة كهربية أو حريق.

لا تدع الأطفال يلعبون فوق الغسالة أو بداخلها. كذلك، يجب إزالة حامل باب الغسالة عند التخلص من الجهاز.

- في حالة الانحشار داخل الغسالة، قد يتعرض الطفل للاحتجاز والاختناق حتى الموت.

تأكد من إزالة الغلاف (الإسفنج، الفوم) المرفق بأسفل الغسالة قبل الاستخدام.

WD856U4SAGD-03223D-06_AR.indd 9 2015/6/1 12:05:45

معلومات السلامة

يجب عدم غسل العناصر العالق بها الجاز أو الكيروسين أو البنزين أو تنر الطلاء أو الكحول أو أي مواد أخرى قابلة للاشتعال أو الانفجار.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو حريق أو انفجار.

يجب عدم فتح باب الغسالة بالقوة أثناء التشغيل (الغسل/التجفيف/التنشيف عند درجة حرارة عالية).

- قد ينتج عن اندفاع الماء خارج الغسالة حدوث الإصابة بالحروق أو التسبب في أن تصبح الأرض منزلقة.

قد ينتج عن هذا الأمر إصابات شخصية.

- قد يؤدي فتح الباب بالقوة إلى تلف المنتج أو الإصابة.

يجب عدم وضع يديك تحت الغسالة.

- قد ينتج عن هذا الأمر إصابات شخصية.

لا تلمس سلك التيار الكهربي بيدين مبتلتين.

- قد ينتج عن هذا الأمر وجود صدمة كهربية.

يجب عدم إيقاف تشغيل الجهاز عن طريق قطع اتصال سلك الطاقة أثناء تشغيل الجهاز.

- قد يؤدي توصيل سلك الطاقة مرة أخرى بالمقبس إلى حدوث شرارة ينتج عنها صدمة كهربية أو حريق.

يجب عدم السماح للأطفال أو الأفراد غير المؤهلين باستخدام هذه الغسالة بدون إشراف. يجب عدم السماح للأطفال بالتسلق فوق الغسالة.

- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حروق أو إصابة.

لا تضع يديك أو أي كائن معدني أسفل الغسالة أثناء تشغيلها.

- قد ينتج عن هذا الأمر إصابات شخصية.

يجب عدم فصل الجهاز عن طريق جذب سلك الطاقة. يجب إمساك سلك الطاقة بإحكام وسحبه بشكل مستقيم من المنفذ إلى الخارج.

- قد يؤدي تلف السلك إلى حدوث ماس كهربي أو حريق و/أو صدمة كهربية.

لا تحاول إصلاح الجهاز أو فكه أو تعديله بنفسك.

- يجب عدم استخدام أي منصهر (مثل النحاس أو سلك معدني وما إلى ذلك) خلاف المنصهر القياسي.
- في حالة وجود حاجة لإصلاح الجهاز أو إعادة تركيبه، اتصل بأقرب مركز صيانة إليك.
- قد ينتج عن الفشل في اتباع هذه التعليمات وجود صدمة كهربائية أو حريق أو مشاكل تتعلق بالمنتج أو التعرض للإصابة.

عندما يصبح خرطوم التزوّد بالماء غير محكم وينتج عنه تسريب للماء في الجهاز، يجب فصل سلك الطاقة من مأخذ الكهرباء.

- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.

قم بنزع قابس الطاقة في حال عدم استخدام الجهاز لفترات زمنية طويلة أو أثناء الرعد/ العاصفة البرقية.

- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.

WD856U4SAGD-03223D-06_AR.indd 10 2015/6/1 12:05:45

علامات التنبيه الخاصة بالاستخدام

تنبيه

عندما يعلق بالغسالة مادة غريبة مثل المنظفات أو الأتربة أو مخلفات الطعام وما إلى ذلك، قم بإلغاء توصيل سلك الطاقة وتنظيف الغسالة باستخدام قطعة قماش مبللة وناعمة.

- يؤدي الفشل في الالتزام بهذا الأمر إلى وجود تغيير في الألوان أو التشويه أو التلف أو الصدأ.

قد ينكسر الزجاج الأمامي نتيجة حدوث اصطدام قوي. يجب الحرص عند استخدام الغسالة.

- عندما ينكسر الزجاج قد تحدث إصابة.

عند حدوث فشل في توريد الماء أو عند إعادة توصيل خرطوم توريد الماء، يجب فتح الصنبور ببطء يجب فتح الصنبور ببطء في حالة عدم الاستخدام لفترة طويلة.

- قد يؤدي وجود ضغط الهواء في خرطوم توريد الماء أو أنبوب الماء إلى تلف جزء من الغسالة أو وجود تسريب للماء.

في حالة حدوث خطأ يتعلق بالتصريف أثناء التشغيل، تحقق من وجود مشكلة تتعلق بالتصريف.

- في حالة استخدام الغسالة أثناء وجود تسريب للماء بها نتيجة لوجود مشكلة تتعلق بالتصريف، قد يؤدي ذلك إلى وجود صدمة كهربية أو حريق نتيجة للتسريب الكهربي.

يجب إدخال غسيل في الغسالة بالكامل بحيث لا يتم تعلق الغسيل بالباب.

- في حالة تعلق الغسيل بالباب، قد يؤدي ذلك إلى تلف الغسيل أو الغسالة، كما قد ينتج عنه حدوث تسريب للماء.

تأكد من إيقاف تشغيل الصنبور في حالة عدم استخدام الغسالة.

- تأكد من إحكام مسمار توصيل خرطوم توريد الماء.
- يؤدي الفشل في الالتزام بهذا الأمر إلى تلف الجهاز أو الإصابة.

تحقق من عدم تعليق أي مواد غريبة (مخلفات، خيوط وما إلى ذلك) باللاصق المطاطي.

- قد يحدث تسريب للماء إذا لم يتم إغلاق الباب بالكامل.

يجب فتح الصنبور والتحقق من إحكام موصل خرطوم الماء وعدم وجود تسريب للماء قبل استخدام المنتج.

- في حالة عدم إحكام المسامير أو موصل خرطوم توريد الماء، قد يحدث تسريب للماء.

لتقليل خطر نشوب الحريق أو الانفجار:

- في ظل ظروف معينة، قد يتم إنتاج غاز الهيدروجين في نظام الماء الساخن مثل سخان ماء الاستحمام الساخن الخاص بك والذي لم يتم استخدامه لمده أسبوعين أو أكثر. غاز الهيدروجين من الغازات القابلة للانفجار. في حال عدم استخدام نظام الماء الساخن الخاص بك لمدة أسبوعين أو أكثر، فقم بفتح جميع حنفيات الماء الساخن في منزلك، ودع الماء يتدفق لعدة دقائق قبل استخدام غسالتك. سيؤدي ذلك إلى تحرير تراكم غاز الهيدروجين. ونظراً لأن غاز الهيدروجين من الغازات القابلة للاشتعال، فلا تقم بالتدخين أو إشعال اللهب المكشوف خلال هذا الوقت. قم بالتهوية فوراً دون لمس قابس الطاقة في حال حدوث تسرب غاز.

تم تصميم المنتج الذي قمت بشرائه للاستخدام المنزلي فقط.

يُعد استخدام المنتج لأغراض العمل سوء استخدام له.
وفي هذه الحالة، لا يتم تغطية المنتج من قبل الضمان الأساسي الذي تقدمه شركة Samsung، كما أن شركة Samsung لا تتحمل أية مسئولية عن الأعطال أو الخسائر التي تنجم عن سوء الاستخدام.

WD856U4SAGD-03223D-06_AR.indd 11 2015/6/1 12:05:45

معلومات السلامة

يجب عدم الوقوف فوق الجهاز أو وضع أشياء فوقه (مثل الغسيل أو الشمعدان المشتعل أو السجائر المشتعلة أو الأطباق أو المواد الكيماوية أو الكائنات المعدنية وما إلى ذلك).

- قد ينتج عن هذا الأمر حدوث صدمة كهربائية أو حريق أو مشاكل تتعلق بالمنتج أو الإصابة.

يجب عدم رش مواد متطايرة مثل المبيدات الحشرية فوق سطح الجهاز.

- فبالإضافة إلى أن هذا الأمر يضر بالإنسان، فقد ينتج عنه أيضًا وجود صدمة كهربائية أو حريق أو مشاكل تتعلق بالمنتج.

لا تضع كائناً ينتج عنه وجود مجال كهرومغناطيسي بالقرب من الغسالة.

- قد ينتج عن هذا الأمر إصابات شخصية نتيجة وجود خطأ يتعلق بالتشغيل.

يجب عدم لمس الماء حيث إن الماء الذي يتم تصريفه أثناء الغسل في درجات حرارة عالية أو أثناء دورة التنشيف يكون ساخنًا.

- قد ينتج عن هذا الأمر وجود حروق أو إصابات شخصية.

يجب عدم غسل المقاعد أو السجاد أو القماش (*) المضاد للماء أو تنشيفها أو تجفيفها ما لم يكن جهازك يتضمن برنامجًا خاصًا لغسل هذه العناصر.

- يجب عدم غسل السجاد السميك أو الصلب حتى في حالة وجود علامة الغسالة على علامة العناية.
- قد يؤدي هذا الأمر إلى وجود إصابة أو تلف الغسالة أو الحوائط أو الأرضية أو الملابس نتيجة للاهتزازات غير الطبيعية.

* المفروشات الصوفية أو أغطية الأمطار أو سترات الصيد أو بنطال التزلج أو حقائب النوم أو الحفاضات وأغطية الدراجات والدراجات البخارية والسيارات وما إلى ذلك.

يجب عدم تشغيل الغسالة في حالة عدم وجود درج المسحوق.

- قد ينتج عن هذا الأمر وجود صدمة كهربية أو إصابة نتيجة لتسريب الماء.

يجب عدم لمس الحوض من الداخل أثناء عملية التنشيف أو بعدها مباشرةً حيث إنه يكون ساخناً.

- قد ينتج عن هذا الأمر الإصابة بالحروق.

يجب عدم وضع يديك في درج المسحوق بعد فتحه.

- قد ينتج عن هذا إصابات شخصية حيث يمكن إصابة يديك بواسطة جهاز إدخال المسحوق. تجنب وضع أي أشياء (مثل الأحذية وبقايا الطعام والحيوانات) غير الملابس بداخل الغسالة.
- قد يؤدي هذا الأمر إلى تلف الغسالة أو الإصابة والموت في حالة وجود حيوانات أليفة نتيجة للاهتزازات غير الطبيعية.

يجب عدم الضغط على الأزرار باستخدام كائنات حادة مثل المسامير أو السكاكين أو الأظافر وما إلى ذلك.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو إصابة.

يُحظر غسل الملابس التي تحتوي على زيوت أو كريمات أو مستحضرات، والتي تكون في الغالب موجودة في المستحضرات الجلدية أو عيادات التدليك.

- قد ينتج عن هذا الأمر تشوه الحاجز المطاطي وتسريب الماء.

يجب عدم ترك أي كائنات معدنية مثل الدبابيس أو بنس الشعر أو مواد التبييض في الحوض لفترات طويلة من الوقت.

- قد يؤدي هذا الأمر إلى صدأ الحوض.
- وفي حالة ظهور الصدأ على سطح الأنبوب، يُفضل تنظيف سطح الأنبوب باستخدام سائل تنظيف (عادي) وإسفنج في تنظيفه. يجب عدم استخدام فرشاة معدنية نهائياً.

يجب عدم استخدام سائل التنظيف بشكل مباشر. كما يجب عدم غسل الغسيل أو شطفه أو تنشيفه إذا كان يتضمن مسحوق للتنظيف الجاف.

- قد يؤدي هذا الأمر إلى وجود اشتعال فوري نتيجة للحرارة الناتجة عن تأكسد الزيت.

يجب عدم استخدام الماء القادم من أجهزة تبريد/تسخين الماء.

- قد ينتج عن هذا الأمر حدوث مشاكل في الغسالة.

WD856U4SAGD-03223D-06_AR.indd 12 2015/6/1 12:05:45

يجب عدم استخدام صابون غسل اليدين الطبيعي مع الغسالة.
- ففي حالة التراكم والتصلب داخل الغسالة. قد تحدث مشاكل تتعلق بالمنتج مثل تغيير اللون أو الصدأ أو وجود رائحة سيئة.

يجب عدم غسل أنواع من الغسيل من المفروشات في شبكة الغسيل.
- يجب وضع الجوارب والصدريات في شبكة الغسيل وغسلها مع غسيل أخر.
- يؤدي الفشل في الالتزام بهذا الأمر إلى وجود إصابة نتيجة للاهتزازات غير الطبيعية.

لا تستخدم مسحوق غسيل صلب.
- فقد يحدث تسريب للماء في حالة تراكمه داخل الغسالة.

بالنسبة للغسالات التي تحتوي على فتحات تهوية بقاعدتها. يجب تجنب سد السجاد أو أية عوائق أخرى لهذه الفتحات.

تأكد من تفريغ جيوب الملابس التي سيتم غسلها.
- قد تتسبب الأشياء الصلبة والحادة مثل العملات المعدنية أو الدبابيس أو المسامير أو البراغي أو الأحجار في إحداث أضرار بالغة بالجهاز.

يجب عدم غسل الملابس المزودة بإبزيمات أو أزرار كبيرة الحجم أو الأشياء المعدنية الأخرى ثقيلة الوزن.

علامات التحذير الخطيرة الخاصة بالتنظيف

يجب عدم تنظيف الجهاز عن طريق رش الماء فوق الجهاز مباشرةً.
لا تقم باستخدام منظف يحتوي على حمض قوي.
يجب عدم استخدام البنزين أو التمر أو الكحول لتنظيف الجهاز.
- قد ينتج عن هذا الأمر وجود تغيير في اللون أو تشويه أو صدمة كهربية أو حريق.

قم بفصل قابس الجهاز من مقبس الحائط قبل تنظيفه أو صيانته.
- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.

WD856U4SAGD-03223D-06_AR.indd 13 2015/6/1 12:05:45

المحتويات

إعداد الغسالة ١٥

١٥ **فحص الأجزاء**
١٦ **استيفاء متطلبات التركيب**
١٦ مصدر الطاقة الكهربائية والتوصيل الأرضي
١٦ توريد الماء
١٧ التصريف
١٧ سطح الأرضية
١٧ درجة الحرارة المحيطة
١٧ تركيب القنطرة أو الخزانة
١٧ **تركيب الغسالة**

غسل الملابس ٢٣

٢٣ **الغسل للمرة الأولى**
٢٣ **إرشادات أساسية**
٢٤ **استخدام لوحة التحكم**
٢٧ التأمين ضد عبث الأطفال
٢٧ إيقاف تشغيل الصوت
٢٧ Delay End (تأجيل التشغيل)
٢٨ وظيفة التصريف فقط
٢٨ الدورة المفضلة
٢٩ Eco Bubble (غسيل الفقاعات)
٣٠ AIR WASH (غسيل هوائي)
٣١ **استخدام الدورة الجافة**
٣٢ غسل الملابس باستخدام قرص تحديد الدورة
٣٣ غسل الملابس يدوياً
٣٣ **دليل غسل الملابس**
٣٤ **معلومات حول مسحوق الغسيل والمواد الإضافية**
٣٤ ما هو مسحوق الغسيل الذي يمكنك استخدامه
٣٥ درج مسحوق الغسيل
٣٥ المنظف السائل (متوفر بطرازات محددة)

تنظيف الغسالة وصيانتها ٣٦

٣٦ **ECO DRUM CLEAN (تنظيف الحوض)**
٣٧ **تصريف الماء من الغسالة عند الطوارئ**
٣٨ **تنظيف مصفاة المخلفات**
٣٨ **تنظيف الأسطح الخارجية**
٣٩ **تنظيف درج مسحوق الغسيل والجزء الداخلي منه**
٣٩ **تنظيف المصفاة الشبكية المتصلة بخرطوم الماء**
٤٠ **إصلاح جهاز غسالة متجمد**
٤٠ **تخزين الغسالة**

استكشاف المشاكل وإصلاحها ورموز المعلومات ٤١

٤١ **تحقق مما يلي إذا كانت الغسالة...**
٤٢ **رموز المعلومات**

جدول الدورات ٤٣

٤٣ **جدول الدورات**

الملحق ٤٤

٤٤ **جدول العناية بالأقمشة**
٤٤ **حماية البيئة**
٤٥ **المواصفات**

WD856U4SAGD-03223D-06_AR.indd 14 2015/6/1 12:05:45

إعداد الغسالة

تأكد من إتباع القائم بالتركيب لهذه الإرشادات بدقة حتى تعمل الغسالة الجديدة بشكل صحيح ولتجنب حدوث إصابات عند القيام بالغسل.

فحص الأجزاء

أخرج الغسالة بحرص من الصندوق وتأكد من وجود كافة الأجزاء الموضحة أدناه. في حالة تلف الغسالة أثناء عملية الشحن، أو عدم استلامك لكافة الأجزاء، قم بالاتصال بخدمة عملاء Samsung أو الموزع المعتمد لدى Samsung.

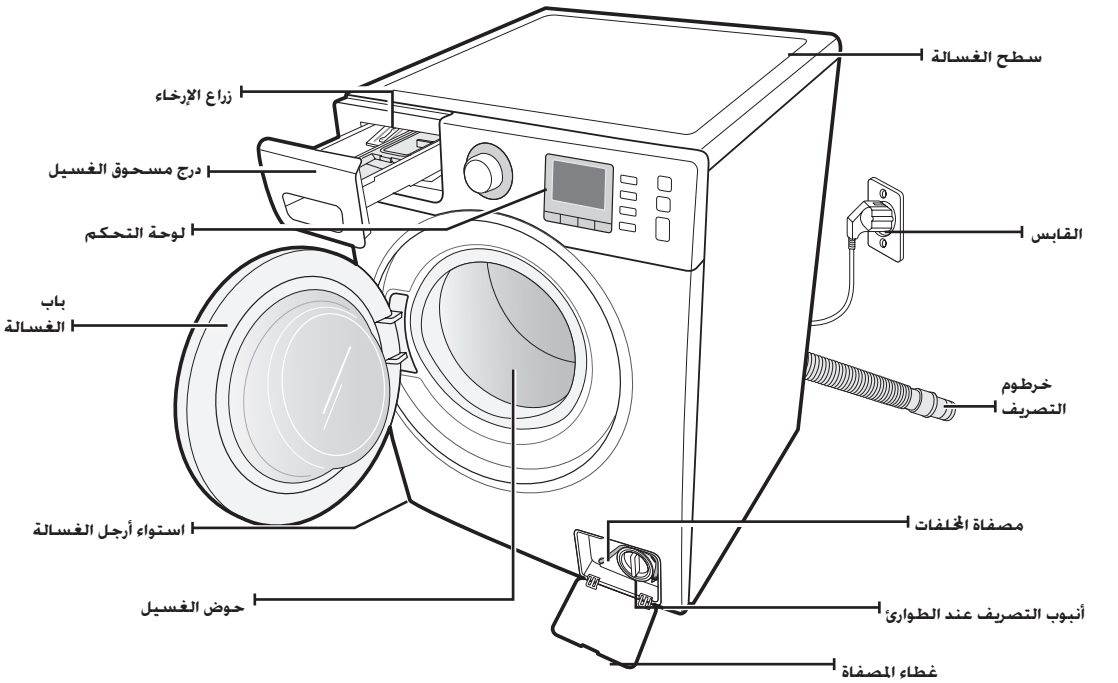

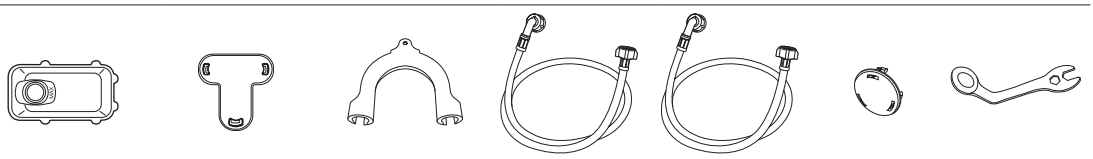

مفاتيح الربط	أغطية مفاتيح المسامير	بارد	ساخن(طرازات محددة)	حامل الخرطوم	مثبت الغطاء (طرازات محددة)	درج المنظف السائل(طرازات محددة)
		خرطوم توريد الماء				

• **أغطية مفاتيح المسامير** : يعتمد عدد أغطية فتحات المسامير على الطراز (من ٣ إلى ٥ أغطية).

WD856U4SAGD-03223D-06_AR.indd 15 2015/6/1 12:05:46

إعداد الغسالة

استيفاء متطلبات التركيب

مصدر الطاقة الكهربائية والتوصيل الأرضي

⚠ تحذير
ممنوع استخدام كبلات إضافية.
استخدم سلك التيار الكهربائي المرفق مع الغسالة فقط.

عند الإعداد لعملية التركيب، تأكد أن سلك التيار الكهربائي يوفر:

- قاطع دائرة كهربائية أو منصهر بقدرة ٢٣٠ فولط تيار متردد / ٦٠ هرتز
- دائرة كهربائية فرعية لتشغيل الغسالة فقط

يجب توصيل الغسالة بمأخذ أرضي بشكل صحيح. وفي حالة حدوث خلل أو تعطل في الأداء، يعمل التوصيل الأرضي على تقليل خطورة التعرض لصدمة كهربائية وذلك بتوفير مسار أقل مقاومة للتيار الكهربائي.

يتم تزويد الغسالة بسلك تيار كهربائي به ثلاثة قوابس شوكية أرضية لاستخدامها بشكل صحيح في المقبس الأرضي المُركب بشكل صحيح.

لا تقم بتوصيل السلك الأرضي بخطوط مواسير السباكة البلاستيكية، أو خطوط الغاز، أو مواسير الماء الساخن.

فقد يؤدي التوصيل غير الصحيح للموصل الأرضي الخاص بالغسالة إلى حدوث صدمة كهربائية.

استشر فني كهربائي مؤهل أو فني صيانة إذا لم تكن متأكداً من صحة التوصيل الأرضي للغسالة. يحظر استخدام قابس آخر غير المرفق مع الغسالة. وفي حالة عدم ملاءمته مع مأخذ التيار، استعن بفني كهربائي مؤهل لتركيب مأخذ مناسب.

توريد الماء

يتم ملء الغسالة بشكل سليم عندما يكون ضغط الماء ٥٠ ~٨٠٠ كيلوباسكال. قد يتسبب ضغط الماء الأقل من ٥٠ كيلوباسكال في تلف صمام الماء مما يؤدي إلى عدم السماح بإغلاقه كلياً. أو قد تستغرق الغسالة وقتًا أطول مما تسمح به عناصر التحكم لملئها، مما ينتج عنه إيقاف تشغيل الغسالة. (تم تضمين نظام تحديد وقت ملء الغسالة في عناصر التحكم والذي تم تصميمه للحد من عمليات تدفق/ فيضان الماء في حالة ارتخاء الخرطوم الداخلي.)

يجب أن تكون صنابير الماء على بُعد ١٢٠ سم من الجانب الخلفي للغسالة لتسهيل وصول خراطيم صنابير الماء المرفقة إلى الغسالة.

تقوم معظم متاجر توريد المواسير ببيع خراطيم صنابير الماء بمختلف أطوالها التي تصل إلى ١٠ أقدام (٣٠٥ سم).

يمكنك تقليل مخاطر تسرب الماء أو تلوثه عن طريق:

- تيسير وصول الخراطيم إلى صنابير الماء.
- إغلاق الصنابير في حالة عدم تشغيل الغسالة.
- قم بفحص دوري للتأكد من أن مثبتات الخرطوم تسرب الماء.

⚠ تحذير
قم بفحص كافة التوصيلات الموجودة في صمام وصنابير الماء للتحقق مما إذا كانت هناك أي تسريبات قبل استخدام الغسالة للمرة الأولى.

WD856U4SAGD-03223D-06_AR.indd 16 2015/6/1 12:05:46

التصريف

توصي Samsung باستخدام ماسورة رأسية يصل ارتفاعها إلى ٦٥ سم. يجب توجيه خرطوم التصريف باستخدام مشبك خرطوم التصريف إلى اتجاه الماسورة الرأسية. يجب أن تكون الماسورة الرأسية كبيرة بدرجة كافية لإدخال القطر الخارجي لخرطوم التصريف. يقوم المصنع بإرفاق خرطوم التصريف.

سطح الأرضية

يجب تثبيت الغسالة على سطح ثابت وصلب للحصول على أفضل أداء. قد تحتاج الأسطح الخشبية إلى تقويتها لتقليل الاهتزاز و/أو الأحمال غير المتزنة. يكون السجاد وأسطح البلاط الناعمة بمثابة عوامل مساهمة في عمليات الاهتزاز واحتمالية حَرك الغسالة بشكل طفيف أثناء دورة التنشيف.

لا تقم بتركيب الغسالة على أرضية أو بنية ضعيفة.

درجة الحرارة المحيطة

لا تقم بتركيب الغسالة في مناطق قد يتجمد فيها الماء، حيث أن الغسالة تحتفظ دومًا ببعض الماء في صمام الماء والمضخة وأجزاء من الخرطوم. يمكن أن يتسبب الماء المتجمد الموجود في المواسير في إلحاق ضرر بالأحزمة والمضخة والمكونات الأخرى.

تركيب القنطرة أو الخزانة

لتشغيل الغسالة بشكل آمن وسليم، يجب توفير الحد الأدنى من المساحات بالنسبة إلى ما يلي:

الجوانب - ٢٥ ملليمتر
الجانب الخلفي - ٥٠ ملليمتر
الجزء العلوي - ٢٥ ملليمتر
الواجهة - ٤٦٥ ملليمتر

في حالة تركيب الغسالة والمجفف معاً، يجب أن يكون بالجانب العلوي للقنطرة أو الخزانة فتحة هواء خالية قدرها ٤٦٥ ملليمتر على الأقل. لا تتطلب الغسالة وحدها فتحة هواء بعينها.

تركيب الغسالة

الخطوة رقم ١

اختيار مكان الغسالة

قبل تركيب الغسالة، تأكد من توفر ما يلي في المكان الذي قمت باختياره:

- سطح صلب ومستوي دون وجود سجاد أو بلاط قد يعوق عملية التهوية
- مكان بعيد عن أشعة الشمس المباشرة
- تتوفر به تهوية كافية
- لن يصل إلى مرحلة التجمد (أقل من ٠ درجة مئوية)
- يكون بعيدًا عن مصادر الحرارة مثل البترول أو الغاز
- تتوفر به مساحة كافية حتى لا يتم وضع الغسالة على سلك الطاقة

WD856U4SAGD-03223D-06_AR.indd 17 2015/6/1 12:05:46

إعداد الغسالة

الخطوة رقم ٢

إزالة مسامير الشحن

قبل تركيب الغسالة، يجب إزالة كافة مسامير الشحن من اللوحة الخلفية للجهاز.

١. قم بفك جميع المسامير بواسطة مفتاح الربط المرفق مع الجهاز.

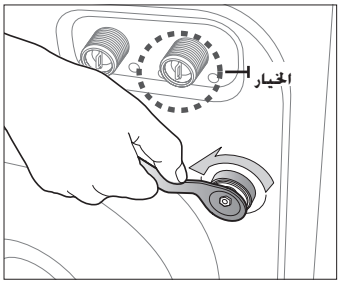

٢. امسك الصواميل بواسطة مفتاح الربط واسحبها من خلال الجزء العريض للفتحة. كرر ذلك لإزالة كل مسمار.

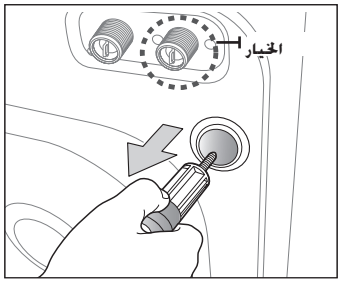

٣. قم بتغطية جميع الفتحات باستخدام الأغطية البلاستيكية المرفقة مع الجهاز.

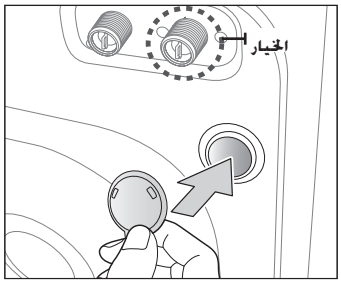

٤. قم بحفظ صواميل الشحن في مكان بعيد آمن حيث قد تحتاج إلى نقل الغسالة إلى مكان آخر في المستقبل.

تحذير ⚠ قد تشكل مواد التعبئة خطورة على الأطفال؛ احتفظ بكافة مواد التعبئة (الأكياس البلاستيكية والمواد المصنوعة من مادة البوليستيرين، الخ.) بعيداً عن متناول الأطفال.

قم بإدخال مثبت الغطاء، (أحد الملحقات الموجودة داخل عبوة الفينيل)، في الفتحة التي قمت بإخراج سلك الكهرباء منها بالجانب الخلفي للمنتج.

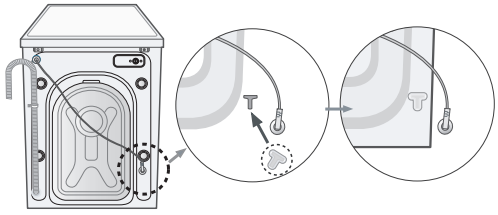

WD856U4SAGD-03223D-06_AR.indd 18 2015/6/1 12:05:46

الخطوة رقم ٣

ضبط استواء أرجل الغسالة

عند تركيب الغسالة، تأكد من توصيل سلك الطاقة وخرطوم توريد الماء وخرطوم التصريف بسهولة.

١. ضع الغسالة في المكان المحدد.

٢. اجعل الغسالة مستوية عن طريق لف الأقدام المساوية إلى الداخل والخارج يدويًا كما هو مطلوب.

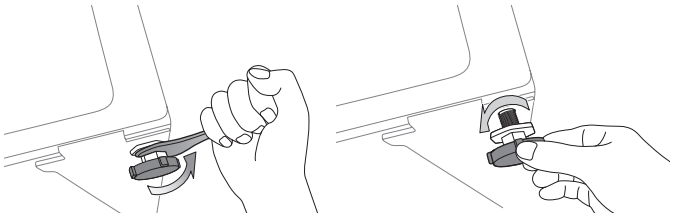

٣. عند استواء الغسالة، أحكم ربط الصواميل باستخدام مفتاح الربط المرفق مع الغسالة.

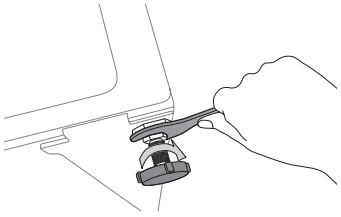

الخطوة رقم ٤

توصيل الماء والخرطوم

توصيل خرطوم تزويد الماء

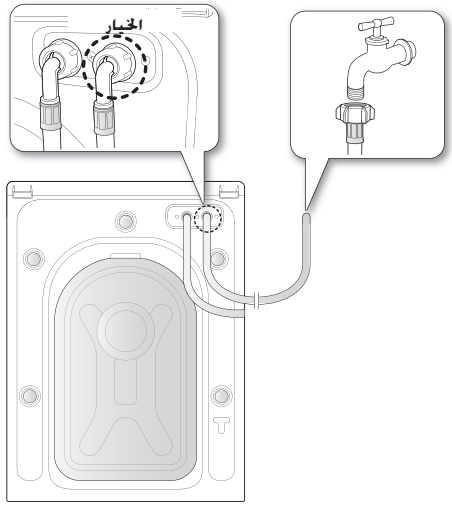

١. استخدم مثبت الذراع الذي على شكل حرف L الخاص بخرطوم توريد الماء البارد ووصله إلى مدخل توريد الماء البارد الموجود في الجانب الخلفي من الغسالة. وأحكم ربطه يدويًا.

يجب توصيل أحد طرفي خرطوم توريد الماء بالغسالة وتوصيل الطرف الآخر للخرطوم بصنبور الماء. لا تجذب خرطوم توريد الماء. إذا كان الخرطوم قصيراً للغاية، استبدله بخرطوم أطول يتحمل الضغط العالي.

٢. صل الطرف الآخر لخرطوم توريد الماء البارد بصنبور الماء البارد وأحكم تثبيته يدويًا. يمكنك، إذا لزم الأمر، إعادة توصيل خرطوم الماء بالغسالة من خلال إرخاء مثبت الخرطوم ولفه وإعادة ربطه بإحكام.

بالنسبة للطرازات المحددة المزودة بمدخل إضافي لتوريد الماء الساخن:

١. استخدم مثبت الذراع الذي على شكل L الأحمر الخاص بخرطوم توريد الماء الساخن ووصله إلى مدخل توريد الماء الساخن الموجود في الجانب الخلفي من الغسالة. وأحكم ربطه يدويًا.
٢. صل الطرف الآخر لخرطوم توريد الماء الساخن بصنبور الماء الساخن وأحكم تثبيته يدويًا.
٣. استخدم قطعة على شكل Y إذا أردت استخدام الماء البارد فقط.

WD856U4SAGD-03223D-06_AR.indd 19 2015/6/1 12:05:47

إعداد الغسالة

توصيل خرطوم توريد الماء

١. قم بإزالة المحول من خرطوم تزويد الماء.

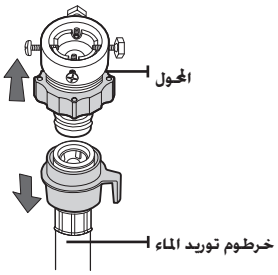

٢. أولاً، باستخدام مفك براغي من نوع "+"، قم بخلخلة المسامير الأربعة الموجودة بالمحول. ثم أخرج المحول واجعل الجزء (٢) باتجاه السهم حتى تتواجد مسافة مقدارها ٥ مم بينهما.

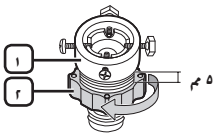

٣. قم بتوصيل المحول بصنبور الماء عن طريق ربط المسامير بإحكام مع ترك المحول يتدلى إلى أسفل.
اجعل الجزء (٢) باتجاه السهم ووصل (١) و (٢).

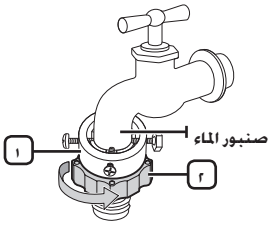

٤. صل خرطوم تزويد الماء بالمحول. عند إرخاء الجزء (٣)، يتصل الخرطوم بالمحول تلقائياً محدثاً صوت "نقرة".

بعد توصيل خرطوم توريد الماء بالمحول، تأكد من توصيله بشكل صحيح عن طريق سحب خرطوم توريد الماء لأسفل.

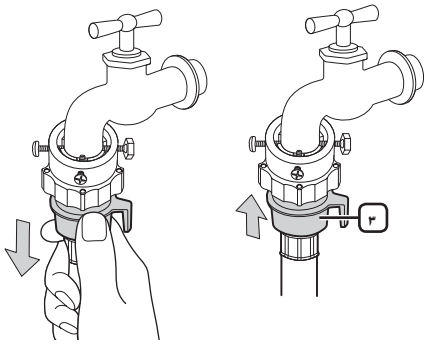

٥. قم بتوصيل الطرف الآخر من خرطوم توريد الماء بصمام دخول الماء الموجود بالجانب الخلفي من الغسالة. لف خرطوم تزويد الماء في اتجاه عقارب الساعة.

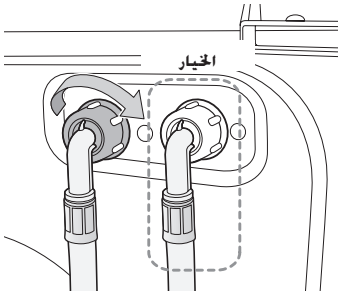

WD856U4SAGD-03223D-06_AR.indd 20 2015/6/1 12:05:47

٦. قم بتشغيل مصدر توريد الماء وتأكد من عدم وجود تسريبات من صمام الماء أو الصنبور أو المحول. قم بتكرار الخطوات السابقة، في حالة تسريب الماء.

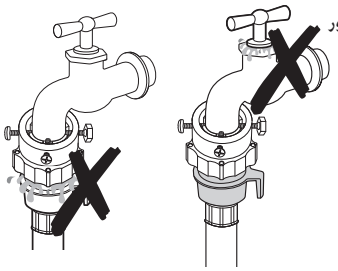

⚠ تحذير

لا تستخدم الغسالة في حالة تسريب الماء، فقد يتسبب ذلك في حدوث صعقة كهربائية أو إصابة جسدية.

- إذا كان صنبور الماء من نوع فلاووظ، قم بتوصيل خرطوم توريد الماء بالصنبور كما هو مبين.

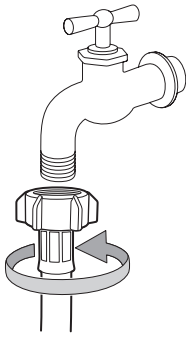

استخدم صنبور من النوع العادي لتوريد الماء. إذا كان الصنبور مربعاً أو كبيراً جداً، أزل الحلقة الفاصلة قبل إدخال الصنبور في المحول.

توصيل خرطوم المياه (طرازات محددة)

تم تصميم خرطوم المياه لمنع تسرب المياه تماماً.

ويتم توصيله بخرطوم توريد المياه وسيعمل على إيقاف تدفق المياه تلقائيًا في حالة تلف الخرطوم. كما يتم عرض مؤشر تحذير.

- صل خرطوم تزويد الماء بصنبور الماء كما هو موضح.

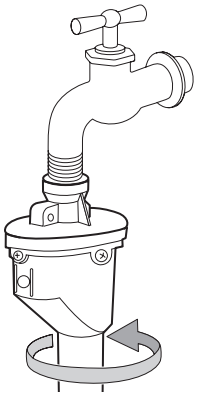

WD856U4SAGD-03223D-06_AR.indd 21 2015/6/1 12:05:47

إعداد الغسالة

توصيل خرطوم التصريف

يمكنك وضع نهاية خرطوم التصريف بثلاث طرق:

١. **فوق حافة حوض الغسيل:** يجب وضع خرطوم التصريف على ارتفاع يتراوح بين ٦٠ و٩٠ سم. للإبقاء على انثناء خرطوم التصريف. استخدم ماسك الخرطوم البلاستيكي المرفق. ثبت الماسك على الجدار بواسطة خطاف أو ثبته في الصنبور بواسطة سلك أو حبل لمنع سقوط خرطوم التصريف على الأرض.

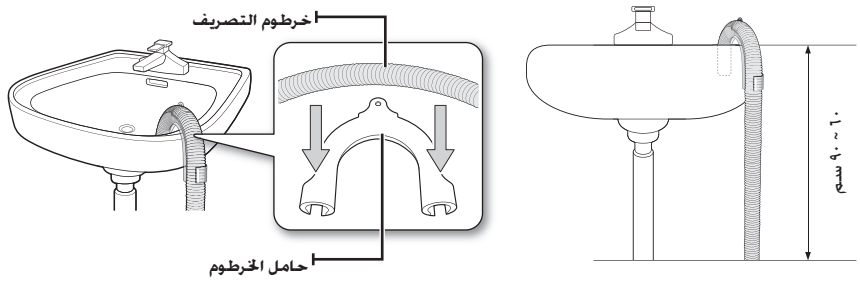

٢. **في فرع أنبوب تصريف الحوض:** يجب أن يكون فرع أنبوب التصريف فوق سباكة الحوض بحيث يكون طرف الخرطوم على ارتفاع ٦٠ سم على الأقل عن الأرض.

٣. **في أنبوب تصريف:** توصي Samsung باستخدام أنبوب عمودي على ارتفاع ٦٥ سم؛ على ألا يقل طوله عن ٦٠ سم ولا يزيد عن ٩٠ سم.

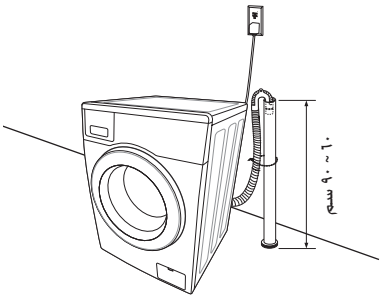

يتطلب خرطوم تصريف الماسورة الرأسية;
- بحد أدنى لقطر الدائرة ٥ سم.
- الحد الأدنى لسعة الجرف ٦٠ متر في الدقيقة.

الخطوة رقم ٥

تشغيل الغسالة

قم بتوصيل سلك الطاقة بمقبس حائط معتمد كمخرج تيار كهربائي بقدرة من ٢٣٠ فولط تيار متردد /٦٠ هرتز محمي بمنصهر أو قاطع دائرة. (لمزيد من المعلومات حول متطلبات التوصيل الكهربائي والتوصيل الأرضي. راجع صفحة رقم ١٦.)

اختبار تشغيل

تأكد من أنك قمت بتركيب الغسالة الخاصة بك بطريقة صحيحة من خلال تشغيل دورة **RINSE+SPIN (دوران+شطف)** بعد الانتهاء من التركيب.

الخطوة رقم ٦

وضع المعايرة

تكتشف غسالة Samsung وزن الغسيل تلقائيًا. لاكتشاف الوزن بطريقة أفضل دقة. الرجاء تشغيل "وضع المعايرة" بعد التركيب. يتم تشغيل وضع المعايرة باتباع الخطوات أدناه.

١. قم بإزالة الغسيل أو أي محتويات في الغسالة وقم بإيقاف تشغيلها.

٢. اضغط على زر .**Temp (درجة الحرارة)** . وزر **Delay End (تأجيل التشغيل)** في وقت واحد واضغط على زر **Power (الطاقة)** أيضاً. بعد ذلك. شغل الغسالة.شغل وضع المعايرة.هنا تظهر رسالة "CLB".

٣. اضغط على الزر **Start/Pause (بدأ/أيقاف)** لتنشيط "وضع المعايرة".

٤. تدور الحاوية في اتجاه عقارب الساعة وضد عقارب الساعة لمدة ٣ دقائق.

٥. عند الانتهاء من ضبط "وضع المعايرة". تظهر الرسالة " "END/0(En) (اكتملت النهاية/الدورة) ويتم إيقاف تشغيل الغسالة تلقائيًا. الغسالة جاهزة للاستخدام الآن.

WD856U4SAGD-03223D-06_AR.indd 22 2015/6/1 12:05:48

غسل الملابس

مع الغسالة الجديدة من Samsung، يقوم الجزء الأكثر صلابة بتحديد الكمية التي يجب غسلها أولاً.

الغسل للمرة الأولى

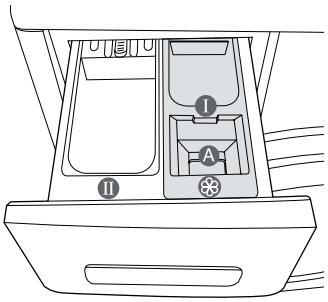

قبل غسل الملابس للمرة الأولى، يجب تشغيل الجهاز دورة كاملة (أي بدون ملابس).

١. اضغط على الزر **Power (الطاقة)**.
٢. أضف كمية قليلة من مسحوق الغسيل في الجزء المخصص له Ⅱ في درج مسحوق الغسيل.
٣. قم بتزويد الغسالة بالماء.
٤. اضغط على الزر **Start/Pause (بدأ/أيقاف)**.

يؤدي ذلك إلى إزالة الماء المتبقي في الغسالة نتيجة التشغيل الاختباري الذي قامت به الشركة المصنعة للجهاز.

حجيرة Ⅰ: مسحوق للغسل الأولي أو النشا.

حجيرة Ⅱ: مسحوق الغسيل لدورة الغسل الرئيسية ومواد تنقيه الماء ومواد ما قبل النقع ومادة التبييض ومواد إزالة البقع.

قم باستخدام درج المنظف السائل لوضع المنظف السائل (راجع الصفحة ٣٥ بدليل الطراز المماثل). لا تقم بإضافة مسحوق التنظيف بداخل درج المنظف السائل.

حجيرة ❀: المواد الإضافية، مثل مكون أو منعم الأقمشة (لا تتجاوز الحافة السلفية (الحد الأقصى) لـ "A")

إرشادات أساسية

١. قم بوضع الملابس في الغسالة.

⚠ تحذير لا تتجاوز الوزن المحدد للغسالة. لتحديد سعة الوزن لنوع الملابس التي ترغب في غسلها، راجع الجدول الموجود في صفحة رقم ٣٣-٣٤.

- تأكد من أن الملابس غير عالقة بالباب، حيث قد يؤدي ذلك إلى تسرب الماء.
- قد يتبقي مسحوق الغسيل في الجزء المطاطي الأمامي للغسالة بعد دورة الغسيل. قم بإزالة أي مسحوق متبقي، لأن ذلك قد يسبب تسرب الماء.
- احذر لمس الباب الزجاجي عندما تكون الغسالة قيد التشغيل أو لأنها قد تكون ساخنة.
- احذر فتح درج مسحوق الغسيل أو مصفاة المخلفات عندما تكون الغسالة قيد التشغيل لأن قد تتعرض للماء أو البخار الساخن.
- احذر غسل العناصر المقاومة للماء بالدورة العادية فيما عدا برنامج العناية بملابس الخروج.

٢. أغلق الباب حتى يثبت.
٣. قم بتشغيل الغسالة.
٤. قم بإضافة المسحوق والمواد الإضافية إلى درج التوزيع.
٥. حدد الدورة والخيارات المناسبة لكمية الملابس التي تم إضافتها.
سيضيء مؤشر الغسيل وسيظهر وقت الدورة المحدد على اللوحة.
٦. اضغط على الزر **Start/Pause (بدأ/أيقاف)**.

WD856U4SAGD-03223D-06_AR.indd 23 2015/6/1 12:05:48

غسل الملابس

استخدام لوحة التحكم

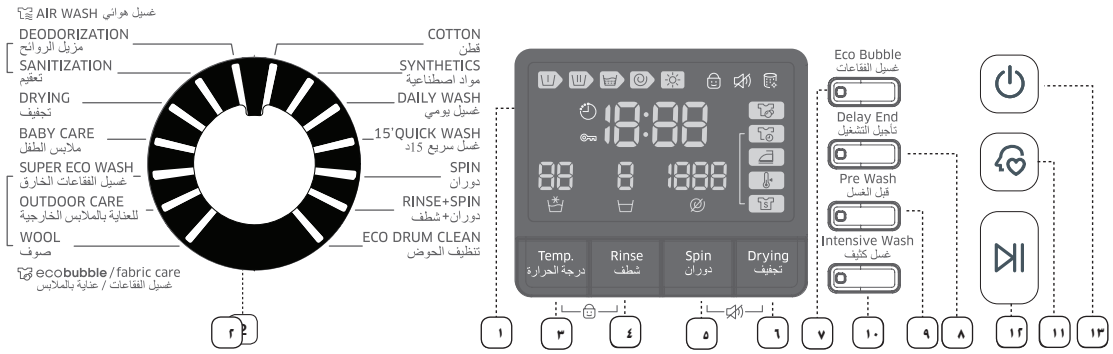

١ **لوحة العرض الرسومية الرقمية**	تعرض الوقت المتبقي لدورة الغسيل وكافة المعلومات الخاصة بالدورة ورسائل الخطأ.
٢ **قرص تحديد الدورة**	اختيار نوع التدوير وسرعة التنشيف للدورة. لمزيد من المعلومات، راجع "غسل الملابس باستخدام قرص تحديد الدورة". (راجع صفحة ٣٢) **COTTON (قطن)** - للملابس القطنية خفيفة أو متوسطة الاتساخ وأغطية السرير ومفارش المائدة والملابس الداخلية والمناشف والقمصان، إلخ. **SYNTHETICS (مواد اصطناعية)** - لغسل البلوزات والقمصان متوسطة أو خفيفة الاتساخ وغيرها من الملابس المصنوعة من البوليستر (الديولين والتريفيرا) ومادة البوليامايد (البيرلون والنيلون) أو الأنسجة الصناعية الأخرى. **DAILY WASH (غسيل يومي)** - للملابس التي تستخدم يوميًا مثل الملابس الداخلية والقمصان. **15' QUICK WASH (غسل سريع 15د)** - لغسل الملابس خفيفة الاتساخ والغسيل الأقل من ٢ كجم التي تحتاجها بسرعة. • يستغرق هذا البرنامج حوالي ١٥ دقيقة كحد أدنى، ولكن قد يختلف من القيم الموضحة حسب ضغط المياه وعسر المياه ودرجة حرارة التزويد بالمياه ودرجة حرارة الغرفة ونوع الغسيل وكميته ودرجة الاتساخ والمسحوق المستخدم للملابس الغير متزنة وحدوث انقطاع التيار الكهربائي والخيارات الإضافية المحددة. • أضف فقط مقدار صغير من المادة المنظفة للمقدار الصغير من الملابس (أقل من ٢ كغم) لدورة الغسيل السريع لمدة ١٥ دقيقة، لأنك لو قمت بإضافة مقدار كبير للغاية من المادة المنظفة، فستظل المادة المنظفة باقية بعد انتهاء الغسيل. **SPIN (دوران)** - إجراء دورة تنشيف إضافية لإزالة المزيد من الماء. **RINSE+SPIN (دوران+شطف)** - للملابس التي تحتاج إلى الشطف فقط أو لإضافة منعم الأقمشة الذي يتم إضافته أثناء الشطف فقط. **ECO DRUM CLEAN (تنظيف الحوض)** - استخدام ميزة تنظيف الأسطوانة. تعمل هذه الميزة على التخلص من الأوساخ والبكتريا الموجودة في الأسطوانة. الاستخدام المنتظم (بعد كل ٤٠ عملية غسل) من الأشياء الموصى بها. لا حاجة لإضافة مادة منظفة أو تبييض. **AIR WASH (غسيل هوائي)** - هذا البرنامج مفيداً لإزالة الروائح السيئة. تبديل Cycle Selector (قرص تحديد الدورة) بين أنماط التشغيل التالية: (DEODORIZATION (مزيل الروائح) ←SANITIZATION (تعقيم)) • **DEODORIZATION (مزيل الروائح)** - تقليل نسبة الروائح السيئة من الملابس • **SANITIZATION (تعقيم)** - العمل على إزالة الروائح الكريهة من الملابس وتطهيرها بواسطة إجراء الغسيل الهوائي مع درجة حرارة أعلى. **DRYING (تجفيف)** - حدده لتجفيف الملابس أوتوماتيكياً بالكشف عن مقدار ووزن الملابس المغسولة.

WD856U4SAGD-03223D-06_AR.indd 24 2015/6/1 12:05:49

	BABY CARE (ملابس الطفل) - تضمن درجات حرارة الغسل العالية ودورات الشطف الإضافية عدم وجود بقايا لمسحوق الغسيل في الملابس رفيعة السمك. **SUPER ECO WASH (غسيل الفقاعات الخارق)** - تقوم Eco Bubble (غسيل الفقاعات) ذات درجة الحرارة المنخفضة بضمان تحقيق أفضل نتائج للغسيل بينما تقوم بتوفير الطاقة بشكل فعّال. **OUTDOOR CARE (للعناية بالملابس الخارجية)** - للغسيل الخارجي مثل الملابس التسلق وملابس التزحلق والملابس الرياضية. إلى جانب توفر لمسات المعالجة الفعّالة للمنسوجات والألياف مثل الألياف اللدنة والقماش القابل للتمدد والألياف الدقيقة. **WOOL (صوف)** - تستخدم هذه الدورة لغسل الملابس الصوفية التي يسمح بوضعها في الغسالة فقط. يجب أن تقل الحمولة عن ٢,٠ كجم. • تتم دورة غسيل WOOL (صوف) باستخدام عملية الاهتزاز الخفيف. وأثناء عملية الغسيل، تستمر عمليتا الاهتزاز الخفيف والنقع لحماية الألياف الصوفية من الانكماش / التلف وللحصول على نظافة فائقة بسهولة. ولا تعد عملية التوقف هذه مشكلة. • يُنصح باستخدام مسحوق تنظيف عادي لدورة WOOL (صوف)، للحصول على نتائج غسيل رائعة ولعناية فائقة بالألياف الصوفية. **Drain Only (التصريف فقط)**- أدر Cycle Selector (قرص تحديد الدورة) إلى وضع Spin (دوران)، اضغط على زر Spin (دوران) بشكل متكرر حتى تتم إضاءة مصباح No spin (بدون تنشيف)(⊘)، ثم اضغط على زر (تشغيل/ إيقاف مؤقت) لتصريف الماء.
٣	**زر تحديد TEMP. (درجة الحرارة)** اضغط على هذا الزر بشكل متكرر للتبديل بين خيارات درجة حرارة الماء المتوفرة: (🚿 : (ماء بارد و ٢٠ و ٣٠ و ٤٠ و ٦٠ و ٩٥ درجة مئوية)
٤	**زر تحديد RINSE (شطف)** اضغط على هذا الزر لإضافة دورات شطف إضافية. الحد الأقصى لعدد دورات الشطف هو خمسة.
٥	**زر تحديد SPIN (دوران)** اضغط على هذا الزر بشكل متكرر للتبديل بين سرعات دورة التنشيف المتوفرة. WD856U4: ⊘ و٤٠٠ و ٨٠٠ و ١٢٠٠ و ١٤٠٠ دورة في الدقيقة **No spin (بدون تنشيف)**(⊘) - تبقى الملابس في الحاوية دون تشغيل دورة التنشيف بعد تصريف الماء النهائي. **Rinse Hold (انتظار الشطف)** (≋) - يبقى الغسيل منقوعاً بالماء في عملية الشطف الأخيرة. يجب تشغيل دورة Drain (تصريف) أو Spin (دوران) قبل أن تتمكن من إخراج الملابس.
٦	**زر تحديد DRYING (تجفيف)** الضغط على هذا الزر يؤدي إلى التبديل بين الخيارات التالية. **Cup Board (خزانة)** 🧺 ← **Low Temp (درجة حرارة منخفضة)** 🌡 ← **Iron (الكي)** ⏥ ← **Time Dry (التجفيف الوقتي)** ⏲ (4:30h ← 4:00 h ← 3:30 h ← 3:00 h ← 2:30 h ← 2:00 h ← 1:30 h ← 1:00 h ← 30min) ← **Cup Board** 🧺 **Cup Board (خزانة)** 🧺 - استخدم هذه الدورة لتجفيف حمولات الملابس الجافة مثل الملابس القطنية والملابس الداخلية والكتانية. **Low Temp (درجة حرارة منخفضة)** 🌡 - تقوم هذه الدورة بحماية الأشياء الحساسة ضد السخونة عند حرارة تجفيف منخفضة. **Iron (الكي)** ⏥ - إنهاء دورة التجفيف في حالة رطبة ملائمة للكي. **Time Dry (التجفيف الوقتي)** ⏲ - تجفيف الملابس المغسولة لمدة زمنية محدودة. • يجب عليك تفادي غسل الملابس التي قد لا يتم تجفيفها لأنه قد يتشوه شكلها حتى عند درجات الحرارة المنخفضة. • خيارات Cup Board (خزانة)، Low Temp (درجة الحرارة المنخفضة)، Iron (الكي)، Time Dry (التجفيف الوقتي) تعمل على الكشف عن وزن الملابس المغسولة لعرض وقت التجفيف الدقيق والقيام بتجفيفها بشكل أكثر تماماً. • قد تتفاوت حالات التجفيف وفقاً لنوع وكمية الملابس المغسولة. • لا يتوفر التجفيف في دورات ECO DRUM CLEAN (تنظيف الحوض) و AIR WASH (غسيل هوائي) و WOOL (صوف).

WD856U4SAGD-03223D-06_AR.indd 25 2015/6/1 12:05:50

غسل الملابس

٧ زر تحديد ECO BUBBLE (غسيل الفقاعات)	يتم افتراضيًا تشغيل تحديد Eco Bubble (غسيل الفقاعات). اضغط على زر الخيار Eco Bubble (غسيل الفقاعات) مرة واحدة لإلغاء التحديد و Bubble Generator OFF (إيقاف تشغيل مولّد الفقاعات) (الموضح باللوحة). ثم اضغط عليه مرة أخرى لتعيين الوظيفة إلى ON (تشغيل). • بعض دورات الغسيل يكون بها الخيار Eco Bubble (غسيل الفقاعات) معيناً إلى ON (تشغيل) (سيتم توضيح ذلك باللوحة. ويتم تشغيل "المولّد" تلقائيًا). • لا تحتاج دورات الغسل الأخرى لهذا الخيار وتقوم "بإيقاف تشغيل المولّد" تلقائيًا. • يمكنك ضبط هذا الخيار يدويًا مع العديد من الدورات. مما يؤثر على وقت الغسل بشكل واضح على اللوحة لتحقيق النتائج المطلوبة (لمزيد من المعلومات الرجاء مراجعة صفحة ٢٩).
٨ زر تحديد DELAY END (تأجيل التشغيل)	اضغط على هذا الزر بشكل متكرر للاختيار من بين خيارات خاصية Delay End (تأجيل التشغيل) المتوفرة (من ٣ ساعات إلى ١٩ ساعة بواقع ساعة واحدة). تشير الساعة المعروضة إلى وقت انتهاء دورة الغسيل.
٩ زر تحديد PREWASH (قبل الغسل)	اضغط على هذا الزر لتحديد غسيل أولي. وتتوفر خاصية Pre-wash (قبل الغسل) مع الدورات التالية فقط: COTTON (قطن) و SYNTHETICS (مواد اصطناعية) DAILY WASH (غسيل يومي) و BABY CARE (ملابس الطفل) و SUPER ECO WASH (غسيل الفقاعات الخارق) .
١٠ زر تحديد INTENSIVE WASH (غسل كثيف)	اضغط على هذا الزر مع الملابس المتسخة بشدة والتي تحتاج إلى الغسل بكثافة. يتم زيادة مدة الدورة لكل الدورات
١١ زر تحديد MY CYCLE (الدورة المفضلة)	اختر الدورة المفضلة لديك بما في ذلك درجة الحرارة والتنشيف ومستوى الاتساخ والخيار. إلخ.
١٢ زر تحديد START/PAUSE (بدأ/ أيقاف)	اضغط لإيقاف الدورة مؤقتاً وإعادة تشغيلها.
١٣ الزر POWER (الطاقة)	اضغط على هذا الزر مرة لتشغيل الغسالة. واضغط عليه مرة أخرى لإيقاف تشغيلها. في حالة عدم الضغط على أي من أزرار الغسالة لمدة تزيد عن ١٠ دقائق أثناء تشغيلها. يتم إيقاف تشغيلها تلقائيًا.

WD856U4SAGD-03223D-06_AR.indd 26 2015/6/1 12:05:50

التأمين ضد عبث الأطفال

تمكّنك وظيفة التأمين ضد عبث الأطفال من قفل الأزرار حتى لا يكون هناك إمكانية لتغيير دورة الغسيل التي قمت باختيارها.

التشغيل/عدم التشغيل

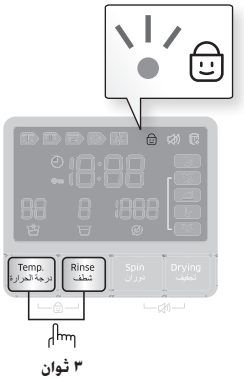

إذا كنت ترغب في تشغيل وظيفة Child Lock (التأمين ضد عبث الأطفال) أو عدم تشغيلها، اضغط على الزرين .**Temp (درجة الحرارة)** و **Rinse (شطف)** في وقت واحد لمدة ٣ ثوان. "ستضيء علامة **Child Lock (التأمين ضد عبث الأطفال)** " عند تشغيل هذه الميزة.

يمكن استخدام زر **Power (الطاقة)** فقط عند تشغيل وظيفة Child Lock (التأمين ضد عبث الأطفال). يستمر تشغيل وظيفة Child Lock (التأمين ضد عبث الأطفال) حتى بعد تشغيل الغسالة وإيقاف تشغيلها أو بعد فصل توصيل سلك التيار الكهربائي وإعادة توصيله.

إيقاف تشغيل الصوت

يمكن تحديد وظيفة Sound Off (إيقاف تشغيل الصوت) مع كافة الدورات. عند تحديد هذه الوظيفة، يتم إيقاف تشغيل الصوت لكافة الدورات. حتى في حالة تشغيل الطاقة أو إيقاف تشغيلها بشكل متكرر، لا يتغير الإعداد الذي تم اختياره.

التشغيل/عدم التشغيل

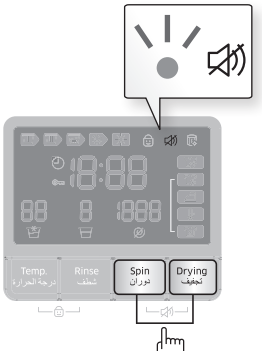

إذا كنت تريد تشغيل وظيفة Sound Off (إيقاف تشغيل الصوت)، اضغط على الزرين **Spin (دوران)** و **Drying (تجفيف)** في وقت واحد لمدة ٣ ثوان. ستضيء علامة "**Sound Off (إيقاف تشغيل الصوت)**" عند تشغيل هذه الخاصية.

Delay End (تأجيل التشغيل)

يمكنك ضبط الغسالة لإنهاء عملية الغسيل تلقائياً في وقت لاحق. قم باختيار تأجيل الوقت من ٣ ساعات حتى ١٩ ساعة.(بزيادة ساعة واحدة). تشير الساعة المعروضة إلى الوقت الذي يتم الانتهاء فيه من عملية الغسل.

١. يمكنك ضبط الغسالة تلقائياً أو يدوياً حسب نوع الملابس التي تريد غسلها.
٢. اضغط على الزر **Delay End (تأجيل التشغيل)** بشكل متكرر حتى تصل إلى وقت التأجيل المطلوب.
٣. اضغط على الزر **Start/Pause (بدأ/أيقاف)**. سيضيء مؤشر **Delay End (تأجيل التشغيل)** ، وتبدأ الساعة بالعد التنازلي حتى تصل إلى الوقت المحدد.
٤. لإلغاء وظيفة Delay End (تأجيل التشغيل)، اضغط على الزر **Power (الطاقة)** ثم قم بتشغيل الغسالة من جديد.

WD856U4SAGD-03223D-06_AR.indd 27 2015/6/1 12:05:56

غسل الملابس

وظيفة التصريف فقط

عندما ترغب في تجفيف الماء فقط من الغسالة الآلية، فقم باتباع التعليمات التالية.

١. اضغط على الزر **Power (الطاقة)**.
٢. أدر Cycle Selector (قرص تحديد الدورة)على وضع Spin (دوران).
٣. اضغط على زر **Spin (دوران)** بشكل متكرر حتى تتم إضاءة مصباح No spin (بدون تنشيف)⊘.
٤. اضغط على الزر **Start/Pause (بدأ/أيقاف)**.

الدورة المفضلة

يتيح لك إمكانية تنشيط الغسل الاعتيادي (درجة الحرارة والتنشيف ومستوى الاتساخ وغيرها) بالضغط على زر مناسب واحد.

عند الضغط على الزر My Cycle (الدورة المفضلة)، يتم استخدام زر **My Cycle (الدورة المفضلة)** لتحميل خيارات My Cycle (الدورة المفضلة) التي تم تحفظها واستخدامها. كما ستومض الإضاءة الخاصة بالخيارات والدورة المختارة.

يمكنك تعيين كافة الخيارات كما يلي بالوضع My Cycle (الدورة المفضلة).

١. قم بتشغيل مصدر توريد الماء.
٢. اضغط على الزر **Power (الطاقة)**.
٣. حدد الدورة باستخدام **Cycle Selector (قرص تحديد الدورة)**.
٤. بعد الانتهاء من تحديد الدورة، قم بتعيين كل خيار تريده.

راجع "جدول الدورة" الموجود بالصفحة ٤٣ للتعرف على إعدادات الخيارات المتوفرة بكل دورة.

٥. ثم يمكنك تخزين الدورة والخيارات المحددة بواسطة الضغط باستمرار على الزر My Cycle (الدورة المفضلة) لمدة أكثر من ٣ ثوانٍ بالوضع My Cycle (الدورة المفضلة). يتم عرض الدورة والخيارات التي قمت بتحديدها في المرة القادمة التي تختار فيها وظيفة My Cycle (الدورة المفضلة).

يمكنك تغيير إعدادات My Cycle (الدورة المفضلة) بواسطة تكرار العملية نفسها المذكورة أعلاه.
يتم عرض الإعداد الأخير الذي قمت باستخدامه في المرة القادمة التي تختار فيها وظيفة My Cycle (الدورة المفضلة).

في حالة الضغط على زر My Cycle (الدورة المفضلة) ثم تركه لمدة ٣ ثوانٍ، يتم ظهور الدورة والخيارات السابقة التي تم حفظها. إذا قمت بالضغط مع الاستمرار على My Cycle (الدورة المفضلة) لمدة ٣ ثوانٍ أو أكثر، يتم حفظ الدورة والخيارات المعينة حاليًا ويومض مؤشر LED لمدة ٣ ثوانٍ.

WD856U4SAGD-03223D-06_AR.indd 28 2015/6/1 12:05:57

Eco Bubble (غسيل الفقاعات)

يُسمح نظام Eco Bubble (غسيل الفقاعات) بتوزيع المسحوق بالتساوي ويعمل على تخلله داخل الملابس بشكلٍ أسرع وأعمق.

الدورة	وظيفة الفقاعات	إلغاء وظيفة الفقاعات
COTTON (قطن) و SYNTHETICS (مواد اصطناعية) و DAILY WASH (غسيل يومي) و QUICK WASH 15' (غسل سريع 15د)	متوفرة	متوفرة
SUPER ECO WASH (غسيل الفقاعات الخارق) و OUTDOOR CARE (للعناية بالملابس الخارجية) و BABY CARE (ملابس الطفل) و WOOL (صوف)		غير متوفرة

- قد يتم تطبيق وظيفة فقاعات مختلفة حسب الدورة.

يعتبر خيار Eco Bubble (غسيل الفقاعات) هو الخيار الافتراضي. اضغط عليها مرة واحدة لإلغاء تحديد خيار الفقاعات. ثم اضغط مرة أخرى لتحديد خيار الفقاعات.

١. افتح الباب. ضع الغسيل بداخل حوض الغسل ثم أغلق الباب.
٢. اضغط على الزر **Power (الطاقة)**.
٣. حدد وظيفة.
٤. ضع كمية مناسبة من المسحوق ومنعم الأقمشة بداخل الحجيرة المناسبة وفقًا لكمية الملابس ثم قم بإغلاق الدرج.

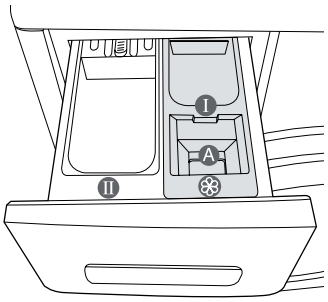

- أضف كمية مناسبة من المسحوق بداخل حجيرة المسحوق (II)، ثم أضف منعم الأقمشة بحجيرة المنعم (❀) الموجودة بأسفل الخط الرئيسي لمنعم الأقمشة مباشرةً. (الحد أقصى) لـ "A"))
- عند تحديد الدورة Prewash (قبل الغسل)، قم بإضافة المسحوق بداخل حجيرة الغسل الأولي (I) كذلك.
- لاستخدام المنظف السائل، اترك درج المنظف السائل بالقاعدة (راجع قسم "المنظف السائل" بصفحة ٣٥).

لا تقم بإضافة مسحوق التنظيف بداخل درج المنظف السائل.

٥. اضغط على الزر Start/Pause (بدأ/أيقاف).
- اضغط على الزر **Start/Pause (بدأ/أيقاف)** لبدء عملية الغسل.
- يتم التعرف على كمية الغسيل تلقائيًا ويتم غسل الملابس.
- حالما يتم بدء عملية تشغيل الغسالة، لا يمكنك إضافة وظيفة الفقاعات أو تحديدها.

- يتم توليد كمية كافية من الفقاعات بواسطة كمية محددة من المسحوق.
- الرجاء تنظيف مصفاة "المخلفات" باستمرار. يساعد التنظيف المستمر بتوليد فقاعات ذات فاعلية.
- قد يتم امتصاص الفقاعات وتبدو ككمية صغيرة وفقًا للمسحوق والملابس.
- بالرغم من أنه يتم توليد الفقاعات بمجرد بدء عملية الغسيل، فقد تستغرق دقائق عديدة للمستخدمين كي يتم مشاهدتها.

WD856U4SAGD-03223D-06_AR.indd 29 2015/6/1 12:05:57

غسل الملابس

AIR WASH (غسيل هوائي)

تتيح وظيفة "AIR WASH (غسيل هوائي)" غسل الملابس دون استخدام ماء بفضل نظام التهوية القوي. تتضمن الملابس التي يمكن تنظيفهاالمعاطف الصوفية والملابس القطنية و البذل والجواكت والسترات. (قطعتان أو أقل(أقل من ١ كجم))

١. افتح الباب، ضع الغسيل في الغسالة ثم أغلق الباب.
٢. اضغط على الزر **Power (الطاقة)**.
٣. حدد **AIR WASH (غسيل هوائي)** بإدارة **Cycle Selector (قرص تحديد الدورة)**.

النمط	وقت الدورة
DEODORIZATION (مزيل الروائح)	٢٩ دقيقة.
SANITIZATION (تعقيم)	٥٩ دقيقة.

- عند اختيار أحد هذه الخيارات، لا يمكن اختيار زر أخر ويمكنك فقط اختيار وقت تأجيل الإنهاء ويقع بين ٣:٠٠ إلى ١٩:٠٠

٤. أغلق الباب واضغط على الزر **Start/Pause (بدأ/أيقاف)**.

- عندما يوجد ماء في الحوض، لن يمكن تحديد **AIR WASH (غسيل هوائي)**. قم بتصريف الماء وحدد **AIR WASH (غسيل هوائي)**.
- اضغط على زر**Start/Pause (بدأ/أيقاف)** أو زر **Power (الطاقة)** لإزالة الملابس المغسولة.
- يمكن استخدام الأوراق المعطرة أو المعطرة بواسطة برامج AIR WASH (غسيل هوائي) لإضافة العطر إلى ملابسك المنعشة (ورقة واحدة لكل شيء أو شيئين).

تجنب AIR WASH (غسيل هوائي) للملابس التالية:
- الملابس الحساسة المصنوعة من الجلد، فرو المنك، الفرو، الحرير، وما شابه ذلك.
- قد تفقد الملابس الداخلية المطرزة بالشرائط، ووسائد مكسوة بزينة "باستخدام الغراء" وبدلات رسمية الزينة التي بها.
- الملابس المزينة بأزرار قد تتعرض للتلف.
- الملابس المقوية قد يتشوه شكلها.
- الشراشف القاسية كالوسادات الخشبية (دعامة العنق)
- الوسادات أو البطانيات المتلئة بالبلاستيك أو النشا بدلاً من القطن
- البطانيات الكهربائية
- بطانيات مصنوعة من الفراء
- البطانيات الضخمة
- وسادات مطاطية

WD856U4SAGD-03223D-06_AR.indd 30 2015/6/1 12:05:57

استخدام الدورة الجافة

الرجاء الرجوع إلى ملصق سعة التجفيف والتأكد من وضع الملابس على مستوى أدنى من الخط المميز من أجل الملابس المجففة التي تزن ٦,٠ كغم .

١. قم بفتح الباب. ضع الملابس بداخل الغسالة وقم بغلق الباب مرة أخرى
٢. قم بالضغط على زر **Power (الطاقة)**. ثم اضغط على زر **Drying (تجفيف)**.
: سيتم تحديد البرنامج القياسي أوتوماتيكياً.
لا يتوفر التجفيف في دورات ECO DRUM CLEAN (تنظيف الحوض) و AIR WASH (غسيل هوائي) و WOOL (صوف).
٣. حدد زر **Drying (تجفيف)** كالتالي.
برامج Drying (تجفيف)

- ستؤدي كل ضغطة على هذا الزر بشكل متكرر إلى تحديد نوع التجفيف في الترتيب التالي:**Cup Board (خزانة)** ← **Low Temp (درجة حرارة منخفضة)** ← **Iron (الكي)** ← **Time Dry (التجفيف الوقتي)** ←
(30min ← 1:00 h ← 1:30 h ← 2:00 h ← 2:30 h ← 3:00 h ← 3:30 h ← 4:00 h ← 4:30h)
← **Cup Board (خزانة)**

نوع التجفيف		المعلومات	الوقت (أقصى وزن)
Auto Drying (التجفيف الأوتوماتيكي)	Cup Board (خزانة)	قياسي: تجفيف الملابس المغسولة.	١٦٠ دقيقة
	Low Temp (درجة حرارة منخفضة)	تجفيف الملابس عند درجة حرارة منخفضة لحماية أنسجة الملابس.	٢٠٠ دقيقة
	Iron (الكي)	لترك الأشياء مبللة بشكل جزئي وبالتالي تسهل عملية كيها.	١٤٠ دقيقة
Time Drying (التجفيف الوقتي)		يمكنك تحديد وقت التجفيف الملائم بحسب قوام الملابس والكمية والرطوبة.	٢٧٠ دقيقة

- بالنسبة لبرامج Auto Drying (التجفيف الأوتوماتيكي)، تعمل هذه الماكينة على عرض Drying Time (وقت التجفيف) أوتوماتيكياً عن طريق استشعار وزن الملابس قبل التجفيف. وضبطها بشكل ملائم.
- **للملابس التي تقل عن ٣,٠ كغم، استخدم Auto Dry (التجفيف الأوتوماتيكي). للملابس التي تزن أكثر من ذلك، الرجاء استخدام Time Dry (التجفيف الوقتي).**
- في حال تحديد دورات العصر والتجفيف، سيتم تحديد سرعة العصر أوتوماتيكياً لزيادة فعالية التجفيف.
- عند استخدام دورة التجفيف، تحقق إذا كان صمام إمداد الماء مفتوحاً.

٤. ضع كمية مناسبة من المادة المنظفة ومنعم أقمشة في درج المادة المنظفة وإغلاقه مرة أخرى.
٥. اضغط على الزر **Start/Pause (بدأ/أيقاف)**.
: يتم تنفيذها أوتوماتيكياً كوظيفة هامة من الغسيل إلى التجفيف.
- يتم تعديل البرنامج المحدد بعد بداية التجفيف.
- في حال عدم تزويد ماء بارد، فلن يتم تنفيذ التجفيف
- إذا كنت ترغب في التجفيف بعد الغسيل اليدوي، فحدد كلا من العصر والتجفيف في وقت واحد.

WD856U4SAGD-03223D-06_AR.indd 31 2015/6/1 12:05:57

غسل الملابس

غسل الملابس باستخدام قرص تحديد الدورة

تتيح الغسالة الجديدة غسل الملابس بسهولة. باستخدام نظام "التحكم الذكي" الأوتوماتيكي من Samsung. عند اختيار أحد برامج الغسيل. تقوم الغسالة بضبط درجة الحرارة ووقت الغسل وسرعات الغسل المناسبة.

١. افتح صنبور الماء الخاص بالحوض.
٢. اضغط على الزر **Power (الطاقة)**.
٣. افتح الباب.
٤. ضع الملابس قطعة بقطعة في الحاوية دون تجاوز سعتها.
٥. أغلق الباب.
٦. أضف مسحوق الغسيل ومنعم القماش ومسحوق الغسل الأولي (إذا لزم الأمر) في الحجيرات الخاصة به.

تتاح خاصية Pre-wash (قبل الغسل) عند تحديد الدورات: COTTON (قطن) و SYNTHETICS (مواد اصطناعية) و DAILY WASH (غسيل يومي) و BABY CARE (ملابس الطفل) و SUPER ECO WASH (غسيل الفقاعات الخارق). وبعد الغسل الأولي ضرورياً فقط في حالة الاتساخ الشديد للملابس.

٧. استخدم **Cycle Selector (قرص تحديد الدورة)** لتحديد الدورة المناسبة وفقاً لنوع المادة: COTTON (قطن) و SYNTHETICS (مواد اصطناعية) و DAILY WASH (غسيل يومي) و QUICK WASH 15' (غسل سريع 15د) و ECO DRUM CLEAN (تنظيف الحوض) و BABY CARE (ملابس الطفل) و SUPER ECO WASH (غسيل الفقاعات الخارق) و OUTDOOR CARE (للعناية بالملابس الخارجية) و WOOL (صوف). سيتم إضاءة المؤشرات المرتبطة بلوحة التحكم.
٨. في هذا الوقت. يمكنك التحكم في درجة حرارة عملية الغسل وحجم الشطف وسرعة التجفيف ووقت التأجيل بالضغط على زر الخيار المناسب.
٩. اضغط على الزر **Start/Pause (بدأ/أيقاف)** وعندها تبدأ الغسالة في العمل. يضيء مؤشر العملية ويظهر الوقت المتبقي للدورة على الشاشة.

خيار الإيقاف

من الممكن إضافة/إزالة قطع الملابس في غضون ٥ دقائق من بدء الغسيل.

١. اضغط على الزر **Start/Pause (بدأ/أيقاف)** لإلغاء قفل الباب.

لا يمكن فتح الباب عندما تكون درجة حرارة الماء عالية جداً أو مستوى الماء عالي جداً.

٢. اضغط على الزر **Start/Pause (بدأ/أيقاف)** لإعادة تشغيل الغسالة.

عند انتهاء الدورة:

بعد انتهاء دورة الغسل بالكامل. يتم إيقاف الغسالة تلقائيًا.

١. افتح الباب.
٢. أخرج الملابس.

WD856U4SAGD-03223D-06_AR.indd 32 2015/6/1 12:05:58

غسل الملابس يدوياً

يمكنك غسل الملابس يدوياً دون استخدام قرص تحديد الدورة.

١. قم بتشغيل مصدر توريد الماء.
٢. اضغط على زر **Power (الطاقة)** الموجود في الغسالة.
٣. افتح الباب.
٤. ضع الملابس قطعة بقطعة في الحاوية دون تجاوز سعتها.
٥. أغلق الباب.
٦. أضف مسحوق الغسيل. وإذا لزم الأمر، أضف منعم الأقمشة أو مسحوق الغسل الأولي في الحجيرات المناسبة.
٧. اضغط على الزر .**Temp (درجة الحرارة)** لتحديد درجة الحرارة المطلوبة.
(: (ماء بارد و ٢٠ و ٣٠ و ٤٠ و ٦٠ و ٩٥ درجة مئوية)
٨. اضغط على الزر **Rinse (شطف)** لتحديد العدد المطلوب لدورات الشطف.
الحد الأقصى لعدد دورات الشطف هو خمسة.
يتم زيادة مدة الغسيل وفقاً لعدد الدورات.
٩. اضغط على الزر **Spin (دوران)** لتحديد سرعة التجفيف.
(: **No Spin (بدون تجفيف)**، : **Rinse Hold (انتظار الشطف)**)
١٠. اضغط على الزر **Delay End (تأجيل التشغيل)** بشكل متكرر للتبديل بين خيارات Delay End (تأجيل التشغيل) المتوفرة (بين ٣ و ١٩ ساعة بإمكانية زيادة ساعة). تشير الساعة المعروضة إلى الوقت الذي يتم الانتهاء فيه من عملية الغسل.
١١. اضغط على الزر **Start/Pause (بدأ/أيقاف)** وعندها تبدأ الغسالة بالدوران.

دليل غسل الملابس

اتبع هذه التعليمات البسيطة للحصول على ملابس أكثر نظافة وأكثر فاعلية.

قم بفحص بطاقة العناية الموجودة على الملابس دوماً قبل الغسل.

افرز الملابس واغسلها وفقاً للمعايير التالية:

- بطاقة العناية: افرز الملابس إلى أقطان وألياف مخلوطة وأقمشة صناعية وملابس حريرية وأصواف ورايون.
- اللون: فم بفصل الملابس البيضاء عن الملابس الملونة. اغسل الملابس الجديدة الملونة كل على حدة.
- الحجم: يعمل وضع الملابس بمختلف أحجامها في مرة واحدة على تحسين عملية الغسل.
- رقة الملمس: اغسل الملابس الرقيقة كل على حدة، باستخدام الدورة Delicate (أنسجة رقيقة) للحصول على ملابس صوفية وستائر وملابس حريرية نقية تبدو جديدة. افحص العلامات الموجودة بالملابس التي تريد غسلها أو راجع جدول العناية بالأقمشة في الملحق.

إفراغ الجيوب

قم بإفراغ كافة جيوب الملابس قبل كل عملية غسل. حيث يمكن أن تتسبب الأشياء الصغيرة والصلبة ذات الأشكال غير المنتظمة مثل العملات المعدنية والشفرات والدبابيس وماسكات الورق في تلف الغسالة. لا تقم بغسل الملابس المزودة بإبزيمات أو أزرار كبيرة الحجم أو الأشياء المعدنية الأخرى ثقيلة الوزن.

قد تتسبب المعادن المستخدمة في الملابس في تلفها وتلف الحوض. اقلب الملابس المزينة بالأزرار والمطرزة على ظهرها قبل غسلها. إذا تركت إبزيمات السراويل والجواكت مفتوحة أثناء الغسل، فإن هذا قد يتسبب في تلف سلة التجفيف. يجب غلق الإبزيمات وتثبيتها بخيط قبل الغسل.

قد تتشابك الملابس ذات الخيوط الطويلة مع ملابس أخرى وقد يؤدي ذلك إلى تلف هذه الملابس. احرص على تثبيت الخيوط قبل بدء الغسل.

الغسل الأولي للملابس القطنية

تقدم لك الغسالة الجديدة باستخدام مساحيق الغسيل الحديثة، أفضل نتائج لعمليات الغسل، ومن ثم فهي تساعدك على توفير الطاقة الكهربائية والوقت والماء والمسحوق. لكن إذا كانت الملابس القطنية شديدة الاتساخ، استخدم الغسل الأولي مع مسحوق الغسيل الذي يحتوي على البروتين.

WD856U4SAGD-03223D-06_AR.indd 33 2015/6/1 12:05:58

غسل الملابس

تحديد سعة وزن الملابس

لا تتجاوز الوزن المحدد للغسالة حيث يؤدي ذلك إلى الحصول على نتائج غير مرضية. استخدم الجدول التالي لتحديد سعة الوزن لنوع الملابس التي تقوم بغسلها.

نوع القماش	سعة الوزن
الطراز	WD856
COTTON (قطن) - متوسط/خفيف الاتساخ - شديدة الاتساخ	٨,٥ كجم
SYNTHETICS (مواد اصطناعية)	٣,٥ كجم
OUTDOOR CARE (للعناية بالملابس الخارجية)	٢,٠ كجم
WOOL (صوف)	٢,٠ كجم

- في حالة عدم توازن الملابس ("UE" يضاء المصباح على الشاشة), وفي هذه الحالة, أعد توزيع الملابس. حيث يؤدي عدم توازن الملابس إلى تقليل فعالية دورة التجفيف.
- عند غسل المفارش أو الألحفة, قد تطول مدة الغسل أو تقل فعالية عملية التجفيف.

تأكد من إدخال حمالات الصدر (التي يمكن غسلها في الماء) في شبكة غسل (يتم شراؤها بشكل منفصل).

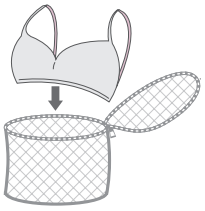

- قد تنكسر الأجزاء المعدنية الموجودة في حمالات الصدر مما قد يؤدي إلى تلف الغسل. لذا يجب عليك أن تتأكد من وضعهم داخل شبكة غسل جيدة.
- قد تتعلق الملابس الصغيرة والخفيفة بالباب مثل الجوارب والقفازات والمنسوجات والمناديل. لذا قم بوضعهم داخل شبكة غسل جيدة.

تنبيه

لا تقم بغسل شبكة الغسل وحدها دون وجود ملابس بها. فقد يؤدي ذلك إلى حدوث اهتزازات غير طبيعية في الغسالة مما قد يتسبب في حدوث إصابات.

معلومات حول مسحوق الغسيل والمواد الإضافية

ما هو مسحوق الغسيل الذي يمكنك استخدامه

يعتمد نوع مسحوق الغسيل الذي تستخدمه على نوع القماش (القطن أو الألياف الصناعية أو الملابس الناعمة أو الصوف), والألوان ودرجة حرارة الماء ودرجة الاتساخ. استخدم دوماً مسحوق الغسيل ذا "الرغوة القليلة" المصمَّم خصيصاً للغسالات الأوتوماتيكية.

اتبع توصيات الشركة المصنعة لمسحوق الغسيل وفقًا لوزن الملابس ودرجة الاتساخ ودرجة نقاء الماء في منطقتك. وإذا لم تكن تعرف ما إذا كان الماء نقيًا أم لا في منطقتك, اتصل بالهيئة المسؤولة عن الماء.

لا تستخدم منظف صلب أو خشن لأنه قد يتبقى في دورة الشطف لأن ذلك قد يتسبب في أداء الغسالة لدورة الشطف بشكل غير صحيح. أو يتسبب في إعاقة تدفق الماء.

الرجاء الانتباه إلى الأمور التالية عند استخدام دورة الملابس الصوفية.

- استخدم منظف سائل معتدل مخصص للملابس الصوفية فقط.
- عند استخدام منظف مسحوق, فقد يبقى على الملابس ويسبب التلف للمادة (الملابس الصوفية).

WD856U4SAGD-03223D-06_AR.indd 34 2015/6/1 12:05:58

درج مسحوق الغسيل

تحتوى الغسالة على حجيرات منفصلة لتوزيع المسحوق ومنعم الأقمشة. قم بإضافة كافة المواد الإضافية الخاصة بالغسيل إلى الحجيرة المناسبة قبل بدء تشغيل الغسالة.

احذر فتح درج مسحوق الغسيل عندما تكون الغسالة قيد التشغيل حيث قد تتعرض للماء أو البخار الساخن.

١. اسحب درج مسحوق الغسيل الموجود على الجانب الأيمن من لوحة التحكم.
٢. قم بإضافة كمية من مسحوق الغسيل الموصى به مباشرة في حجيرة المسحوق Ⅱ قبل تشغيل الغسالة.

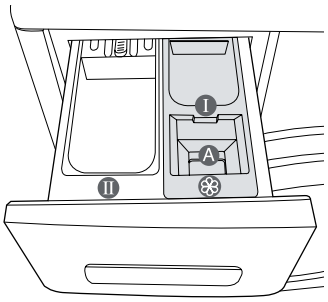

قم باستخدام درج المنظف السائل لوضع المنظف السائل (راجع قسم "المنظف السائل" للطراز المماثل).

- لا تقم بإضافة مسحوق التنظيف بداخل درج المنظف السائل.

٣. قم بإضافة الكمية الموصى بها من منعم الأقمشة في الحجيرة الخاصة به ❀ إذا لزم الأمر. احذر تجاوز خط MAX FILL (الحد الأقصى للتعبئة) Ⓐ.

تنبيه لا تقم بإضافة أي منظف مسحوق/سائل إلى حجيرة المنعّم ❀.

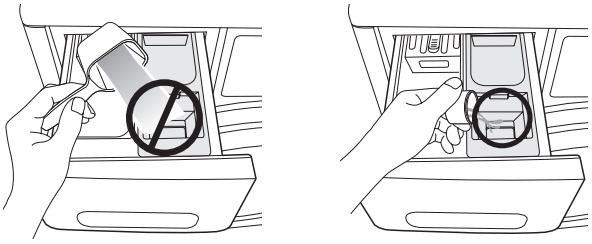

٤. عند استخدام خيار Prewash (قبل الغسل)، قم بإضافة الكمية الموصى بها من مسحوق الغسيل في حجيرة الغسل الأولي Ⓘ.

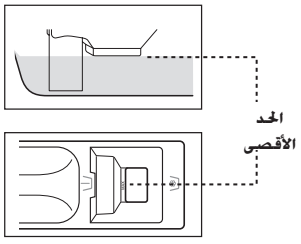

لا تستخدم أنواع المساحيق التالية عند غسل الملابس كبيرة الحجم.

- مساحيق الغسيل التي تكون على شكل ألواح أو أقراص
- المساحيق التي تكون على شكل كرة أو شبكة

يجب إذابة منعم الأقمشة المركز أو السميك بقليل من الماء قبل صبه في درج التوزيع (لمنع إعاقة تدفق الماء.)

تجنب عدم تدفق منعّم الأقمشة عند غلق درج المنظف بعد إضافة منعّم الأقمشة بداخل حجيرة مسحوق الشطف.

المنظف السائل (متوفر بطرازات محددة)

لاستخدام منظف سائل، قم بوضع درج المنظف السائل بداخل القسم الرئيسي للغسيل الخاص بقاعدة المنظف ثم قم بصب المنظف السائل بالدرج الخاص به.

- احذر تجاوز الملء عن الخط MAX (الحد الأقصى).
- في حالة استخدام مسحوق تنظيف، قم بإزالة درج المنظف السائل من قاعدة المنظف. لن يتم توزيع مسحوق التنظيف بواسطة درج المنظف السائل.
- قد يتبقى كمية من المنظف السائل بدرج المنظف بعد الانتهاء من الغسل.

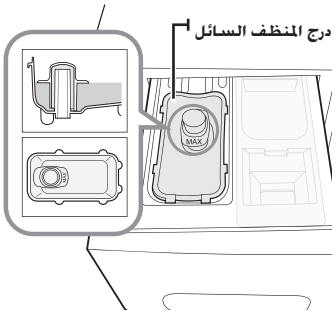

WD856U4SAGD-03223D-06_AR.indd 35 2015/6/1 12:05:58

تنظيف الغسالة وصيانتها

يؤدي حفظ الغسالة نظيفة على تحسين أدائها، وتجنب الإصلاحات غير الضرورية، وزيادة عمر الغسالة.

ECO DRUM CLEAN (تنظيف الحوض)

تعد هذه الدورة دورة تنظيف ذاتي يتم من خلالها إزالة الأتربة التي قد تعلق بالغسالة من الداخل.

١. اضغط على الزر **Power (الطاقة)**.

٢. قم بتدوير **Cycle Selector (قرص تحديد الدورة)** إلى ECO DRUM CLEAN (تنظيف الحوض).

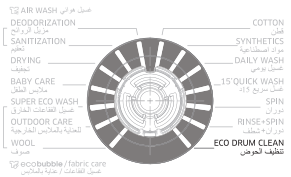

- يمكنك فقط استخدام الوظيفة Delay End (تأجيل التشغيل)
- يتم ضبط درجة حرارة المياه أثناء ECO DRUM CLEAN (تنظيف الحوض) إلى ٧٠ درجة مئوية.
- سيتم الضبط الأوتوماتيكي على برنامج الملابس القطنية عند مستوى ماء متوسط بدرجة حرارة ٣٠ مئوية عند وضع الملابس.

٣. ضع الكمية المناسبة من المنظف في حجيرة المسحوق Ⅱ وأغلق درج المسحوق (عند تنظيف الحاوية باستخدام سائل منظف).

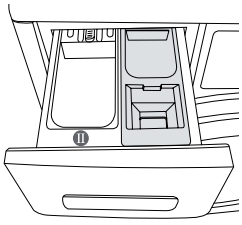

- تأكد من استخدام المنظف الموصى به لتنظيف الحاوية.
- يوجد نوعان من المنظفات: المسحوق والسائل. يتوفر المنظف السائل المستخدم فقط بدرج المنظف السائل (خيار).

٤. اضغط على الزر **Start/Pause (بدأ/أيقاف)**.

- تبدأ دورة ECO DRUM CLEAN (تنظيف الحوض) عند الضغط على الزر **Start/Pause (بدأ/أيقاف)**.

تنبيه

- يمكنك تنظيف الحاوية بدون استخدام منظف بواسطة الدورة ECO DRUM CLEAN (تنظيف الحوض).
- لا تستخدم الدورة ECO DRUM CLEAN (تنظيف الحوض) أبدًا عند وجود ملابس داخل الغسالة. قد يتسبب ذلك في تلف النسيج أو في حدوث مشكلة في الغسالة.
- **احذر استخدام المسحوق العادي بدورة ECO DRUM CLEAN (تنظيف الحوض).**
- **استخدم ١٠/١ فقط من كمية منظف الحاوية والموصى به من قبل الشركة المصنعة للمنظف.**
- تأكد من استخدام الأكسجين المبيض فقط، حيث إن استخدام الكلور المبيض قد يؤدي إلى تغيير اللون أو إزالته.
- المنظف المسحوق: استخدم [المنظف المبيض المسحوق] أو [المنظف المستخدم لتنظيف الحاوية فقط].
- المنظف السائل: استخدم [الأكسجين المبيض السائل] أو [المنظف المستخدم لتنظيف الحاوية فقط].

WD856U4SAGD-03223D-06_AR.indd 36 2015/6/1 12:06:01

وظيفة التنبيه الآلي لتنظيف الحاوية صديق البيئة

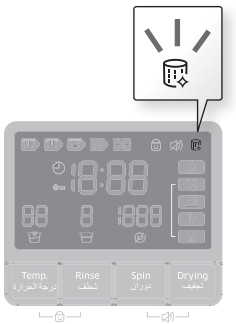

- إذا كان المؤشر "ECO DRUM CLEAN (تنظيف الحوض)" على لوحة العرض وكان المصباح الموجود على Cycle Selector (قرص تحديد الدورة) مضاءً، يشير ذلك إلى ضرورة تنظيف الحوض (الحاوية). في هذه الحالة، قم بإخراج الغسيل من الغسالة، ثم قم بتشغيلها، وتنظيف الحاوية باستخدام ECO DRUM CLEAN (تنظيف الحوض).
- إذا لم تقم بتشغيل ECO DRUM CLEAN (تنظيف الحوض)، يتم إيقاف تشغيل مؤشر "ECO DRUM CLEAN (تنظيف الحوض)" على لوحة العرض والمصباح الموجود على Cycle Selector (قرص تحديد الدورة). بالرغم من ذلك، يتم تشغيل مؤشر "ECO DRUM CLEAN (تنظيف الحوض)" على اللوحة والمصباح الموجود على Cycle Selector (قرص تحديد الدورة) مرة أخرى بعد دورتين من الغسيل. ومع ذلك، لا يؤدي الأمر إلى حدوث مشكلة في الغسالة.
- وعمومًا، فإن وظيفة التنبيه الآلي لتنظيف الحاوية صديق البيئة يظهر مرة في الشهر تقريبًا، قد يختلف تكرار التنبيه وفقًا لعدد مرات استخدام الغسالة.

لمزيد من الاحتياط، الرجاء أيضًا تنظيف مصفاة المخلفات (راجع القسم "تنظيف مصفاة المخلفات" بصفحة ٣٨). وإلا قد ينخفض الأداء الخاص بوظيفة الفقاعات.

تصريف الماء من الغسالة عند الطوارئ

١. افصل الغسالة من مصدر الطاقة.
٢. افتح غطاء المصفاة باستخدام عملة معدنية أو مفتاح.

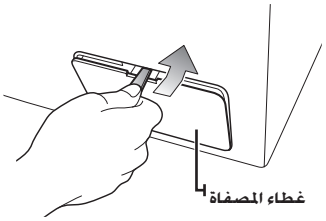

٣. قم بسحب أنبوب التصريف عند الطوارئ لتخليصه من خطاف التثبيت.

٤. أمسك الغطاء من نهاية أنبوب التصريف عند الطوارئ واجذبه ببطء مسافة حوالي ١٥ سم.
٥. اسمح بتدفق الماء بأكمله في وعاء.

قد تتبقى مياه بكمية أكثر مما تتوقع. قم بتحضير وعاء أكبر.

٦. قم بإعادة إدخال غطاء التصريف عند الطوارئ وأنبوبة التصريف.
٧. أعد غطاء المصفاة إلى مكانه.

WD856U4SAGD-03223D-06_AR.indd 37 2015/6/1 12:06:03

تنظيف الغسالة وصيانتها

تنظيف مصفاة المخلفات

توصي Samsung بتنظيف مصفاة المخلفات ٥ أو ٦ مرات في العام، أو عند عرض رسالة الخطأ "5E" (راجع "تصريف الغسالة عند الطوارئ" في القسم السابق).

إذا تم تراكم مواد خارجية بمصفاة المخلفات، يتم التقليل من أداء وظيفة الفقاعات.

تنبيه قبل البدء بتنظيف مصفاة المخلفات، تأكد من فصل سلك التيار الكهربائي.

١. قم بإزالة المياه المتبقية أولاً (راجع "تصريف الغسالة عند الطوارئ" بصفحة ٣٧).

إذا قمت بفصل المصفاة بدون تصريف المياه المتبقية، قد يتم رشح المياه المتبقية للخارج.

٢. افتح غطاء المصفاة باستخدام مفتاح أو قطعة معدنية.
٣. أرخ غطاء التصريف عند الطوارئ بلفه إلى اليسار لصرف الماء من الغسالة.
٤. أرخ غطاء مصفاة المخلفات.

٥. قم بغسل أية أوساخ أو أي مواد أخرى عالقة في مصفاة المخلفات. تأكد من أن مروحة مضخة التصريف الموجودة خلف مصفاة المخلفات غير مسدودة.
٦. ضع غطاء مصفاة المخلفات في مكانه.
٧. ضع غطاء المصفاة في مكانه

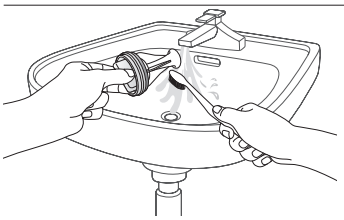

تنبيه لا تقم بفتح غطاء مصفاة المخلفات أثناء تشغيل الغسالة أو قد تتدفق المياه الساخنة للخارج.

- تأكد من استبدال غطاء المصفاة بعد تنظيف المصفاة. إذا كانت المصفاة بخارج الغسالة، قد يحدث خطأ بالغسالة أو يتم تسرب المياه.
- ينبغي تركيب المصفاة جيدًا بعد الانتهاء من تنظيفها.

تنظيف الأسطح الخارجية

١. امسح الأسطح الخارجية لجهاز الغسالة، بما في ذلك لوحة التحكم بقطعة من القماش الناعم ومسحوق تنظيف منزلي غير خادش.
٢. استخدم قطعة من القماش الناعم لتجفيف الأسطح الخارجية.
٣. لا تصب الماء على الغسالة.

WD856U4SAGD-03223D-06_AR.indd 38 2015/6/1 12:06:04

تنظيف درج مسحوق الغسيل والجزء الداخلي منه

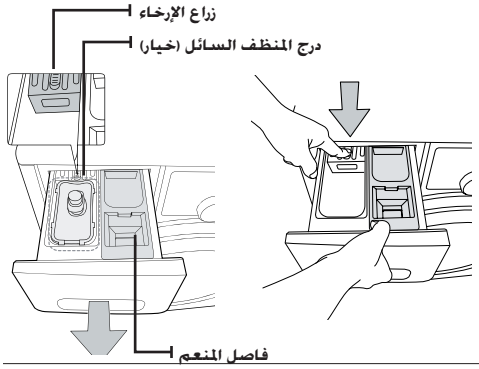

١. اضغط ذراع الإرخاء الموجودة في داخل درج مسحوق الغسيل واسحبه إلى الخارج.
٢. قم بإزالة الفاصل الخاص بالمنعم ودرج المنظف السائل (اختياري) من قاعدة المنظف.

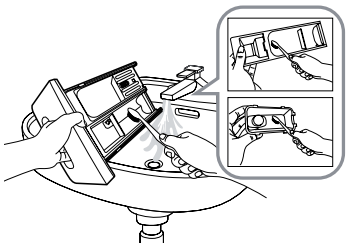

٣. اغسل كافة الأجزاء بالماء الجاري.

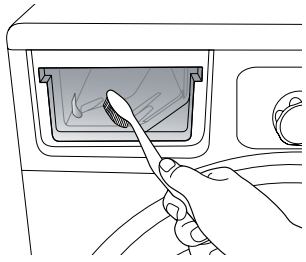

٤. نظف الجزء الداخلي للدرج باستخدام فرشاة أسنان قديمة.
٥. استبدل الفاصل الخاص بالمنعم ودرج المنظف السائل (اختياري) بدفعه بقوة داخل القاعدة.
٦. أعد الدرج إلى مكانه.
٧. قم بتشغيل دورة الشطف دون وجود أي غسيل في الحاوية لإزالة أي مسحوق متبقي.

تنظيف المصفاة الشبكية المتصلة بخرطوم الماء

يجب عليك تنظيف المصفاة الشبكية المتصلة بخرطوم الماء مرة كل عام على الأقل. أو عند ظهور رسالة الخطأ "4E":

١. قم بإيقاف تشغيل مصدر توريد الماء إلى الغسالة.
٢. افصل الخرطوم عن الجانب الخلفي من الغسالة. قم بتغطية الخرطوم بقطعة من القماش، لمنع تدفق الماء بسبب الضغط العالي في الخرطوم.
٣. باستخدام الزردية، اسحب المصفاة الشبكية إلى الخارج من طرف الخرطوم بلطف واشطفها بالماء حتى تصبح نظيفة. نظف كذلك الجزأين الداخلي والخارجي للوصلة الملفوفة.
٤. أعد المصفاة إلى مكانها.
٥. ثبت الخرطوم في الغسالة مرة أخرى.
٦. تأكد أن الوصلات محكمة ضد الماء وقم بتشغيل الصنبور.

WD856U4SAGD-03223D-06_AR.indd 39 2015/6/1 12:06:04

تنظيف الغسالة وصيانتها

إصلاح جهاز غسالة متجمد

إذا انخفضت درجة الحرارة إلى أقل من درجة التجمد وتجمدت الغسالة:

١. افصل الغسالة من مصدر التيار الكهربائي.
٢. صب الماء الدافئ على صنبور الماء لإرخاء خرطوم توريد الماء.
٣. قم بإزالة خرطوم توريد الماء وانقعه في الماء الدافئ.
٤. صب الماء الدافئ في حاوية الغسالة واتركه لمدة ١٠ دقائق.
٥. أعد توصيل خرطوم توريد الماء إلى صنبور الماء وتأكد من أن توريد الماء والتصريف يتم كما ينبغي.

تخزين الغسالة

إذا كنت بحاجة إلى تخزين الغسالة لمدة طويلة، فمن المستحسن تصريف الماء منها وفصلها. حيث يمكن أن تتلف الغسالة في حالة ترك ماء في الخراطيم والمكونات الداخلية قبل التخزين.

١. حدد دورة **COTTON (قطن)** ثم قم بإضافة مادة تبييض في الحجيرة الخاصة بها. ثم قم بدفع الزر **Quick Wash (الغسيل السريع)** وقم بتشغيل الغسالة من خلال الدورة بدون تعبئة.
٢. قم بإيقاف صنابير الماء وافصل خراطيم صنابير الماء.
٣. قم بفصل الغسالة عن منفذ التيار الكهربائي، واترك باب الغسالة مفتوحًا للسماح بدخول الهواء داخل الحاوية.

في حالة قيامك بتخزين الغسالة في درجات حرارة تحت التجمد، اجعل هناك فرصة لخروج الماء المتبقي في الغسالة قبل استخدامها مرة أخرى.

WD856U4SAGD-03223D-06_AR.indd 40 2015/6/1 12:06:04

استكشاف المشاكل وإصلاحها ورموز المعلومات

تحقق مما يلي إذا كانت الغسالة...

المشكلة	الحل
لن تعمل	• تأكد من توصيل قابس الغسالة بمصدر التيار الكهربائي. • تأكد من إغلاق الباب بإحكام. • تأكد من فتح مصدر صنابير الماء. • تأكد من الضغط على الزر Start/Pause (بدأ/أيقاف).
عدم وجود ماء أو عدم وجود ماء كافٍ	• افتح الصنبور تماماً. • تأكد من أن خرطوم توريد الماء غير متجمد. • فك ثنيات خراطيم توريد الماء. • نظف المصفاة الموجودة على الخرطوم الخاص بمدخل الماء.
هل يوجد مسحوق غسيل في الدرج بعد اكتمال دورة الغسيل	• تأكد من تشغيل الغسالة بضغط ماء كاف. • تأكد من إضافة مسحوق الغسيل في منتصف درج المسحوق.
تهتز الغسالة أو تحدث صوتاً مرتفعاً	• تأكد من تركيب الغسالة على سطح مستو. إذا كانت الأرض غير مستوية، اضبط قدم الغسالة حتى تستوي على الأرضية. • تأكد من إزالة مسامير الشحن. • تأكد من عدم ملامسة الغسالة لأي شيء آخر. • تأكد من توزيع وزن الملابس الموجودة في الغسالة.
لا يتم تصريف الماء من الغسالة و/أو لا تقم بعملية التنشيف	• فك الثنيات الموجودة في خرطوم التصريف. قلل من استخدام الخراطيم الملتوية. • تأكد من أن المصفاة الشبكية المتصلة بخرطوم الماء غير مسدودة.
الباب مغلق ولا يمكن فتحه	• لا يمكن فتح الباب حتى تمر ٣ دقائق على توقف الجهاز عن العمل أو فصل التيار الكهربي.

في حالة استمرار المشكلة، اتصل بمركز خدمة عملاء Samsung المحلي.

WD856U4SAGD-03223D-06_AR.indd 41 2015/6/1 12:06:04

استكشاف المشاكل وإصلاحها ورموز المعلومات

رموز المعلومات

في حالة تعرض الغسالة للعطل، قد يظهر أحد رموز المعلومات على لوحة العرض. في حالة حدوث ذلك، الرجاء التحقق من هذا الجدول وتجربة الحلول المقترحة قبل الاتصال بخدمة العملاء.

رمز الكود	الحل
dE	• تأكد من إغلاق الباب بإحكام. • تأكد من أن الملابس غير عالقة بالباب.
4E	• تأكد أن صنبور توريد الماء مفتوح. • تأكد من ضغط الماء. • قم بتنظيف المصفاة الشبكية المتصلة بخرطوم الماء. عند ظهور الكود "4E" على شاشة عرض الغسالة، فإن ذلك يعني أن الغسالة ستقوم بعملية الصرف لمدة ٣ دقائق. يُرجى العلم أن زر التشغيل لا يستجيب للضغط عليه خلال هذه الفترة.
5E	• نظف مصفاة المُخلفات. • تأكد من تركيب خرطوم تصريف الماء بطريقة صحيحة. • قم بتنظيف المصفاة الشبكية المتصلة بخرطوم الماء.
UE	• وزن الملابس غير موزّع. قم بإعادة توزيع الملابس. وفي حالة غسيل قطعة واحدة من الملابس، مثل برنس حمام أو جينز، قد لا تكون نتيجة التنشيف النهائي مرضية، وتظهر رسالة خطأ "UE" في إطار العرض.
cE/3E	• اتصل بخدمة ما بعد البيع.
HOT	• سوف تظهر عندما تكون درجة الحرارة الداخلية في الحاوية مرتفعة. ستعمل المروحة تلقائيًا. لذا يُرجى الانتظار حتى تختفي علامة "Hot".
Sud/Sd	• تحدث هذه الحالة عند استشعار كمية كبيرة من الرغوة. ويتم كذلك عرضها عند التخلص من الرغوة. عند الانتهاء من عملية الإزالة، تتم متابعة الدورة الطبيعية (ويعد ذلك إحدى العمليات الطبيعية. هذا الخطأ يهدف إلى الحماية ضد العيوب غير القابلة للكشف عنها.)
Uc	• إذا كانت فلطية الطاقة المزودة غير مستقرة، فقد تتوقف الغسالة عن العمل مؤقتاً لحماية أجهزتها الكهربائية. • إذا كان يتم إمداد الفلطية الصحيحة للغسالة، فستعاود الدورة العمل أوتوماتيكياً.

بالنسبة للرموز التي لم تذكر أعلاه، أو في حالة عدم مساهمة الحل المقترح في حل المشكلة، اتصل بمركز خدمة Samsung أو الموزع المحلي المعتمد التابع لـ Samsung.

WD856U4SAGD-03223D-06_AR.indd 42 2015/6/1 12:06:04

جدول الدورات

جدول الدورات

(● خيار المستخدم)

البرنامج	أقصى وزن (كجم)	مسحوق الغسيل			الحد الأقصى لدرجة الحرارة (مئوية)	سرعة التنشيف (الحد الأقصى) دورة/دقيقة
	WD856	قبل الغسل	غسل	منعم الأقمشة		WD856U4
COTTON (قطن)	٨.٥	●	نعم	●	٩٥	١٤٠٠
SYNTHETICS (مواد اصطناعية)	٣.٥	●	نعم	●	٦٠	١٢٠٠
DAILY WASH (غسيل يومي)	٤.٠	●	نعم	●	٦٠	١٤٠٠
QUICK WASH 15' (غسل سريع 15د)	٢.٠	-	نعم	●	٤٠	٨٠٠
ECO DRUM CLEAN (تنظيف الحوض)	-	-	-	-	٧٠	٤٠٠
BABY CARE (ملابس الطفل)	٤.٠	●	نعم	●	٩٥	١٤٠٠
SUPER ECO WASH (غسيل الفقاعات الخارق)	٤.٠	●	نعم	●	٤٠	١٢٠٠
OUTDOOR CARE (للعناية بالملابس الخارجية)	٢.٠	-	نعم	-	٤٠	١٢٠٠
WOOL (صوف)	٢.٠	-	نعم	-	٤٠	٨٠٠

البرنامج	Eco Bubble (غسيل الفقاعات)	غسل كثيف	Delay End (تأجيل التشغيل)	Drying (تجفيف)
COTTON (قطن)	●	●	●	●
SYNTHETICS (مواد اصطناعية)	●	●	●	●
DAILY WASH (غسيل يومي)	●	●	●	●
QUICK WASH 15' (غسل سريع 15د)	●	-	●	●
ECO DRUM CLEAN (تنظيف الحوض)	-	-	●	-
BABY CARE (ملابس الطفل)	●	●	●	●
SUPER ECO WASH (غسيل الفقاعات الخارق)	●	●	●	●
OUTDOOR CARE (للعناية بالملابس الخارجية)	●	-	●	●
WOOL (صوف)	●	-	●	-

١. تستغرق دورة الغسل الأولي مدة أطول بحوالي ١٨ دقيقة.
٢. تم قياس بيانات مدد الدورات وفقاً للشروط المنصوص عليها في مقياس IEC 60456 / EN 60456.
٣. تتوافق البرامج COTTON (قطن) عند درجة حرارة ٤٠ مئوية + Intensive (غسل كثيف) مع المعيار EN60456.
٤. قد تختلف مدة الدورة في كل منزل عن القيم المبينة في الجدول بسبب الاختلاف في ضغط الماء ودرجة الحرارة الخاصة بتوريد الماء وكمية الغسيل ونوعه.
٥. عند تحديد وظيفة Intensive Wash (غسل كثيف)، يتم زيادة مدة الدورة لكل الدورات.
٦. تم تحديد مواصفات ملصق الطاقة باستخدام البرنامج الآتي وفقًا للمعيارين SASO 2692 و SASO 2693.
- البرنامج هو COTTON (قطن) ٤٠ مئوية +Eco bubble + Intensive(غسل كثيف) شطف٢ تنشيف ١٤٠٠دورة في الدقيقة.

WD856U4SAGD-03223D-06_AR.indd 43 2015/6/1 12:06:04

الملحق

جدول العناية بالأقمشة

توضح الرموز التالية تعليمات العناية بالملابس. تتضمن بطاقات العناية أربعة رموز على النحو التالي: غسيل وتبييض وتجفيف وكي (وتنظيف جاف إذا لزم الأمر). يضمن استخدام هذه الرموز التناسق بين الشركات المصنعة للملابس المحلية والمستوردة. اتبع تعليمات بطاقة العناية لزيادة عمر الملابس وتقليل مشاكل الغسيل.

	مواد مقاومة		يمكن الكي عند ١٠٠°م بحد أقصى
	ملابس رقيقة		يحظر الكي
	يمكن الغسل عند ٩٥°م		يمكن استخدام التنظيف الجاف باستخدام أي مواد مذيبة
	يمكن الغسل عند ٦٠°م		التنظيف الجاف بالبروكلوريد أو الوقود المخفف أو الكحول النقي أو R١١٣ فقط
	يمكن الغسل عند ٤٠°م		التنظيف الجاف بوقود الطائرات أو الكحول النقي أو R١١٣ فقط
	يمكن الغسل عند ٣٠°م		يحظر استخدام التنظيف الجاف
	مكن غسلها باليد		تجفف وهي مفرودة
	تنظيف جاف فقط		يمكن نشرها لتجف
	يمكن استخدام مادة تبييض مع الماء البارد		تجفيف الملابس وهي معلقة على حمالة
	يحظر استخدام مادة تبييض		تجفيف بالتدوير، حرارة عادية
	يمكن الكي عند ٢٠٠°م بحد أقصى		تجفيف بالتدوير، حرارة خفيفة
	يمكن الكي عند ١٥٠°م بحد أقصى		يحظر تجفيفها بالتدوير

حماية البيئة

- هذا الجهاز مصنوع من مواد قابلة لإعادة التدوير. إذا قررت التخلص من هذا الجهاز، يرجى مراعاة القوانين المحلية الخاصة بالتخلص من النفايات. اقطع سلك التيار بحيث لا يمكن توصيل الجهاز بمصدر طاقة. قم بإزالة الباب لمنع تعرض الحيوانات أو الأطفال الصغار للاحتباس داخل الجهاز.
- لا تضع مسحوق غسيل أكثر من الكمية المبينة في إرشادات الشركة المصنعة لمسحوق الغسيل.
- استخدم مواد إزالة البقع ومواد التبييض قبل دورة الغسيل عند الحاجة فقط.
- وفر الماء والكهرباء من خلال إجراء الغسيل بأوزان كاملة (تختلف الكمية وفقاً للبرنامج المستخدم).

WD856U4SAGD-03223D-06_AR.indd 44 2015/6/1 12:06:06

المواصفات

اسم الجهة المصنعة و/ أو العلامة التجارية		SAMSUNG
بلد المنشأ		صنع في الصين
رقم النوع		WD856U4SA**
نوع من الغسالات		غسالة كهربية أوتوماتيكية
نظام الغسيل		غسالة الملابس ذات الأسطوانة
فرق الجهد الكهربي المسموح (الفولت)		٢٣٠فولت-
التردد المسموح به (هرتز)		٦٠ هرتز
قدرة الدخل المسموح بها (واط أو كيلو واط)	قدرة الدخل المسموح بها	٢١٠٠ وات
	جهاز تدفئة المياه	٢٠٠٠ وات
	المحرك الرئيسي	٤٥٠ وات
	محرك المضخة	٣٥ وات
	محرك الدوران	٣٥ وات
	إدخال طاقة (دورة تجفيف)	١٧٥٠ وات
	سخان (دورة تجفيف)	١٦٠٠ وات
	موتور المروحة (دورة تجفيف)	٢٨ وات
سعة الغسالة القياسية (المصنفة) (كجم)		٨,٥ كجم
الحد الأقصى من الكيلوجرامات في دورة التجفيف (كجم)		٦,٠ كجم
الكمية القياسية المياه المستخدمة (لتر)		٧٥ لتر
فئة الغسالة		الفئة ا
رقم IP		IPX٤
أقصى ضغط مسموح به للمياه الداخلة إلى الغسالة		٨٠٠ كيلوباسكال
أقل ضغط مسموح به للمياه الداخلة إلى الغسالة		٥٠ كيلوباسكال
كمية الماء		٦٢ لتر
الأبعاد		العرض ٦٠٠ م × العمق ٦٥٠ م × الارتفاع ٨٥٠ م
الوزن الصافي		٦٩ كجم
دورات التنشيف		١٤٠٠ دورة في الدقيقة

- يُمنع تثبيت الغسالة على سطح رطب.
- يتيعن إيقاف تشغيل العصارة في حالة عدم الاستخدم.
- يُحظر السماح للأطفال بتشغيل الغسالة.
- قد يتعرض شكل المنتج ومواصفاته للتغيير دون إخطار مسبق لأغراض تحسين المنتج.
- يجب عدم وضع اليدين في أنبوب صرف الماء.
- إذا كان من الممكن فتح غطاء الغسالة أثناء تصريف المياه أو كانت تستغرق ١٥ ثانية أو يزيد للإيقاف الكلي لصرف المياه من حجرة التصريف فإن يُجب التعامل مع الأمر على أنه مشكلة بالغسالة.

WD856U4SAGD-03223D-06_AR.indd 45 2015/6/1 12:06:06

مذكـرة

مذكرة

هل لديك أسئلة أو تعليقات؟

البلد	اتصل بـ	أو قم بزيارة موقعنا على الإنترنت على
SAUDI ARABIA	8002474357	www.samsung.com/sa/support www.samsung.com/sa_en/support (English)

كود رقم. DC68-03223D-06_AR

WD856U4SAGD-03223D-06_AR.indd 48 2015/6/1 12:06:06